PIONEER
The Art of Entertainment

PION-04257

Service Manual

ORDER NO.
CRT1644

HIGH POWER CD PLAYER WITH FM/MW/LW TUNER

DEH-415 EW,X1B/EW
DEH-415SDK GR

● **This additional service manual is designed to be used together with Model DEH-405/EW,DEH-405/X1B/EW and DEH-405SDK/GR Service Manual CRT1563. Refer to it for finding parts numbers and adjustment ,etc. which are not shown in this manual.**

EXPLODED VIEW PARTS LIST

● **Parts List (Page 1-38)**

Mark	No.	Description	DEH-405/EW Part No.	DEH-415/EW Part No.	DEH-415/X1B/EW Parts No.
	45	Detach Grille Assy	CXA5867	CXA7665	CXA7665
	51	Button	CAC3742	CAC4312	CAC4312
	54	Grille	CNS2837	CNS3438	CNS3438

Mark	No.	Description	DEH-405SDK/GR Part No.	DEH-415SDK/GR Part No.
	21	Chassis Unit	CXA5935	CXA6983
	45	Detach Grille Assy	CXA5865	CXA7667
	51	Button	CAC3742	CAC4312
	54	Grille	CNS2835	CNS3437

PIONEER ELECTRONIC CORPORATION 4-1,Meguro 1-Chome,Meguro-ku, Tokyo 153,Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760,Long Beach,California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham,Ontario L3R OP2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1,9120 Melsele,Belgium
PIONEER ELECTRONICS AUSTRALIA PTY.LTD. 178-184 Boundary Road,Braeside,Victoria 3195,Australia TEL:[03]580-9911
© **PIONEER ELECTRONIC CORPORATION 1994**
K-ZFP.OCT.1994

PACKING METHOD

● **Parts List (Page 2-2)**

*:Non spare part

Mark	No.	Description	DEH-405/EW Part No.	DEH-415/EW Part No.	DEH-415/X1B/EW Parts No.
	1-1	Owner's Manual	CRD1720	CRD1839	URD1839
	1-3	Installation Manual	CRD1719	CRD1838	URD1838
	2	Carton	CHG2419	CHG2608	UHG2608
	5	Protector	CHP1603	CHP1603	UHP-009
	6	Protector	CHP1602	CHP1602	
	7	Cover	CEG1092	CEG1092	·····
	9	Contain Box	CHL2419	CHL2608	UHD-002
*		Warranty Card	CRY1071	CRY1071	·····
		Polyethylene Bag	·····	·····	UEG-002
*		Card	·····	·····	URY-001

Mark	No.	Description	DEH-405SDK/GR Part No.	DEH-415SDK/GR Part No.
	1-1	Owner's Manual	CRD1723	CRD1843
	1-3	Installation Manual	CRD1719	CRD1838
	2	Carton	CHG2420	CHG2609
	9	Contain Box	CHL2420	CHL2609

Printed by: Schaltungsdienst Lange, Berlin (GERMANY)

PIONEER
The Art of Entertainment

Service Manual

● DEH-605RDS

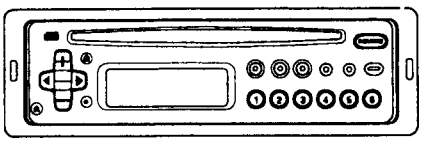

ORDER NO.
CRT1563

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

HIGH POWER CD PLAYER WITH RDS TUNER

DEH-605RDS EW,X1B/EW

HIGH POWER CD PLAYER WITH FM/MW/LW TUNER

DEH-505SDK GR

DEH-505 EW,X1B/EW

DEH-405SDK GR

DEH-405 EW,X1B/EW

● **See the service manual CX-540(CRT1574) for the CD mechanism description, disassembly and circuit description.**

● **The CD mechanism employed in this model is one of CX-540 series.**

CONTENTS

CHAPTER 1

1. SPECIFICATIONS 1-3
2. OPERATION AND CONNECTION 1-3
3. DISASSEMBLY 1-10
4. ADJUSTMENT 1-23
5. ERROR NUMBERS AND NEW TEST MODE 1-35
6. EXPLODED VIEW PARTS LIST 1-38
7. ELECTRICAL PARTS LIST 1-41

CHAPTER 2

1. PACKING METHOD 2-2
2. BLOCK DIAGRAM 2-7
3. EXPLODED VIEW 2-9
4. CIRCUIT DIAGRAM AND PATTERN

4.1 TUNER AMP UNIT(DEH-605RDS) 2-13
4.2 TUNER AMP UNIT(DEH-505SDK,405SDK) 2-18
4.3 TUNER AMP UNIT(DEH-505,405) 2-23
4.4 CD MECHANISM MODULE 2-28
4.5 FM/AM TUNER UNIT 2-37
4.6 KEY BOARD UNIT(DEH-605RDS) 2-41
4.7 KEY BOARD UNIT(DEH-505SDK,505,405SDK,405) 2-43

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY.LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL:[03]580-9911

© PIONEER ELECTRONIC CORPORATION 1994

K-FFK. JAN. 1994 Printed in Japan

CHAPTER 1

● **CD Player Service Precautions**

1. For pickup unit(CGY1031) handling,please refer to"Disassembly"(CX-540 Service Manual CRT1574). During replacement,handling precautions shall be taken to prevent an electrostatic discharge(protection by a short pin).
2. During disassembly,be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.

SAFETY INFORMATION

1. Safety Precautions for those who Service this Unit.

- **Follow the adjustment steps (see pages 1-26 through 1-32)in the service manual when servicing this unit. When checking or adjusting the emitting power of the laser diode exercise caution in order to get safe, reliable results.**

Caution:

1. During repair or tests, minimum distance of 13cm from the focus lens must be kept.
2. During repair or tests, do not view laser beam for 10 seconds or longer.

2. A "CLASS 1 LASER PRODUCT" label is affixed to the rear of the player.

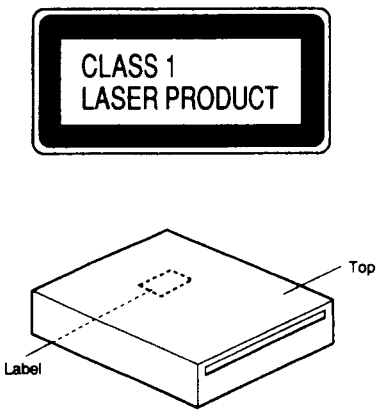

3. The triangular label is attached to the mechanism unit frame.

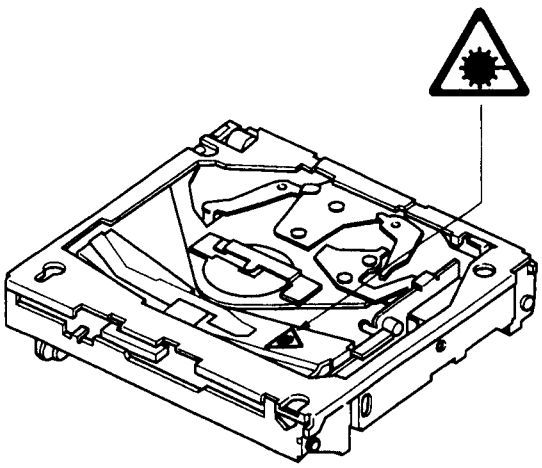

4. Specifications of Laser Diode

Specifications of laser radiation fields to which human access is possible during service.
Wavelength = 785 nanometers
Radiant power = 69.7 microwatts(Through a circular aperture stop having a diameter of 80 millimeters)
0.55 microwatts(Through a circular aperture stop having a diameter of 7 millimeters)

1. SPECIFICATIONS

General

Power source ..... 14.4 V DC (10.8 — 15.6 V allowable)
Grounding system ..... Negative type
Max. current consumption ..... 6 A
Dimensions (chassis) ..... 178 (W) × 50 (H) × 150 (D) mm
(front face) ..... 188 (W) × 58 (H) × 20 (D) mm
Weight ..... 1.5 kg

Amplifier

Max. power output ..... 22 W × 4 (EIAJ)
Continuous power output ..... 14 W × 4
(DIN 45324, +B=14.4 V)
Load impedance ..... 4Ω (4 — 8Ω allowable)
Preout output level/
output impedance ..... 500 mV/1 kΩ
Tone controls (bass) ..... ±10 dB (100 Hz)
(treble) ..... ±10 dB (10 kHz)
Loudness contour ..... +10 dB (100 Hz), +7 dB (10 kHz)
(volume: –30 dB)

CD player

System ..... Compact disc audio system
Usable discs ..... Compact disc
Signal format ..... Sampling frequency: 44.1 kHz
Number of quantization bits: 16; linear
Frequency characteristics ..... 5 — 20,000 Hz (±1 dB)
Signal-to-noise ratio ..... 94 dB (1 kHz) (IEC-A network)
Dynamic range ..... 90 dB (1 kHz)
Number of channels ..... 2 (stereo)

FM tuner

Frequency range ..... 87.5 — 108 MHz
Usable sensitivity ..... 11 dBf (1.0μV/75Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity ..... 16 dBf (1.7μV/75Ω, mono)
Signal-to-noise ratio ..... 70 dB (IEC-A network)
Distortion ..... 0.3% (at 65 dBf, 1 kHz, stereo)
Frequency response ..... 30 — 15,000 Hz (±3 dB)
Stereo separation ..... 40 dB (at 65 dBf, 1 kHz)

MW tuner

Frequency range ..... 531 — 1,602 kHz
Usable sensitivity ..... 18μV (25 dB) (S/N: 20 dB)
Selectivity ..... 50 dB (±9 kHz)

LW tuner

Frequency range ..... 153 — 281 kHz
Usable sensitivity ..... 30μV (30 dB) (S/N: 20 dB)
Selectivity ..... 50 dB (±9 kHz)

Note:

Specifications and the design are subject to possible modification without notice due to improvements.

2. OPERATION AND CONNECTION

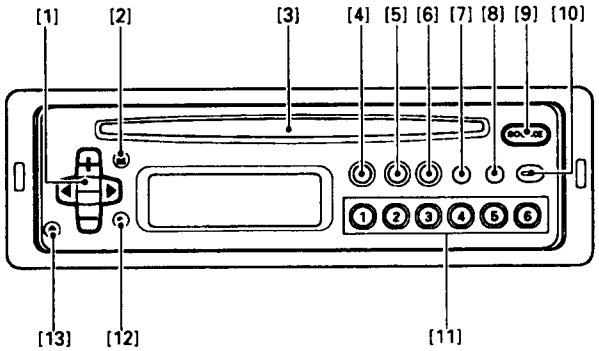

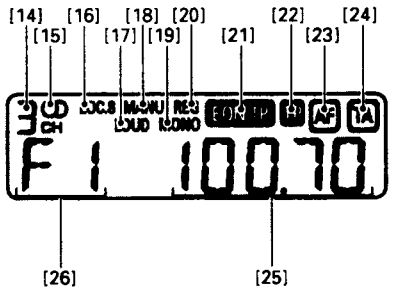

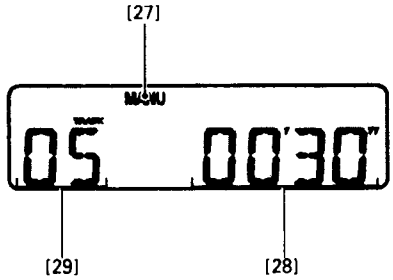

Changing the Source

Parts Identification
[9] Source

Changing the Source

Each time the button [9] is pressed, the source will change in the following sequence:
Built-in CD player → Tuner → OFF
- If there is no disc in the built-in CD player, the source will not change to "built-in CD player".

Adjusting the Audio

Parts Identification
[1] Volume/Audio adjustment
[12] Shift
[17] Loudness

Mode Selection

Each press of button [12] changes the mode as follows:
Volume adjustment (VOL) → Balance adjustment (FAD/BAL) → Tone adjustment (BAS/TRE) → Loudness adjustment (LOUD)
- When you're adjusting fader, balance, bass or treble, the indicator will stop at the center setting. About 8 seconds after adjustment, the display returns to its previous state.

Volume Adjustment
Pressing the (+) side of button [1] increases the volume, while the (–) side decreases it.
(Display shows "VOL 00" ~ "VOL 30".)
- When driving your vehicle, be sure to keep the volume of the unit set low enough to allow you to hear sounds coming from outside.

Balance Adjustment
Press button [12] to select balance adjustment mode. ("FAD" appears on the display.) Adjust the fader using the (+) or (–) side of button [1]. To adjust the balance, press either the (◄) or (►) side of button [1] to turn on BAL.

Fader
Press the (+) side of button [1] to raise the volume of the front speaker only. Press the (–) side of the button to raise the volume of the rear speaker only.
(Display shows "FAD F9" ~ "FAD R9".)
- Please set "FAD 0" when using 2 speaker system.

Balance
Pressing the (◄) side of button [1] shifts the balance to the left speaker, while the (►) side shifts it to the right speaker.
(Display shows "BAL L9" ~ "BAL R9".)

Tone Adjustment
Press button [12] to select tone adjustment mode. ("BAS" appears.) Select the tone you wish to adjust using the (◄) or (►) side of button [1]. Each press of the (►) side changes the tone from BAS → TRE, while each press of the (◄) side changes the tone from TRE → BAS.

Bass Adjustment
Select the Bass mode.
Pressing the (+) side of button [1] increases bass, while the (–) side decreases bass.
(Display shows "BAS –6" ~ "BAS +6".)

Treble Adjustment
Select Treble adjustment mode.
Pressing the (+) side of button [1] increases treble, while the (–) side decreases treble.
(Display shows "TRE –6" ~ "TRE +6".)

Loudness Adjustment
This "loudness" function enhances both the high and low ranges of sound to give even more power to output even at low volume.
Press button [12] to select loudness adjustment mode. (The "LOUD" indicator appears on the display.)
Pressing the (►) side of button [1] turns the loudness function on (LOUD [17] light up), pressing the (◄) side turns it off.

Using the Tuner

Parts Identification

[1] Tuning
Seek/Manual
Local Seek Sensitivity
[4] Local mode
[5] BSM/Preset Scan
[6] FM Monaural
[7] AF/REG
[8] TA/EON
[9] Source
[10] Band
[11] Preset
[14] Preset Number
[15] FM Stereo
[16] Local mode
[18] Manual
[19] FM Monaural
[20] REG
[21] EON
[22] TP
[23] AF
[24] TA
[25] Frequency
[26] Band

Electronic Tuner
Frequency allocation differs depending upon the area. This unit has been designed in accordance with the frequency allocations for Western Europe, Asia, the Middle and Near East, Africa, Australia and Oceania. Use in other areas may result in improer reception of AM. The RDS function does not work in regions with no RDS broadcast services.

Listening to the Radio

1.Set the source to "tuner" by pressing button [9].
- For details, refer to "Changing the Source" on page 1-4.

2.Select the band by pressing button [10]. Each time the button is pressed, the band will change in the following sequence:
FM1 → FM2 → FM3 → MW/LW
- MW and LW are combined in one band.

3.Use seek tuning or manual tuning to tune to a radio station.

3-1. Set the tuning mode to "seek" or "manual" by pressing the (◄) and (►) sides of button [1] simultaneously. Repeat this operation to switch to the other tuning mode. (When the manual tuning mode is set, "MANU" [18] will be displayed.)

3-2. Tune by Press (◄) or (►) of button [1]. (When there is a stereo broadcast, "⊙" [15] will be displayed.)

Seek Tuning:
When the button is pressed, stations whose signal strength is above a certain level will be tuned automatically.

Manual Tuning:
When the button is pressed, the frequency will change by one step up or down.

Using the Preset Memory

The radio stations can be stored in memory under buttons 1 to 6 of [11].

1.Tune in to the station to be stored in memory.

2.Store the station in memory by pressing one of the buttons (1 to 6) for at least 2 seconds. When the [14] number stops blinking, the station will be stored in memory under the button pressed.
- Up to 18 FM stations and 6 MW/LW stations can be stored in memory.

Preset Tuning

The radio stations stored in memory can be recalled by pressing the respective button 1 to 6 of [11]. The station stored under that button will be recalled. (The number of the button pressed will be displayed at [14].)

Using the Best Stations Memory (BSM)

The radio stations having a strong signal can be tuned automatically and stored in memory under buttons 1 to 6 [11]. Press button [5] for at least 2 seconds. (The "BSM" will blink.) After "BSM" stops blinking, the stations will be stored in memory under buttons 1 to 6 of [11].
- BSM can be canceled mid-operation by pressing button [5].
- The stations will be stored under buttons 1 to 6 in the order of their signal strength. The strongest station will be stored under button 1, followed by stations with lower signal strengths.
- If there are fewer than 6 stations whose signal is strong, there will be spare memory.
- It will take almost 30 seconds for BSM to be completed.

Preset Scan Tuning

This recalls in sequence all the stations stored in memory under the buttons [11] for 8 seconds each. Press button [5]. (The [14] number will blink.) To cancel, press the button again. After the desired station is tuned, cancel the preset scan tuning. The station will then continue to be received.
- Stations stored in memory under the buttons [11] but whose signal is weak will not be recalled.

Local Seek Tuning

When the local mode is set, the seek tuning's sensitivity level will become high and only stations with a strong signal will be seek tuned. The local mode's seek sensitivity can be adjusted.

Setting the Local Mode
Press button [4]. (The "LOC.S" [16] will light.) To cancel the local mode, press the button again.

Adjusting the Local Seek Sensitivity

There are 4 local seek sensitivity steps for FM and 2 steps for MW/LW.

- LOC-4 is the highest seek tuning sensitivity level. Only the stations with a strong signal are tuned. LOC-3, LOC-2, and LOC-1 in descending order enables the tuning of stations with a respectively weaker signal.

1. Set to local seek sensitivity adjustment mode. Press button [4] for at least 2 seconds. (The current sensitivity level "LOC-2" will be displayed.)
   - The local seek sensitivity adjustment mode will be canceled after about 5 seconds.
2. Adjust the sensitivity level by pressing (◀) or (▶) of button [1].

FM Monaural Reception

If a stereo broadcast has a lot of noise, switching to the monaural reception mode will reduce the noise. Press button [6]. ("MONO" [19] will appear on the display.) To cancel, press the button again.

Playing Compact Discs

Parts Identification

[1] Track Number Search
Fast Forward and Reverse
[2] Eject
[3] Disc Insertion Slot
[9] Source
[11] ① Pause
② Repeat
③ Random play
[27] Manual
[28] Playback time
[29] Track number

Discs

- Only use compact discs (optical digital audio discs) bearing the mark shown below.

- Do not use cracked, scratched, or warped discs.
- Do not touch the disc's playing side. Handle the disc as shown below.

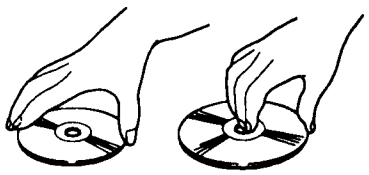

- Do not affix any label on the disc.
- Do not apply any vinyl record spray, anti-static agent, benzene, paint thinner, or any other volatile chemicals.

- Do not play a dirty disc. Use a soft cloth to clean a dirty disc as shown below. Wipe the disc outward from the center.

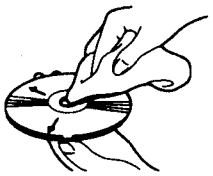

- Do not place the disc in high temperatures and direct sunlight.
- Be sure to store the disc in its case.

CD Playing Environment

- Disc playback may be interrupted by sudden road shock.
- When the air temperature is low and the car heater is turned on, condensation on the disc and internal parts of the unit may prevent proper playback operation. If this happens, turn off the unit and wait one hour until the condensation is gone. Also, use a soft cloth to wipe off any condensation from the disc.

Listening to the CD Player

1. With the label side up, insert a disc into [3]. Playback will start. (The track number [29] and playback time [28] will be displayed.)
   - Do not insert the disc with the label side down. Doing so may scratch the disc.
   - If the disc stops midway while it is being inserted or if there is no playback after a disc is inserted, something may be wrong with the disc. Eject the disc and check it.
2. Turn ON/OFF the disc playback. Press button [9] to change the source.
   - For details, refer to "Changing the Source".
3. Eject the disc by pressing button [2].
   - Do not leave the disc halfway into the unit as shown below. Doing so may cause the disc to be bent or dropped.

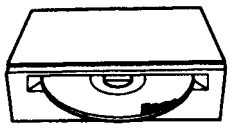

Using Track Number Search, Fast Forward and Reverse

1. Set the mode to "track number search" or "fast forward and reverse".
   Press the (◄) and (►) sides of button [1] simultaneously. Each time this is repeated, the mode will switch between the track number search mode and fast forward and reverse mode. (When the fast forward and reverse mode is set, "MANU" [27] will light.)
2. Execute a track number search or fast forward and reverse by pressing (◄) and (►) of button [1].

- Playback sound can be heard during fast forward and reverse.

Pausing

The disc playback can be stopped temporarily by pressing ① of button [11]. (The "PAUSE" will be displayed.) To cancel the pause, press the button again.

Repeat

1. To repeat the music you are listening to, press button ② of [11] ("RPT" will appear on the display).
2. To cancel music repeat, press button ② of [11] to turn off "RPT".

Random Play

1. To play music randomly, press button ③ of [11] ("RDM" will appear on the display). Once the current track has been played, the microprocessor will randomly select the next and subsequent tracks.
2. To cancel random play, press button ③ of [11] to turn off "RDM".

- Since selections are played in random order, the same selection may be played twice in succession.

Error Display

If there is a problem with CD playback, an error code will be displayed.
(Ex.: "ERROR-10")
If an error is displayed, refer to the table below to identify the problem. If the error is displayed even after corrective action is taken, contact your dealer or the nearest authorized PIONEER Service Station.

D: Display
C: Cause
T: Treatment

D: ERROR-11, 12, 14, 17, 30
C: The disc is dirty.
T: Clean the disc.

D: ERROR-11, 12, 17, 30
C: The disc is scratched.
T: Replace the disc.

D: ERROR-11, 14, 17
C: The disc is inserted with the label side down.
T: Insert the disc with the label side up.

D: ERROR-14
C: An unrecorded CD-R is being used.
T: Check the disc.

D: Display
C: Cause
T: Treatment

D: ERROR-10, 11, 12, 14, 17, 30, A0
C: Electrical or mechanical fault.
T: Turn off the car's ignition and turn it back on again. Or change the source to another one and then change it back to CD.

D: HEAT
C: The CD player's internal temperature is high.
T: Wait until the CD player's internal temperature goes down.

Additional Functions

Parts Identification
[12] Illumination

Switching Illumination Color

The illumination color can be set to amber or green.
Press button [12] for at least 2 seconds. Repeat this operation to switch between amber and green.

Connecting the Units

Note:

- *This unit is for vehicles with a 12-volt battery and negative grounding. Before installing it in a recreational vehicle, truck, or bus, check the battery voltage.*
- *To avoid shorts in the electrical system, be sure to disconnect the battery ⊖ cable before beginning installation.*
- *After completing installation and wiring, double check that there are no mistakes. Re-install any parts removed from the car during installation, then connect the battery negative terminal.*
- *Refer to the owner's manual for details on connecting the various cords of the power amp and other units, them make connections correctly.*
- *Secure the wiring with cable clamps or adhesive tape. To protect the wiring, wrap adhesive tape around them where they lie against metal parts.*
- *Route and secure all wiring so it cannot touch any moving parts, such as the gear shift, handbrake, and seat rails. Do not route wiring in places that get hot, such as near the heater outlet. If the insulation of the wiring melts or gets torn, there is a danger of the wiring short-circuiting to the vehicle body.*
- *Don't pass the orange lead through a hole into the engine compartment to connect to the battery. This will damage the lead insulation and cause a very dangerous short.*
- *Do not shorten any leads. If you do, the protection circuit may fail to work when it should.*
- *Never feed power to other equipment by cutting the insulation of the power supply lead of the unit and tapping into the lead. The current capacity of the lead will be exceeded, causing over heating.*
- *When replacing fuses, be sure to use only fuses of the rating prescribed on the fuse holder.*
- *Since a unique BPTL circuit is employed, never wire so the speaker leads are directly grounded or the left and right speaker ⊖ leads are common.*
- *Speakers connected to this unit must be high-power type possessing maximum input of at least 22 W and impedance of 4 to 8 ohms. Connecting speakers with output and/or impedance values other than those noted here can damage the speakers.*
- *When the power amp is being linked with this system, be sure not to connect the blue lead to the amp's power terminal. Likewise, when linking this system with the auto-antenna, do not connect to power terminal for the antenna. Such connection can make overcurrent cause malfunctions.*
- *When the unit is mounted in a vehicle whose ignition switch does not have the ACC (accessory) position as shown in Fig. 2, be sure to connect the red lead of the unit to the terminal controlled by the ignition switch ON/OFF position. If you do not, the vehicle battery may go flat when you leave your vehicle for several hours.*
  (Fig. 1: ACC position/Fig. 2: No ACC position)

Connection Diagram (Fig. 3)

1. Power amp (sold separately)
2. Connecting cords with RCA pin plugs (sold separately)
3. Blue
4. Front/left speaker
5. Front/right speaker
6. Green
7. Gray
8. Green/black
9. Gray/black
10. Rear/left speaker
11. Rear/right speaker
12. Green/red
13. Gray/red
14. Black/green
15. Black/gray
16. Connected only when the optional amplifier is used. Nothing is connected when operating the built-in amplifier itself.
17. White
18. Red
19. Rear out
20. Front out (DEH-605RDS, DEH-405 and DEH-405SDK do not have this terminal.)
21. Antenna jack
22. Blue
    To system control terminal of the power amp or Auto-antenna relay control terminal (Max. 300 mA 12 V DC).
23. Fuse holder
24. Fuse resistor
25. Black (ground)
    To vehicle (metal) body.
26. Orange
    To terminal always supplied with power regardless of ignition switch position.
27. Red
    To electric terminal controlled by ignition switch (12 V DC) ON/OFF.

Fig.1

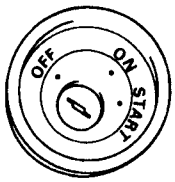

Fig.2

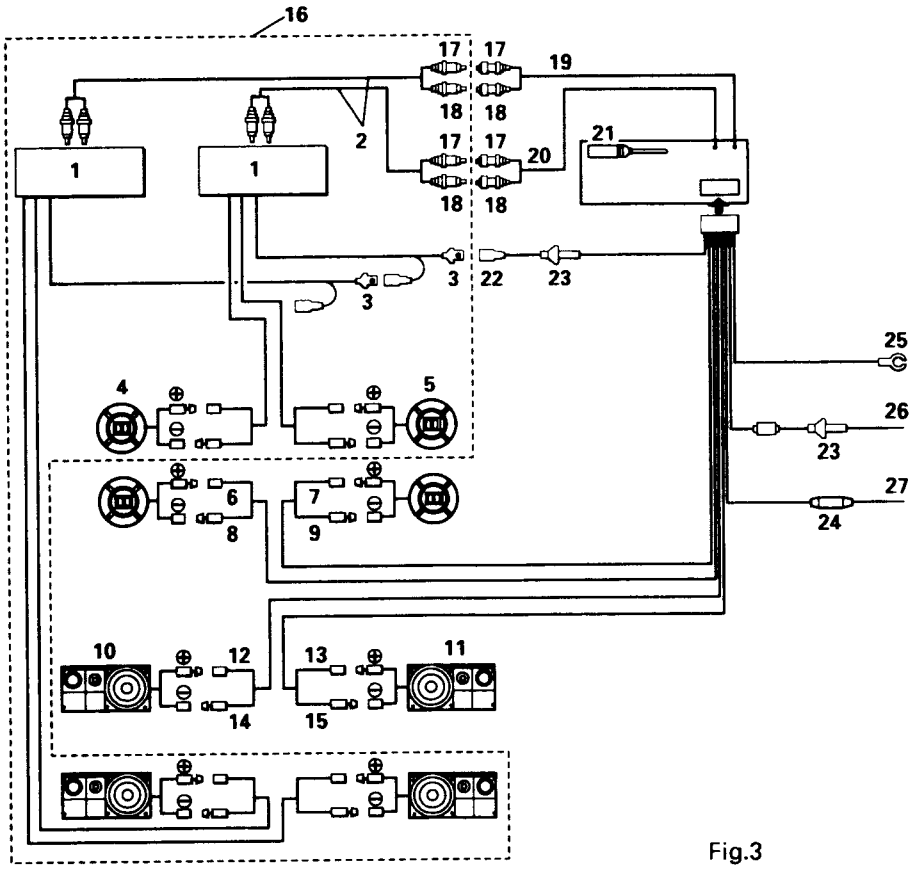

Fig.3

3. DISASSEMBLY

● Removing the Case

1.Remove the three screws.
2.Insert and turn a flat screwdriver at locations indicated by arrows to remove the case.

● Removing the Detach Grille Assy

1.Press the detach button, and then pull detach grille Assy.

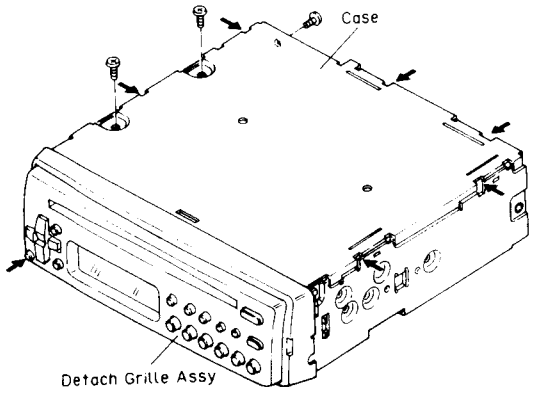

Fig.4

● Removing the Panel Unit

1.Remove the screw B and disconnect the two stoppers indicated by arrows.
2.Disconnect the connector.

● Removing the CD Mechanism Module

1.Remove the four screws A.
2.Disconnect the connector.
3.Remove the CD Mechanism Module.

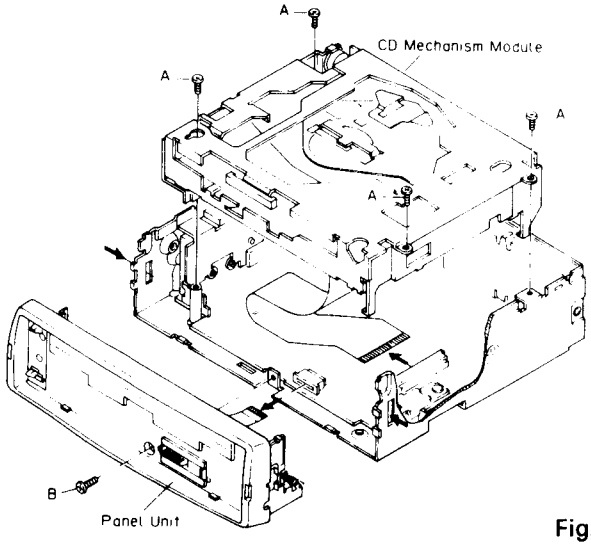

Fig.5

● Removing the Chassis Unit

1.Remove the two screws C.
2.Remove the screw D and E.
3.Remove the screw F and then remove the holder.
4.Stretch the four claws.
5.Remove the chassis Unit

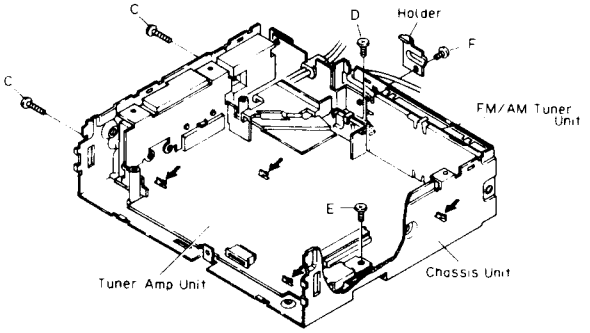

Fig.6

● ICs

PA2021B

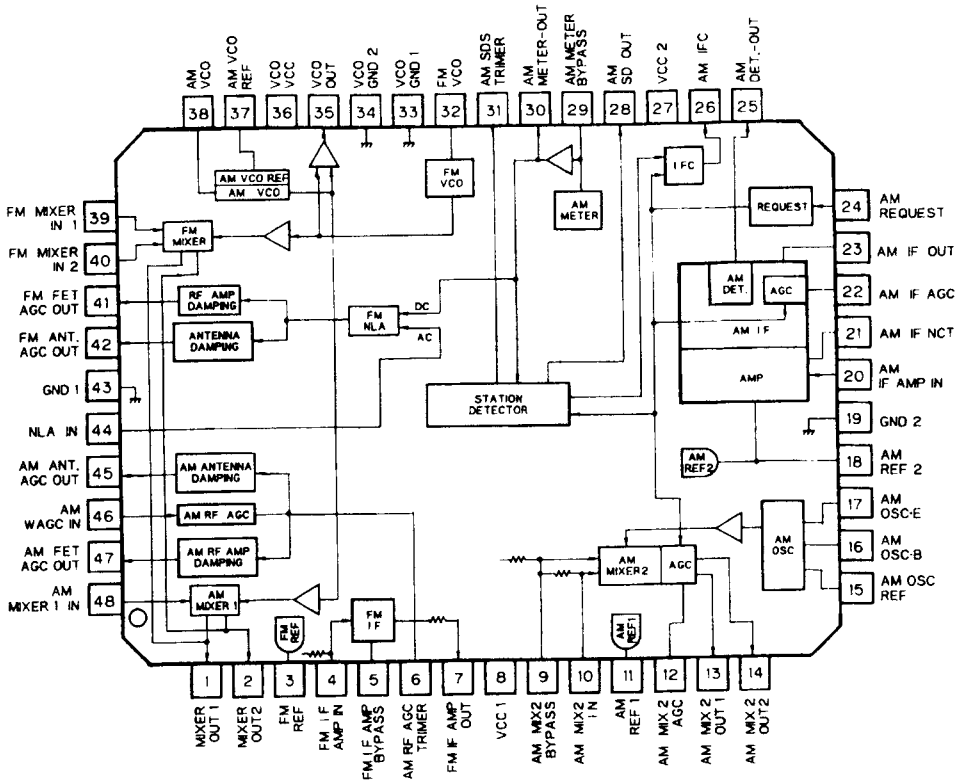

PA2022A

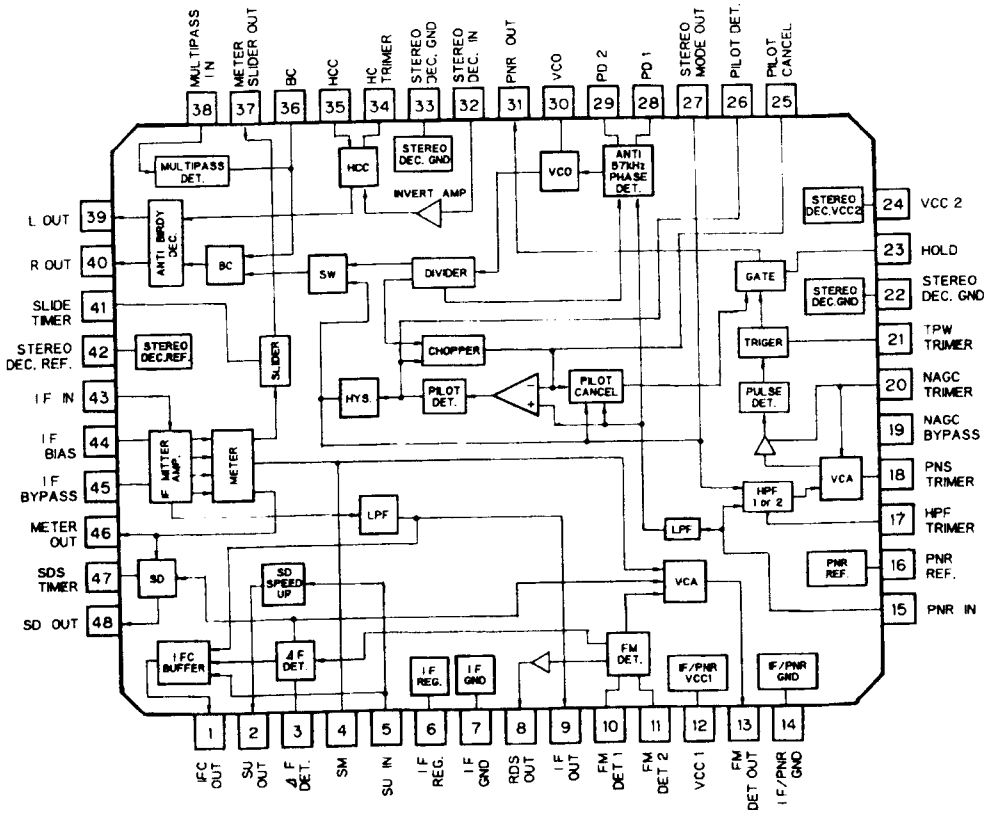

NJM4558L

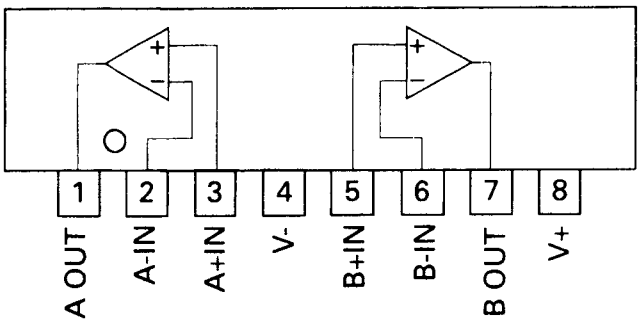

NJM4558MD

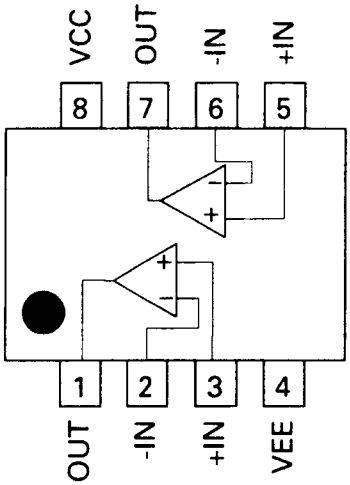

*LC7538JMHS

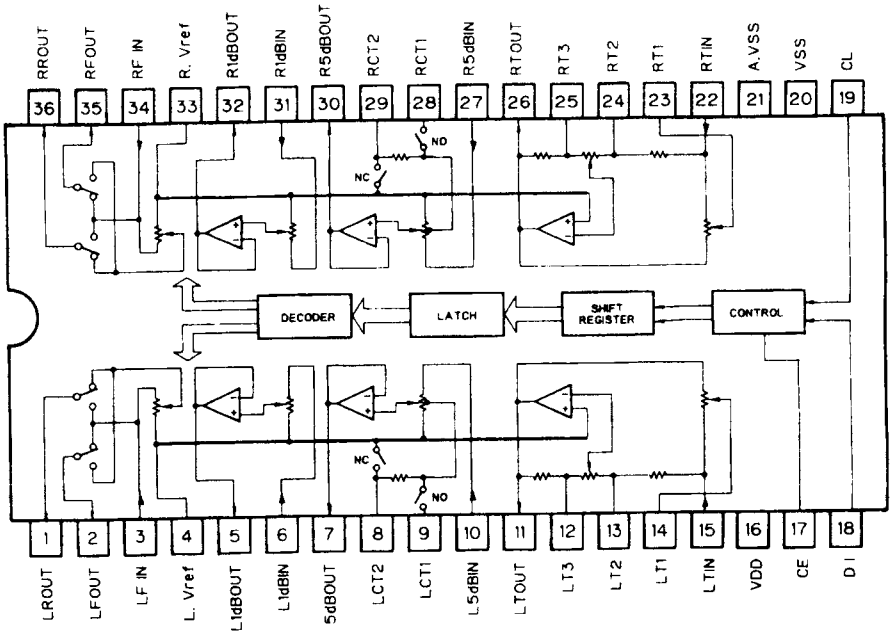

PA3029A

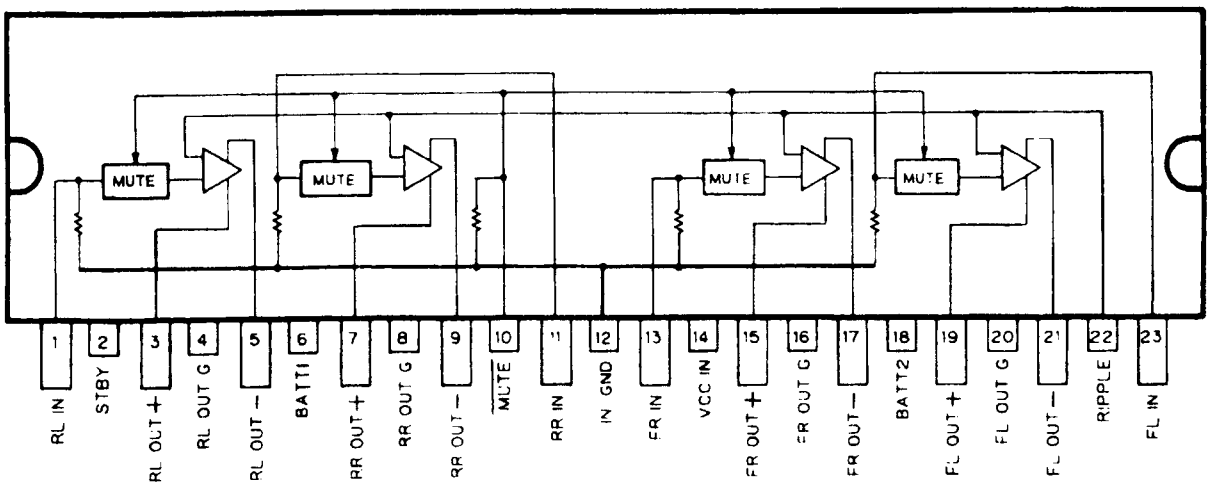

● **Pin Functions(PDR009B)**

Pin No.	Pin Name	I/O	Output Format	Function and Operation
1–3	KD3–KD1	I		Analog key input
4	AVSS	I		A/D coverter GND
5,6	NC			Not used
7	AVREF1	I		D/A converter reference voltage
8	LCE	O		Chip enable output for LCD driver
9	LDT	O	C	Data output for LCD driver
10	$\overline{\text{RST}}$	O	C	LSI reset output
11,12	NC			Not used
13	SK	I		SK signal input
14	XA0	O		Control signal distinguishing data from microcomputer
15	$\overline{\text{XSTB}}$	O	C	LSI data output
16	XSI	I		LSI data input
17	XSO	O	C	LSI data output
18	$\overline{\text{XSCK}}$	O	C	LSI clock output
19	CONT	O	C	Servo driver power supply control
20	LOAD	O	C	Loading motor LOAD control
21	EJET	O	C	Loading motor EJECT control
22	CD5VON	O	C	CD +5V control
23	NC			Not used
24	CDMUTE	O	C	CD mute output
25	$\overline{\text{TMUTE}}$	O	C	Tuner mute output
26	VDCONT	O	C	VD control input
27	FOK	I		FOK signal input
28	MIRR	I		Mirror detector input
29	LOCK	I		Spindle lock detector input
30	CLAMP	I		Disc clamp sense input
31	$\overline{\text{HOME}}$	I	C	Home position detector input
32	FECNT	O	C	FE output control pin
33	VSS			GND
34	VDSENS	I		VD over voltage sense input
35	VMC	O	C	Loading motor driver power supply
36	NC			Not used
37	$\overline{\text{ADENA}}$	O	N	A/D converter reference voltage output
38	NC			Not used
39	CDPW	O	N	CD power control
40	LCK	O		Clock output for LCD driver
41	SYSPW	O	C	System power supply control output
42	BLGTA	O	C	LCD back light amber control output
43	BLGTG	O	C	LCD back light green control output
44	$\overline{\text{SWVDD}}$	O	C	Key board unit power supply control output
45	PEE	O	C	Beep tone output
46	VDT	O	C	Data output for electronic volume
47	VST	O	C	Strobe pulse output for electronic volume
48	VCK	O	C	Clock output for electronic volume
49	PCL	O	C	Clock adjustment output
50	FM/$\overline{\text{AM}}$	O	C	FM/AM power select output
51	MONO	O	C	Forced mono output
52–55	SIMK0–3	I		Model select input
56	MUTE	O	C	Mute output
57	NC			Not used
58	$\overline{\text{DK}}$	I		DK signal input
59	SD	I		SD input
60	$\overline{\text{RESET}}$	I		Reset input
61	$\overline{\text{REMIN}}$	I		Remote control signal input
62	$\overline{\text{BSENS}}$	I		Back up power sense input
63	$\overline{\text{ASENS}}$	I		ACC power sense input
64	PDI	I		PLL data input

Pin No.	Pin Name	I/O	Output Format	Function and Operation
65	PDO	O	C	Data output for PLL IC
66	PCK	O	C	Serial clock output for PLL IC
67	PCE	O	C	Chip enable output for PLL IC
68	VDD			Power supply
69,70	X2,X1			Crystal oscillator connection pin
71	IC			Connect to GND
72	XT2			Not used
73	TESTIN	I		Test program start input
74	AVDD			Positive power supply terminal for analog circuit
75	AVREF0	I		A/D converter reference voltage
76	SL	I		SD level input from tuner
77	TEMP	I		Temperature detector
78	DINC	I		Disc insert sense input
79	EJTD	I		Disc eject position sense input
80	KD0	I		Analog key input

*PDR009B

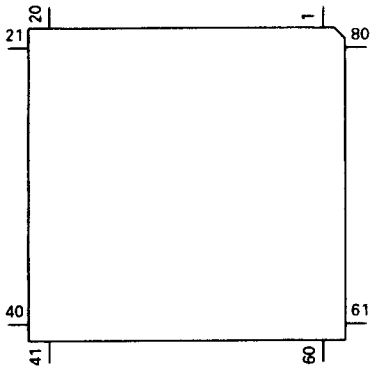

Output Format	Meaning
C	CMOS
N	N channel open drain

IC's marked by are MOS type.*
Be careful in handing them because they are very liable to be damaged by electrostatic induction.

PA2023A

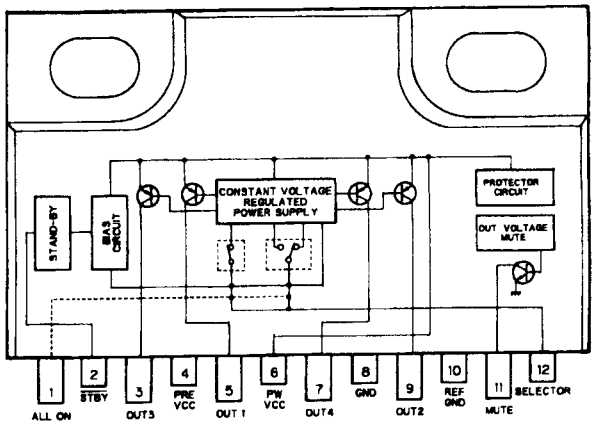

CWV1045

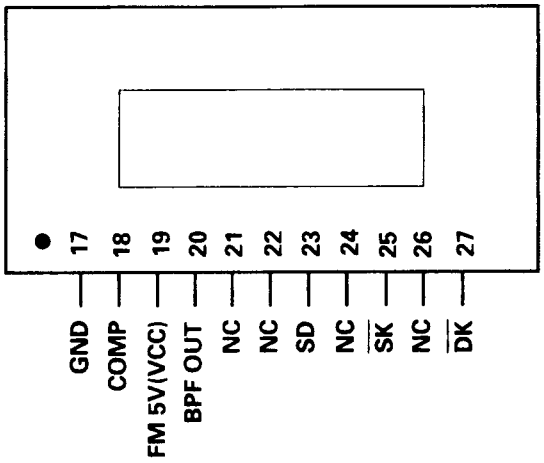

● **Pin Functions (CWV1044)**

Pin No.	Pin Name	I/O	Function and Operation
1	VDD		Power supply for RDS controller
2	GND		GND
3	RDSRDY	I	Ready input from system control IC
4	$\overline{\text{RDSEN}}$	O	Enable output for system control IC
5	$\overline{\text{RDSCK}}$	I	Serial clock input from system control IC
6-9	RDSDT 7-4	I/O	Data input/output to system control IC
10	RDSSEL	I	Select input from system control IC
11	$\overline{\text{RDSRST}}$	I	Reset input from system control IC
12	SCHK	I	Unit check input
13	TUNSEL	I	FM/AM tuner unit select input
14-16	VACANT		
17	GND		GND
18	COMP	I	FM composite signal input
19	FM 5V(VCC)		Power supply decoder
20	BPF OUT	O	Band pass filter test output
21	SL CHK	O	SL check output
22	FL CHK	O	FL check output
23	SD	I	RDS decode control input
24	SL(FM)	I	Signal level input from tuner
25	$\overline{\text{SK}}$	I	SK signal detect input
26	$\overline{\text{RLOCK}}$	O	RDS test output
27	$\overline{\text{DK}}$	O	DK signal detect output
28	ERROR	O	Disapprove of error correction output
29	CORR	O	Error output
30	RECEIVE	O	RDS synchronizing test output

CWV1044

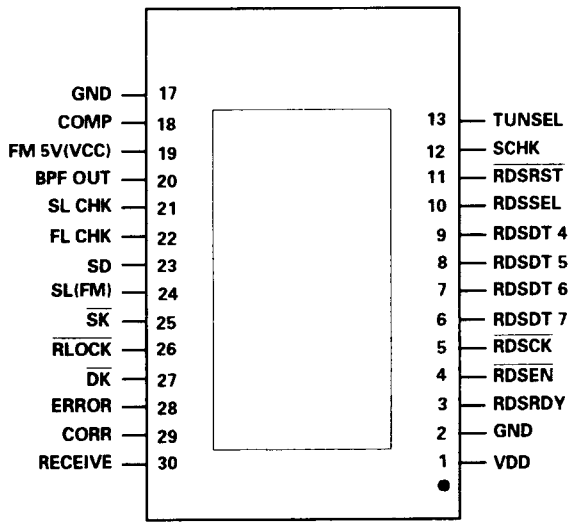

PAJ001A

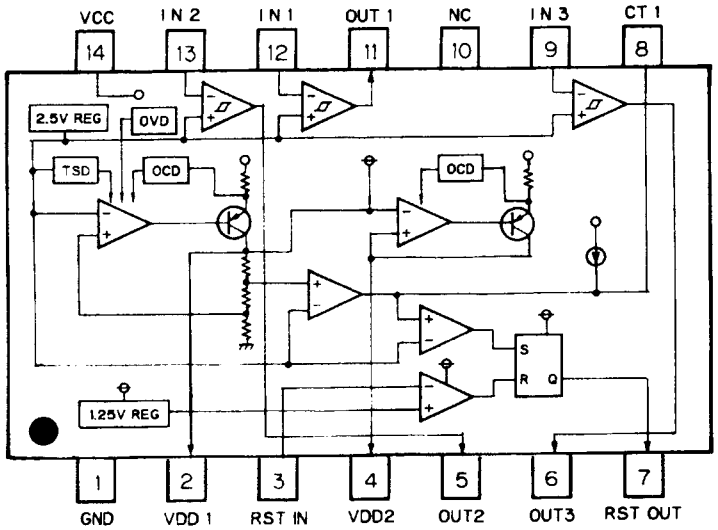

● **Pin Functions(PD4483B)**

Pin No.	Pin Name	I/O	Output Format	Function and Operation
1	NC	I		Not used
2	$\overline{\text{RDSRST}}$	O	C	Reset output for RDS IC
3	RDSSEL	O	C	Select output for RDS IC
4	AVSS	I		A/D coverter GND
5	$\overline{\text{RDSEN}}$	O	C	Enable output for RDS IC
6	RDSRDY	I		Ready input from RDS IC
7	AVREF1	I		D/A converter reference voltage
8	KYDT	I		Key data input
9	DPDT	O	C	Display data output
10	$\overline{\text{RST}}$	O	C	LSI reset output
11	RDSDI	I		Serial data input for RDS IC
12	RDSDO	O	C	Serial data output for RDS IC
13	$\overline{\text{RDSCK}}$	O	C	Serial clock output for RDS IC
14	XA0	O		Control signal distinguishing data from microcomputer
15	$\overline{\text{XSTB}}$	O	C	LSI strobe output
16	XSI	I		LSI data input
17	XSO	O	C	LSI data output
18	$\overline{\text{XSCK}}$	O	C	LSI clock output
19	CONT	O	C	Servo driver power supply control
20	LOAD	O	C	Loading motor LOAD control
21	EJET	O	C	Loading motor EJECT control
22	CD5VON	O	C	CD +5V control
23	NC			Not used
24	CDMUTE	O	C	CD mute output
25	$\overline{\text{TMUTE}}$	O	C	Tuner mute output
26	VDCONT	O	C	VD control input
27	FOK	I		FOK signal input
28	MIRR	I		Mirror detector input
29	LOCK	I		Spindle lock detector input
30	CLAMP	I		Disc clamp sense input
31	$\overline{\text{HOME}}$	I	C	Home position detector input
32	FECNT	O	C	FE output control pin
33	VSS			GND
34	VDSENS	I		VD over voltage sense input
35	VMC	O	C	Loading motor driver power supply
36	NC			Not used
37	$\overline{\text{ADENA}}$	O	N	A/D converter reference voltage output
38	NC			Not used
39	CDPW	O	N	CD power control
40	NC			Not used
41	SYSPW	O	C	System power supply control output
42	BLGT	O	C	LCD back light control output
43	VLCDPW	O	C	Power supply control output for LCD
44	$\overline{\text{SWVDD}}$	O	C	Key board unit power supply control output
45	PEE	O	C	Beep tone output
46	VDT	O	C	Data output for electronic volume
47	VST	O	C	Strobe pulse output for electronic volume
48	VCK	O	C	Clock output for electronic volume
49	PCL	O	C	Clock adjustment output
50	$\overline{\text{FM/AM}}$	O	C	FM/AM power select output
51	MONO	O	C	Forced mono output
52-55	NC			Not used
56	MUTE	O	C	Mute output
57	NC			Not used
58	NC			Not used
59	SD	I		SD input
60	$\overline{\text{RESET}}$	I		Reset input

Pin No.	Pin Name	I/O	Output Format	Function and Operation
61	NC			Not used
62	$\overline{\text{BSENS}}$	I		Back up power sense input
63	$\overline{\text{ASENS}}$	I		ACC power sense input
64	PDI	I		PLL data input
65	PDO	O	C	Data output for PLL IC
66	PCK	O	C	Serial clock output for PLL IC
67	PCE	O	C	Chip enable output for PLL IC
68	VDD			Power supply
69,70	X2,X1			Crystal oscillator connection pin
71	IC			Connect to GND
72	XT2			Not used
73	TESTIN	I		Test program start input
74	AVDD			Positive power supply terminal for analog circuit
75	AVREF0	I		A/D converter reference voltage
76	SL	I		SD level input from tuner
77	TEMP	I		Temperature detector
78	DINC	I		Disc insert sense input
79	EJTD	I		Disc eject position sense input
80	DSENS	I		Grille detach sense

*PD4483B

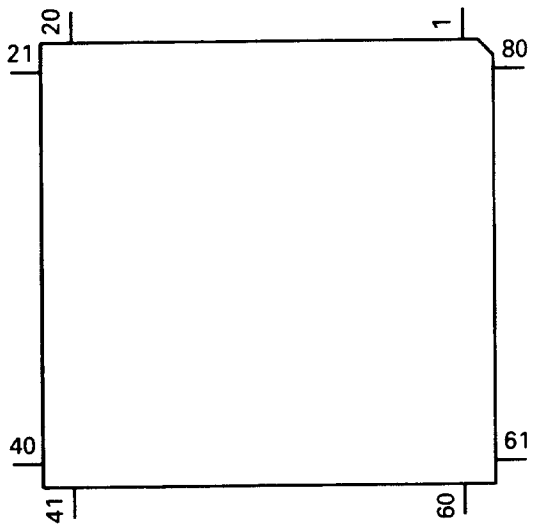

Output Format	Meaning
C	CMOS
N	N channel open drain

● **Pin Functions (PD6122A)**

Pin No.	Pin Name	I/O	Function and Operation
1	VSS		GND
2	X1		Crystal oscillator connection pin
3	X0		Crystal oscillator connection pin
4	RESET	I	Reset Input
5,6	MOD1,0	I	Model select input
7	DILMX	O	Function LED select output
8	KYDT	O	Key data output
9	DPDT	I	Display data input
10	REMIN	I	Remote control pulse input
11	SILMO	O	Illumination color select output
12	SILMG	O	Function LED select output
13–16	$\overline{KD4}$-$\overline{KD1}$	I	Key sense input
17–22	$\overline{KDT6}$-$\overline{1}$	O	Key strobe output
23	VDD		5V
24–34	NC		Not used
35–73	SEG38–0		LCD segment output
74–77	COM3–0	O	LCD common output
78–80	VLCD–V1		Power supply terminal

*PD6122A

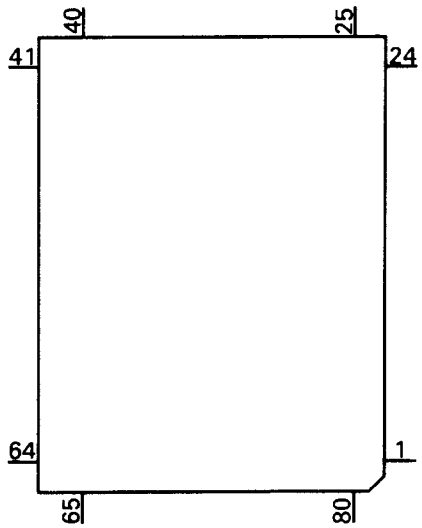

*RPM-678CBR

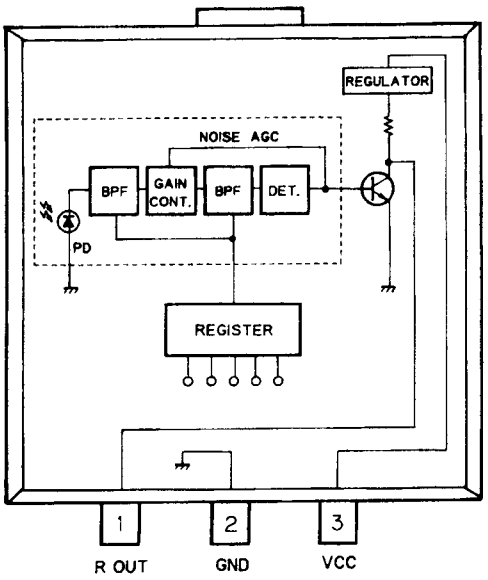

● Pin Functions(UPC2571GS)

Pin No.	Pin Name	I/O	Function and Operation
1	VCC		VCC
2	BP-	I	TE zero cross amplifier input
3	BPO	O	TE zero cross amplifier output
4	WC+		Not used
5	WC-		Not used
6	GND1		GND
7	QDH		Not used
8	QDO		Not used
9	A	I	A signal input
10	C	I	C signal input
11	B	I	B signal input
12	D	I	D signal input
13	E	I	E signal input
14	F	I	F signal input
15	PIN	I	APC amplifier input
16	LA	O	APC amplifier output
17	LAON		APC amplifier ON/OFF switching
18	REFI	I	Reference voltage input
19	REFO	O	Reference voltage output
20	GND2		GND
21	RF+	I	RF amplifier non-inverting input
22	RF-	I	RF amplifier inverting input
23	RFO	O	RF amplifier output
24	RFI		Not used
25	ENVB		Not used
26	ENBP		Not used
27	NC		Non connection
28	TE1O	O	Tracking error amplifier 1 output
29	TE2+	I	Tracking error amplifier 2 non-inverting input
30	TE2-	I	Tracking error amplifier 2 inverting input
31	TE2O	O	Tracking error amplifier 2 output
32	FE1+	I	Focus error amplifier 1 non-inverting input
33	FE1O	O	Focus error amplifier 1 output
34	FE2+	I	Focus error amplifier 2 non-inverting input
35	FE2-	I	Focus error amplifier 2 inverter input
36	FE2O	O	Focus error amplifier 2 output

UPC2571GS

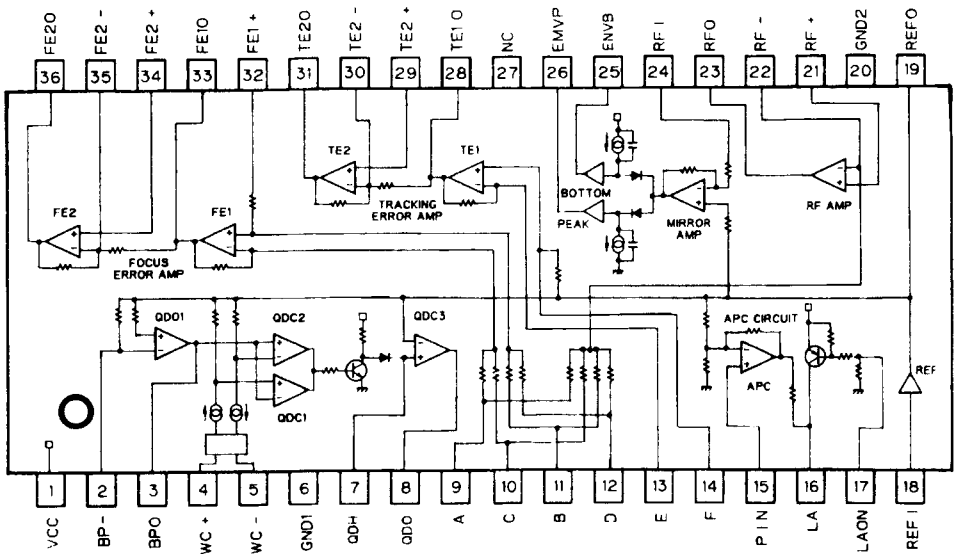

● **Pin Functions(UPD63700GF)**

Pin No.	Pin Name	I/O	Function and Operation
1	D.GND		Logic circuit GND
2	RFOK	O	RFOK detection signal output terminal
3	MIRR	O	MIRR detection signal output terminal
4	TBC	I	Tracking filter bank switching terminal
5	HOLD	I	Hold control signal input terminal
6	D.VDD		VDD for logic circuit
7	$\overline{RST}$	I	System reset
8	AO	I	Control signal distinguishing data from microcomputer
9	$\overline{STB}$	I	Signal latching serial data inside LSI
10	$\overline{SCK}$	I	Clock input terminal for serial data input and output
11	SO	O	Serial data and status signal output
12	SI	I	Serial data input
13	TM2	I	Double speed playback control terminal
14	D.GND		Logic circuit GND
15	TEST	I	Test terminal
16	STBY	I	Stand-by input terminal
17	CTLV	I	Control terminal for clock generation VCO used by digital PLL in double speed playback mode
18	POUT	O	Output terminal for phase comparison between EFM signal and bit clock
19	D.GND		Logic circuit GND
20	VCO	I	Inverter input
21	$\overline{VCO}$	O	Inverter output
22	D.VDD		VDD for logic circuit
23	PLCK	O	Bit clock monitor terminal
24	LOCK	O	"H" when synchronization signal and frame counter output coincide at EFM demodulator
25	WFCK	O	Signal issuring one-frame period by bit clock dividing signal
26	RFCK	O	Oscillation clock divider signal,output pin for signal giving 1-frame sync.
27	C4M	O	Output terminal for signal having four the frequency of LRCK
28	C16M	O	Oscillation clock output terminal
29	D.GND		Logic circuit GND
30	XTAL	I	Oscillation continuation terminal
31	$\overline{XTAL}$	O	Oscillation continuation terminal
32	D.VDD		VDD for logic circuit
33	SCKO	O	Clock output terminal for audio serial data
34	LRCK	O	Signal distinguishing between left and right channel DOUT terminal output
35	DOUT	O	Serial audio data output terminal
36	TX	O	Digital audio interface data output terminal
37	FLAG	O	Flag signal indicating that the current audio data output of incorrectable data
38	EMPH	O	Emphasis information output
39	WDCK	O	Output terminal for signal having double the frequency of LRCK
40	C2D3	O	Output terminal indicating C2 error correction status
41	SFSY	O	Signal indicating subcode one-frame synchronization
42	SBSY	O	Signal indicating head of subcode block
43	SBSO	O	Subcode data output terminal
44	SBCK	I	Subcode data read clock input terminal
45	D.GND		Logic circuit GND
46,47	C1D1,C1D2	O	Output terminal indicating C1 error correction status
48,49	C2D1,C2D2	O	Output terminal indicating C2 error correction status
50	T4	I	Selects between focus and tracking modulation mode
51	T5	I	Selects motor PWM output mode
52	T6	I	Sets focus PWM output mode
53	T7	I	Sets tracking PWM output mode
54	D.VDD		VDD for logic circuit
55	MRD	O	PWM negative output terminal for the spindle loop filter
56	MFD	O	PWM positive output terminal for the spindle loop filter
57	SRD	O	PWM negative output terminal for the thread loop filter
58	SFD	O	PWM positive output terminal for the thread loop filter

Pin No.	Pin Name	I/O	Function and Operation
59	D.GND		Logic circuit GND
60	TRD	O	PWM negative output terminal for the tracking loop filter
61	TFD	O	PWM positive output terminal for the tracking loop filter
62	FRD	O	PWM negative output terminal for the focus loop filter
63	FFD	O	PWM positive output terminal for the focus loop filter
64	D.VDD		VDD for logic circuit
65	OUTSEL	I	Sets PWM output mode for the motor system
66	TEC1	I	Tracking error input terminal
67	TEC0	I	Tracking error input terminal
68	A.VDD		VDD for analog circuit
69,70	VR2,VR1	I	A/D converter input
71	TE	I	Tracking error input terminal
72	FE	I	Focus error input terminal
73	RFB	I	RFB signal input terminal
74	RFP	I	RFP signal input terminal
75	A.GND		Analog circuit GND
76	REFOUT	O	A/D converter midpoint voltage output terminal inside LSI
77	RFI	I	RF signal input terminal for EFM comparator
78	ASI	I	Level comparing input for RF signal comparison
79	EFM	O	EFM signal output terminal
80	A.VDD		VDD for analog circuit

*UPD63700GF

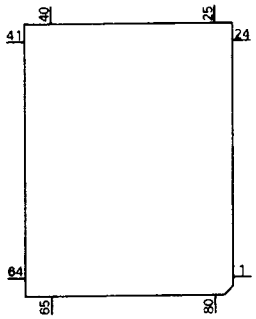

XRA6285FP

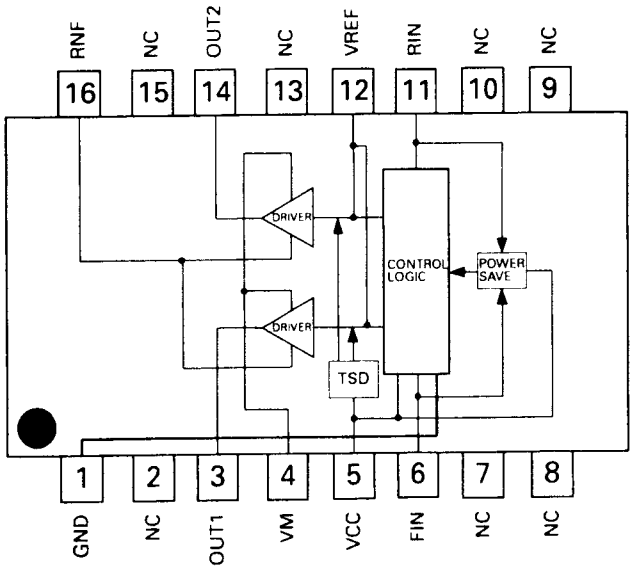

PQ05TZ51

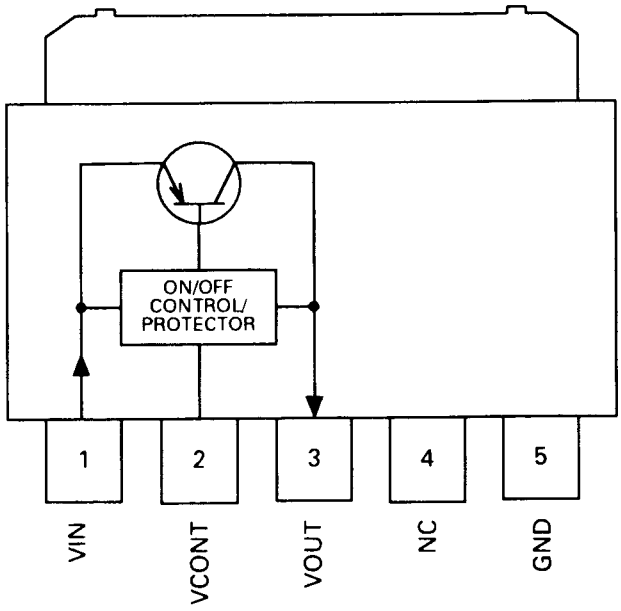

*TC9268F

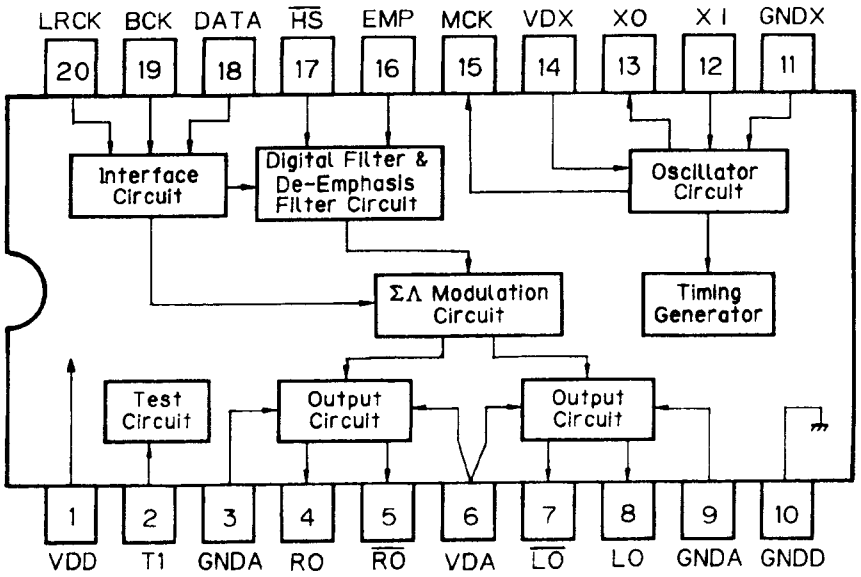
LRCK BCK DATA $\overline{HS}$ EMP MCK VDX XO XI GNDX
20 19 18 17 16 15 14 13 12 11
Interface Circuit
Digital Filter & De-Emphasis Filter Circuit
Oscillator Circuit
ΣΛ Modulation Circuit
Timing Generator
Test Circuit
Output Circuit
Output Circuit
1 2 3 4 5 6 7 8 9 10
VDD T1 GNDA RO $\overline{RO}$ VDA $\overline{LO}$ LO GNDA GNDD

TA2063F

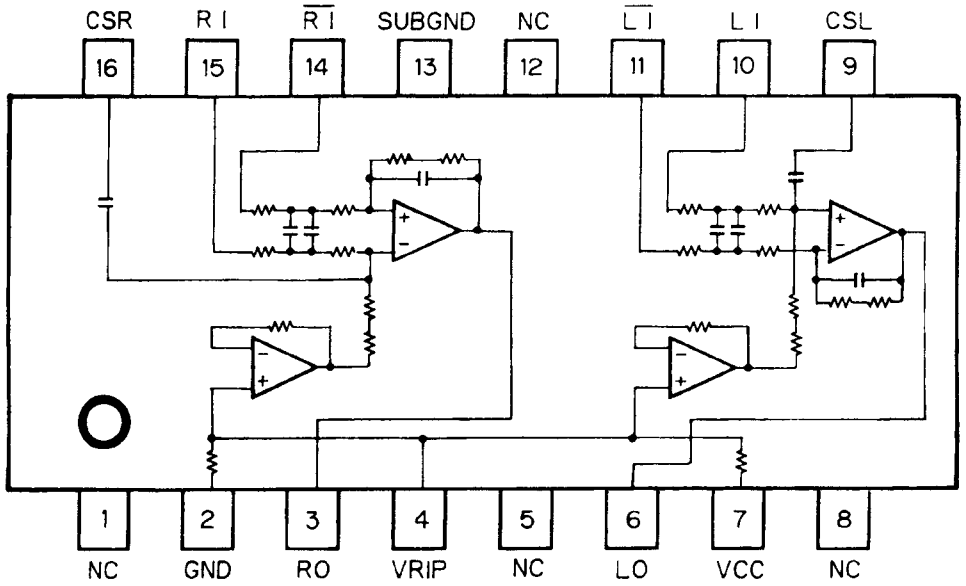

4. ADJUSTMENT

4.1 CD PLAYER SECTION

1)Precautions

· This unit uses a single power supply (+5V) for the regulator. The signal reference potential, therefore, is connected to REFO(approx. 2.5V) instead of GND.
If REFO and GND are connected to each other by mistake during adjustments,not only will it be impossible to measure the potential correctly,but the servo will malfunction and a severe shock will be applied to the pick-up. To avoid this,take special note of the following.
Do not connect the negative probe of the measuring equipment to REFO and GND together. It is especially important not to connect the channel 1 negative probe of the oscilloscope to REFO with the channel 2 negative probe connected to GND.
Since the frame of the measuring instrument is usually at the same potential as the negative probe,change the frame of the measuring instrument to floating status.
If by accident REFO comes in contact with GND,immediately switch the regulator or power OFF.

· Always make sure the regulator is OFF when connecting and disconnecting the various filters and wiring required for measurements.

· Before proceeding to further adjustments and measurements after switching regulator ON,let the player run for about one minute to allow the circuits to stabilize.

· Since the protective systems in the unit s software are rendered inoperative in test mode,be very careful to avoid mechanical and /or electrical shocks to the system when making adjustment.

· Test mode starting procedure
Switch ACC,back-up ON while pressing the **4** and **6** keys together.

· Test mode cancellation
Switch ACC,back-up OFF.

· Disc detection during loading and eject operations is performed by means of a photo transistor in this unit.Consequently,if the inside of the unit is exposed to a strong light source when the outer casing is removed for repairs or adjustment,the following malfunctions may occur.
*During PLAY, even if the eject button is pressed,the disc will not be ejected and the unit will remain in the PLAY mode.
*The unit will not load a disc.
When the unit malfunctions this way,either re-position the light source,move the unit or cover the photo transistor.

· When loading and unloading discs during adjustment procedures,always wait for the disc to be properly clamped or ejected before pressing another key. Otherwise, there is a risk of the actuator being destroyed.

· Turn power off when pressing the button **TR+** or the button **TR-** key for focus search in the test mode. (Or else lens may stick and the actuator may be damaged.)

· SINGLE/4TRK/10TRK/32TRK will continue to operate even after the key is released.Tracking is closed the moment C-MOVE is released.

· JUMP MODE resets to SINGLE as soon as power is switched off.

● Flow Chart

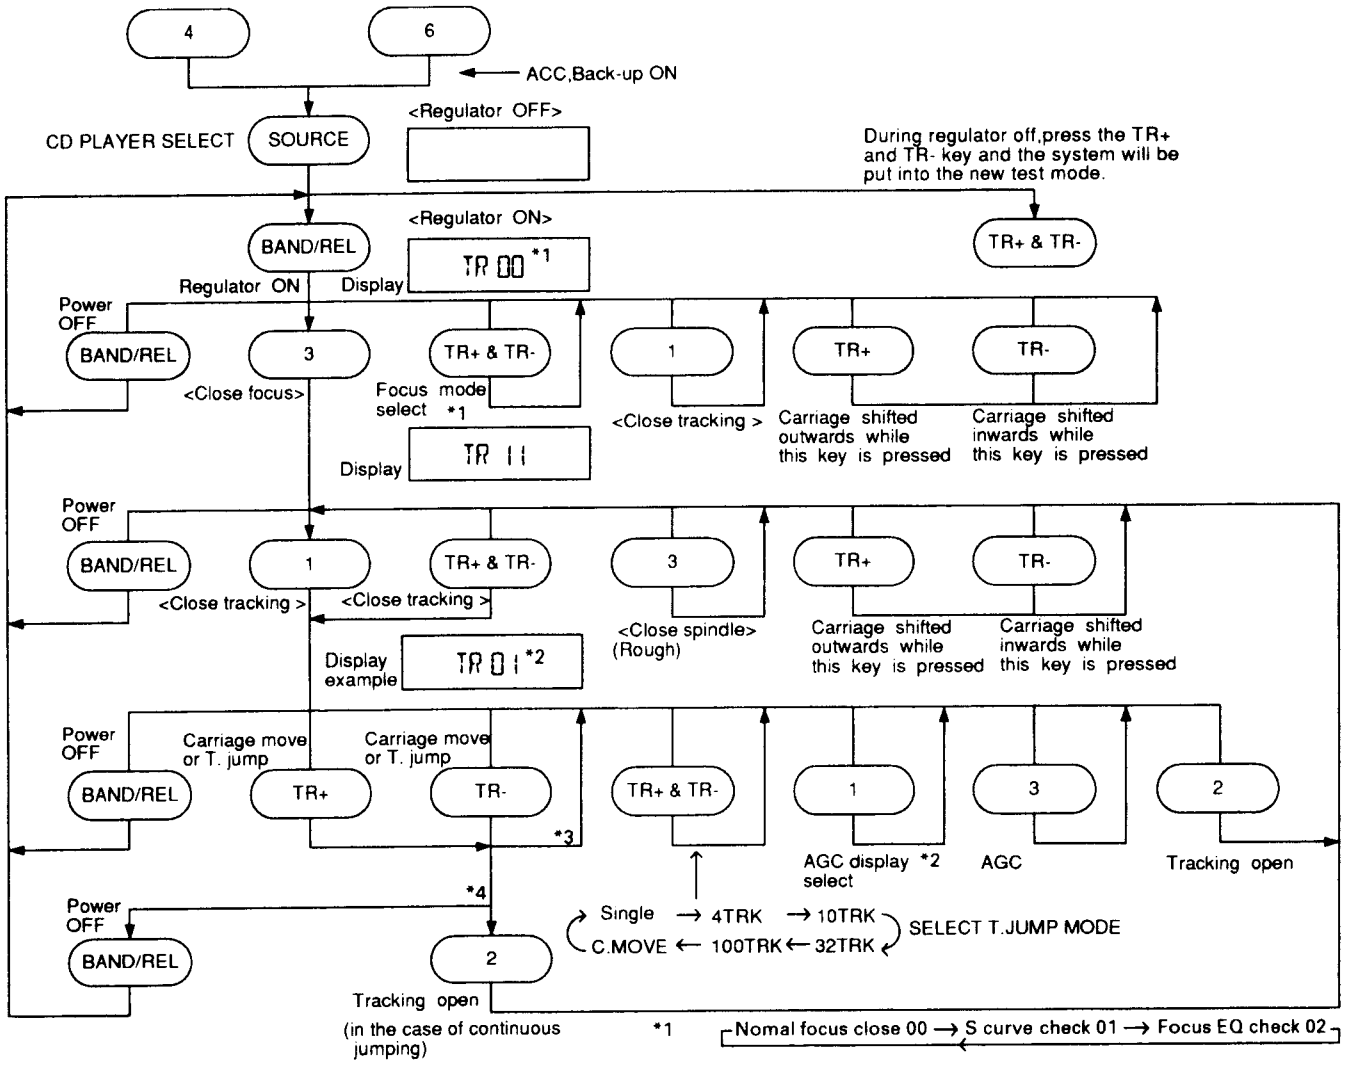

Fig.7

●Measuring Equipment and Jigs

Adjustment	Measuring equipment & jigs
1 Tracking Error Offset Adjustment 1	DC V Meter
2 Grating Check / Adjustment 1	Oscilloscope, ABEX TCD-784, L.P.F., Clock Driver
3 Grating Adjustment 2	Oscilloscope, Grating Adjustment Filter (B.P.F.), mV Meter, ABEX TCD-784, L.P.F., Clock Driver
4 Tracking Balance Adjustment 1	Oscilloscope, Low-pass Filter, ABEX TCD-784
5 Focus Bias Adjustment	Oscilloscope, ABEX TCD-784
6 RFO Offset Adjustment	Oscilloscope, ABEX TCD-784
7 Tracking Error Offset Adjustment 2	DC V Meter
8 Tracking Balance Adjustment 2	Oscilloscope, Low-pass Filter, ABEX TCD-784

● Adjustment Point

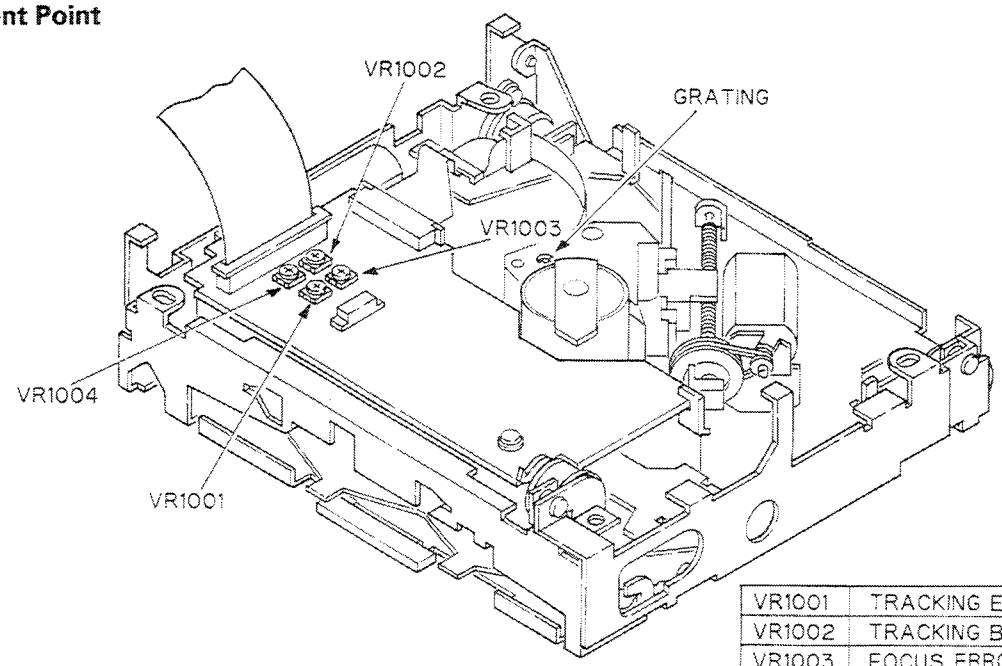

VR1001	TRACKING ERROR OFFSET
VR1002	TRACKING BALANCE
VR1003	FOCUS ERROR BIAS
VR1004	RFO OFFSET

Fig.8

● Test Point

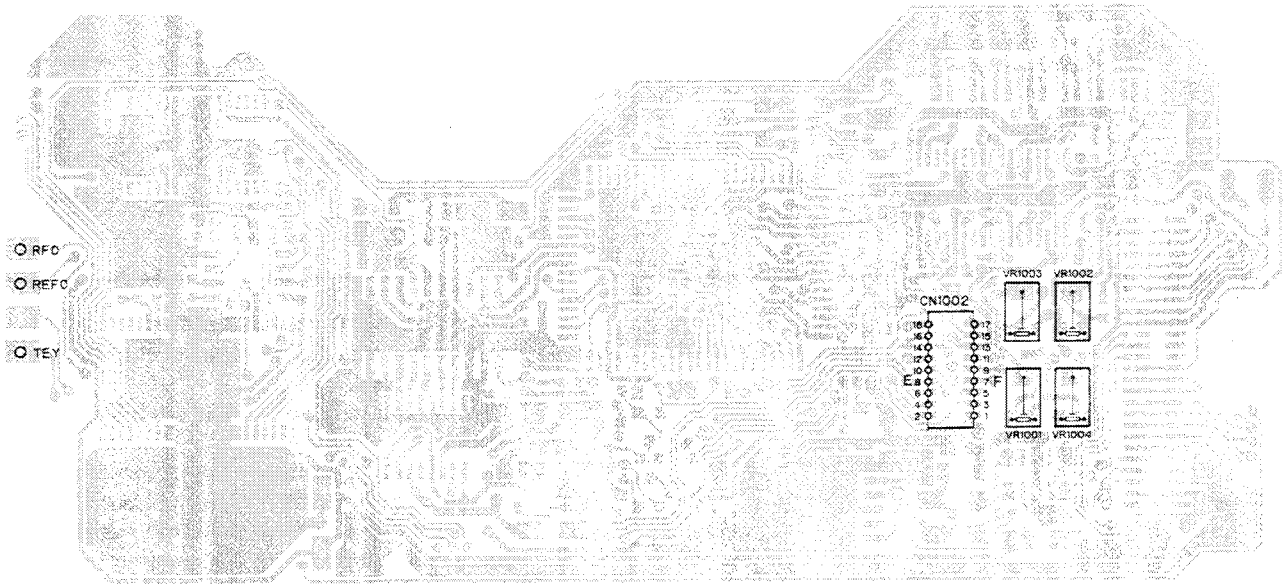

Fig.9

1 Tracking Error Offset Adjustment 1

·**Purpose** :
To adjust the offset of the tracking pre-amp to zero

·**Symptoms of Mal-adjustment** :
Track search NG, Carriage runaway, Poor playability

·**Measuring Equipment / Jig**	·DC V Meter
·**Measuring Point**	·TEY
·**Test Disc , Mode**	·No disc, TEST MODE
·**Adjustment Point**	·VR1001(TE OFFSET VR)

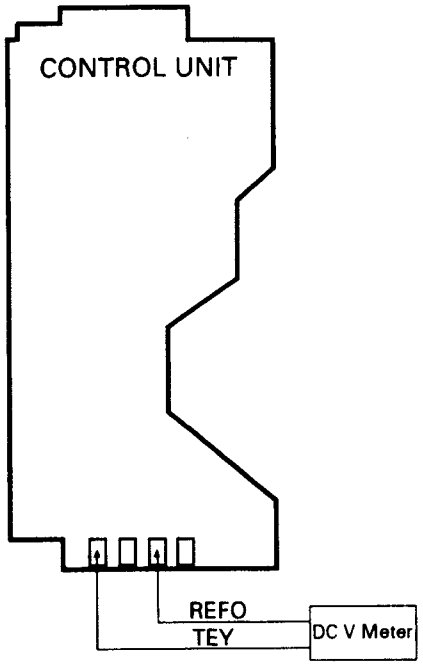

Adjustment Procedure
1.Switch the regulator on.
2.Using VR1001, adjust TEY to 0 ± 25mV w.r.t. REFO.

2 Grating Check / Adjustment 1

·**Purpose** :
To check that the PU grating is correctly aligned after the PU unit has been replaced

·**Symptoms of Mal-adjustment** :
Unable to play disc, track skip during search, search NG

·**Measuring Equipment / Jig**	·Oscilloscope, L.P.F., Clock Driver
·**Measuring Point**	·E, F
·**Test Disc , Mode**	·ABEX TCD-784, TEST MODE
·**Adjustment Point**	·Grating hole

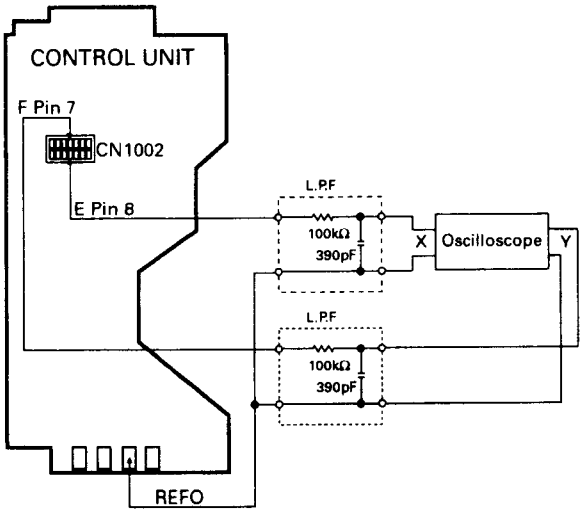

Adjustment Procedure
1.Load disc and switch regulator on.
2.Position the PU in the center of the disc using the **TR+ & TR-** keys.
3.Press key **3** to close focus and once more to close spindle.
4.Refering to the photographs given check that the grating is within ±45°. If not, it should be possible to make a fine adjustment to the grating by **slowly** tuning the grating screw. If, however during the adjustment the lissajous figure is seen to "FLIP" then the null point must be found and the adjustment made from there(see next section).

Lissajous figure (AC input)
Horizontal axis E 10mV/div.
Vertical axis F 10mV/div.

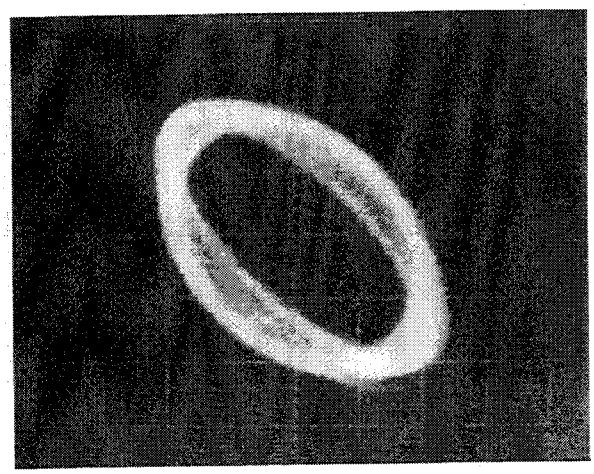

60°=NG

Waveform 1

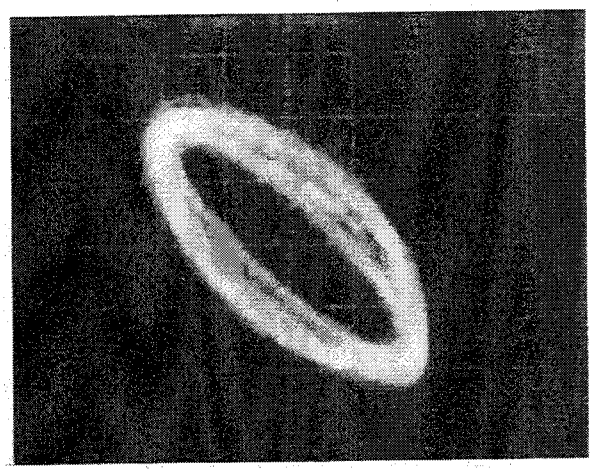

45°=OK
(Limit)

Waveform 2

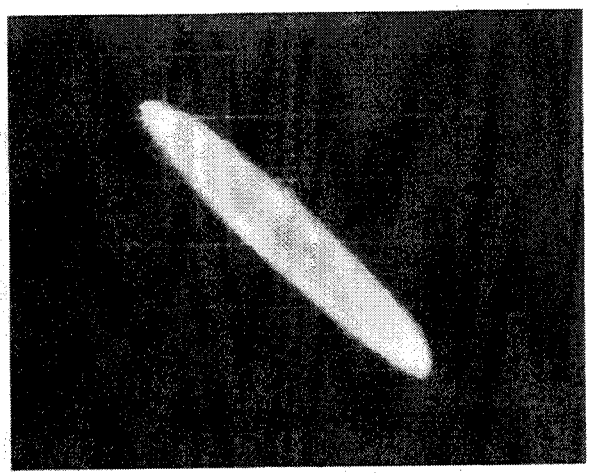

0°=BEST
(Doesn't become a single line due to eccentricity)

Waveform 3

3 Grating Adjustment 2

- **Purpose :**
  This needs to be done if the previous adjustment was unsuccessful
- **Symptoms of Mal-adjustment :**
  Unable to play disc, track skipping, track search NG

Measuring Equipment / Jig	Oscilloscope, Grating Adjustment filter (BPF), mV Meter, L.P.F., Clock Driver
Measuring Point	TEY, E, F
Test Disc , Mode	ABEX TCD-784, TEST MODE
Adjustment Point	Grating hole

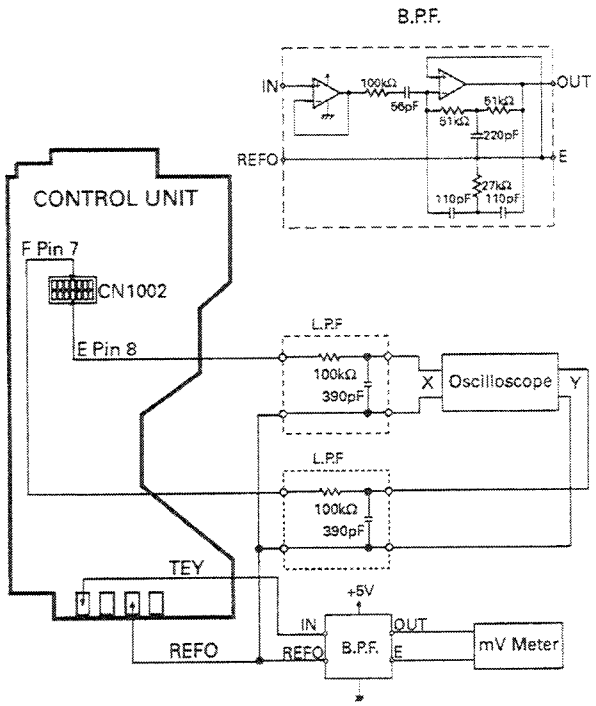

Adjustment Procedure

1. Load disc and switch regulator on.
2. Position PU unit in the center of the disc using the **TR+** & **TR-** keys.
3. Press key **3** to close focus and press once more to close spindle.
4. While monitoring the output of the BPF connected to TEY, slowly turn the grating screw. The output voltage should pass through many minimums; search for the minimum which is clearly smaller than the rest - this is the "null point", where the E & F sub-beams are lined up with the tracks on the disc.
5. From this null point, turn the grating screw clockwise (as seen from the underside of the PU unit) until the lissajous waveform is a single line (or close as possible) as shown in the photograph.

Lissajous figure (AC input)
Horizontal axis E 10mV/div.
Vertical axis F 10mV/div.

Null Point=180°

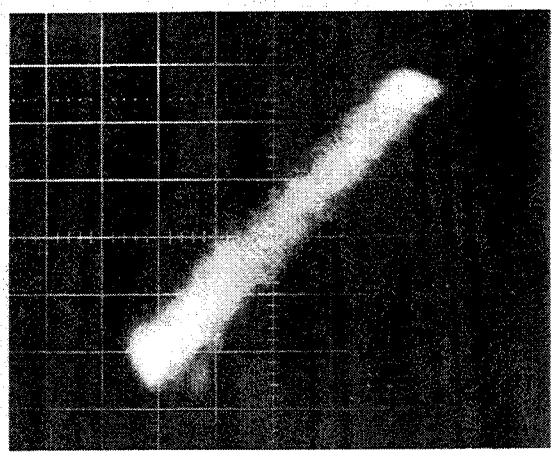

Waveform 4

"Rough" adjustment=90°

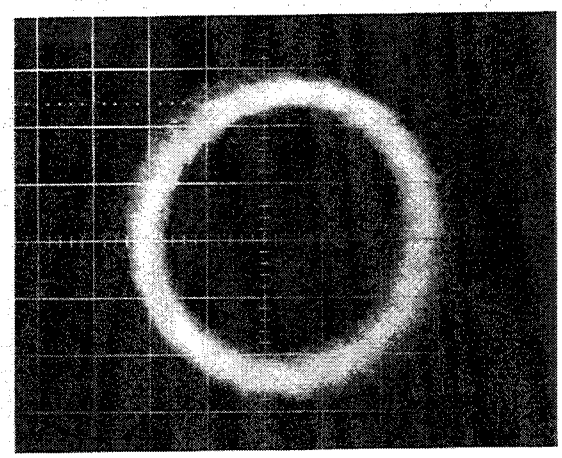

Waveform 5

Final adjustment=0°

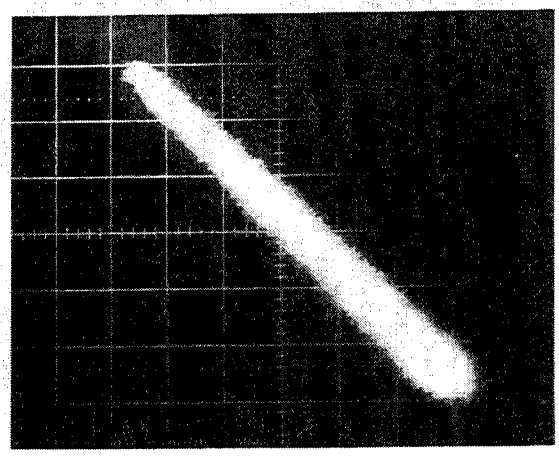

Waveform 6

4 Tracking Balance Adjustment 1

- **Purpose :**
  To equate the sensitivity of the F channel to that of the E channel
- **Symptoms of Mal-adjustment :**
  Track search NG, Poor playability carriage runaway

Measuring Equipment / Jig	Oscilloscope, L.P.F.
Measuring Point	TEY
Test Disc , Mode	ABEX TCD-784, TEST MODE
Adjustment Point	VR1002 (T.BAL VR)

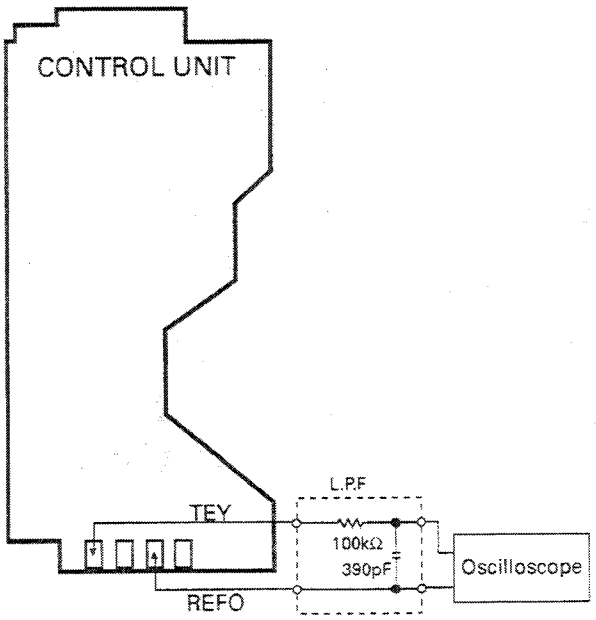

Adjustment Procedure

1. Load Disc and switch the regulator on.
2. Position the PU unit in the center of the disc using the **TR+** & **TR-** keys.
3. Close focus by pressing key **3**.
4. Observing the TEY waveform on the oscilloscope, adjust VR1002 until the positive and negative halves have the same amplitude (see waveform 7–9).

Check

After adjustment the TEY waveform should have an amplitude of 1.5±0.65 Vpp (ABEX-784)
(Providing focus bias is OK)

DC Mode
0.5V/div.
5ms/div.

+5% NG

REFO →

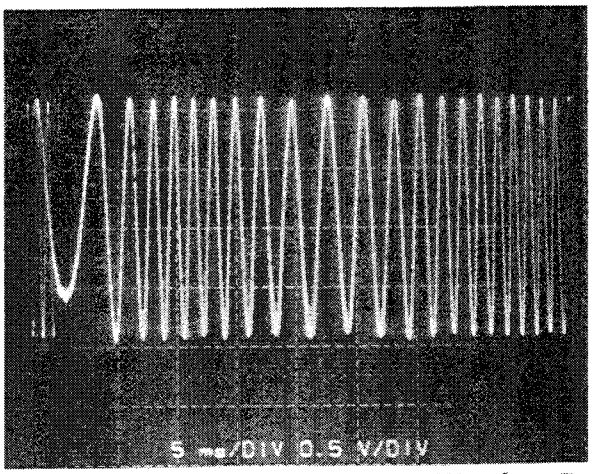

Waveform 7

±0% OK

REFO →

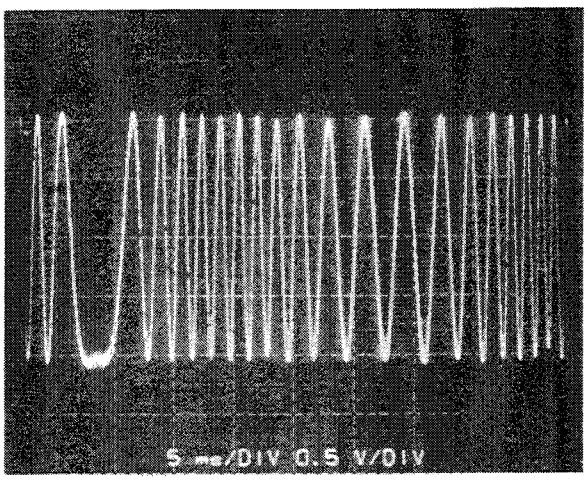

Waveform 8

−5% NG

REFO →

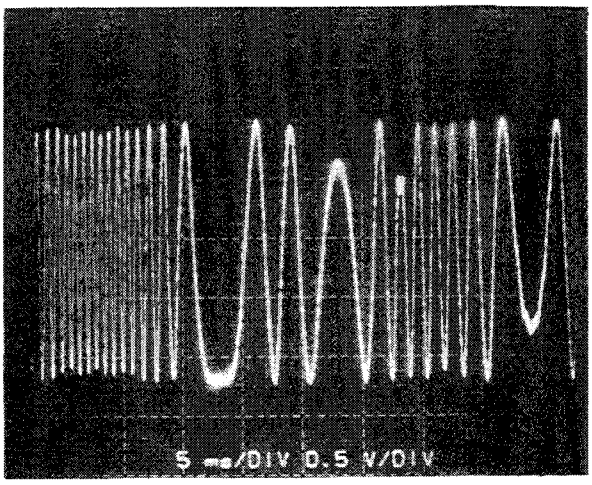

Waveform 9

5 Focus Bias Adjustment

- **Purpose :**
  To adjust the focus servo reference so that the RF waveform is an optimum.
- **Symptoms of Mal-adjustment :**
  Difficulty in closing focus, poor playability.

Measuring Equipment / Jig	Oscilloscope
Measuring Point	RFO
Test Disc , Mode	ABEX TCD-784, NORMAL MODE
Adjustment Point	VR1003 (FE BIAS VR)

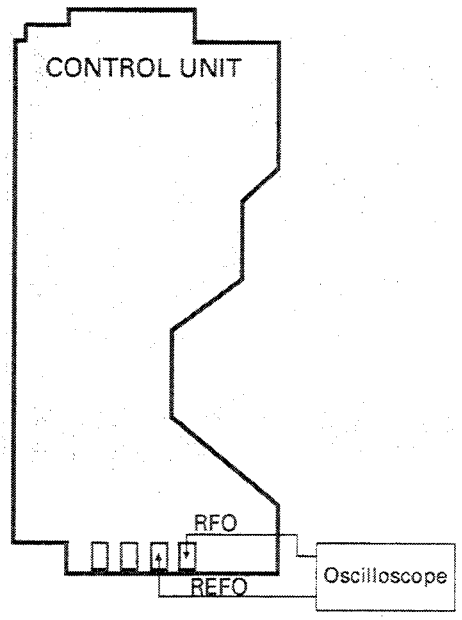

Adjustment Procedure

1) Play track number 18.
2) Adjust VR1003 so that the RFO waveform amplitude is a maximum and eye pattern is optimum.

Check

After adjustment the RFO waveform should have an amplitude of 1.7±0.65 Vpp (ABEX-784)

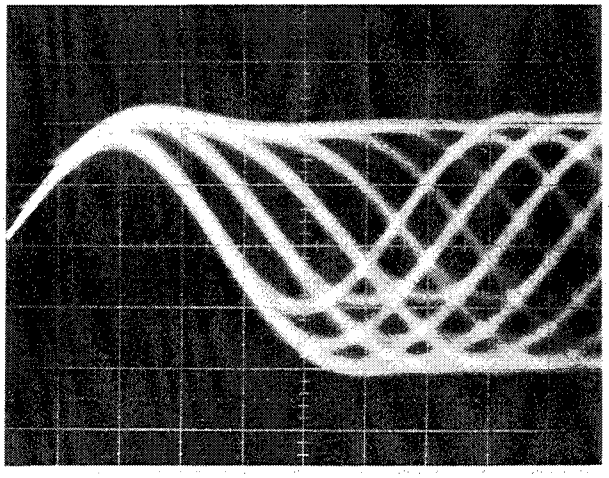

OK

Waveform 10

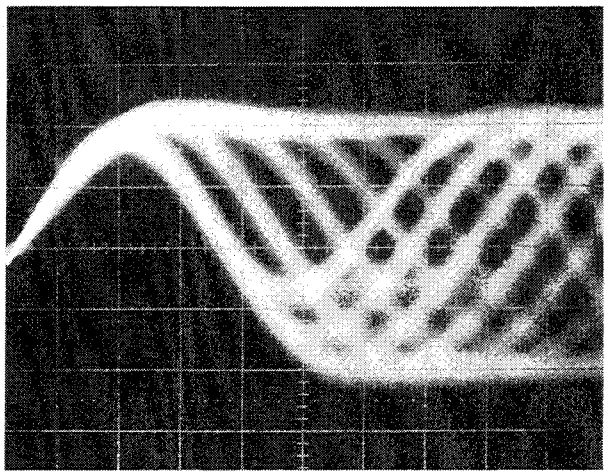

NG

AC Mode Before adjustment Waveform 11

6 RFO Offset Adjustment

·Purpose
To adjust the RFO waveform offset to an optimum.
·Symptoms of Mal-adjustment
Difficulty in closing focus, poor playability.

·Measuring Equipment / Jig	·Oscilloscope
·Measuring Point	·RFO
·Test Disc , Mode	·ABEX TCD-784, NORMAL MODE
·Adjustment Point	·VR1004 (RFO OFFSET VR)

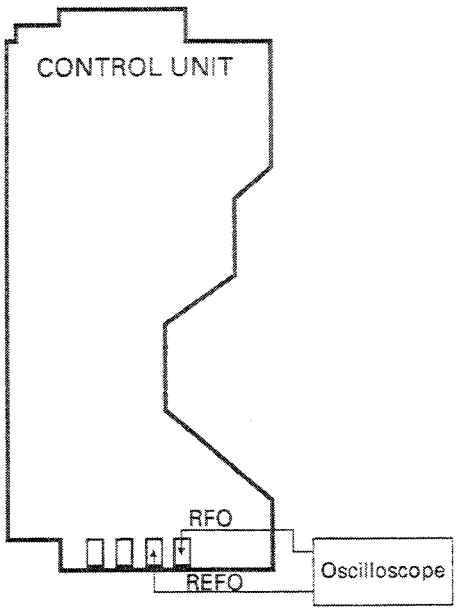

Adjustment Procedure
1) Play track number 18.
2) Adjust VR1004 so that the peak value of the upper envelope of the RFO waveform is at +1.1VDC w.r.t. REFO.(See waveform 12–14)

DC Mode
0.2V/div.
0.5µs/div.

+100mV NG

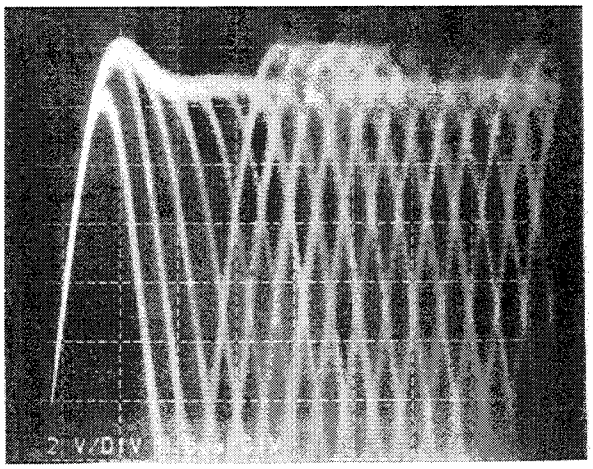

REFO →

Waveform 12

OK

1.1V

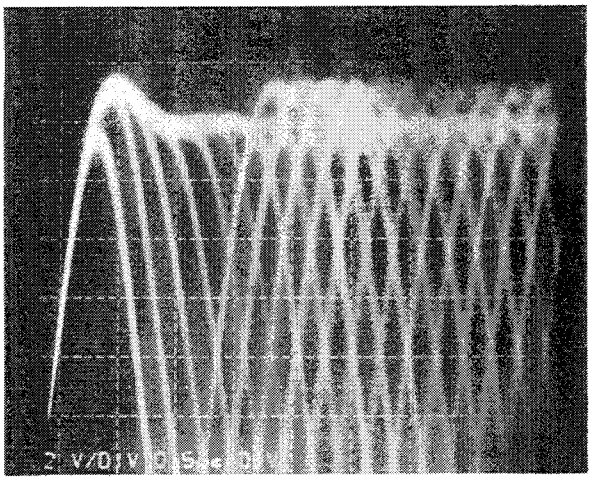

REFO →

Waveform 13

-100mV NG

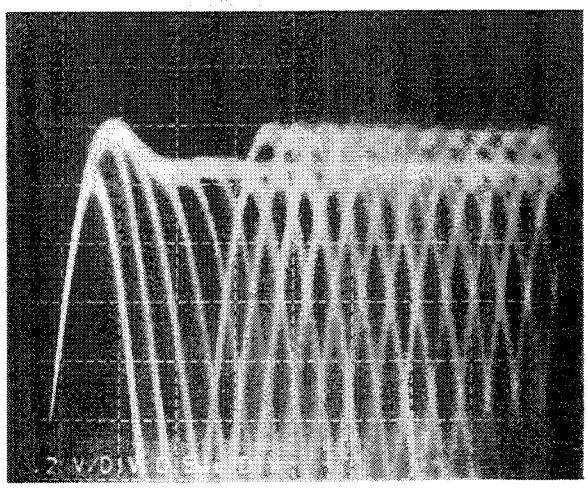

REFO →

Waveform 14

7 Tracking Error Offset Adjustment 2

·**Purpose :**
To check the offset of the tracking pre-amp is zero and adjust if necessary.
·**Symptoms of Mal-adjustment :**
Track search NG, Carriage runaway, Poor playability

·**Measuring Equipment / Jig**	·DC V Meter
·**Measuring Point**	·TEY
·**Test Disc , Mode**	·No disc, TEST MODE
·**Adjustment Point**	·VR1001(TE OFFSET VR)

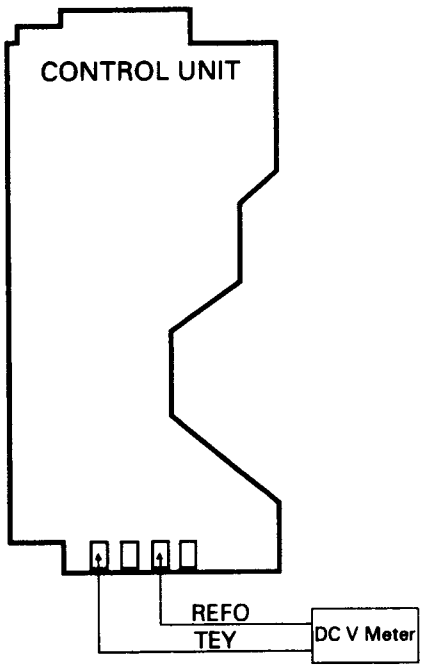

Adjustment Procedure
1.Switch the regulator on.
2.Using VR1001, adjust TEY to 0 ± 25mV w.r.t. REFO.

8 Tracking Balance Adjustment 2

·**Purpose :**
To equate the sensitivity of the F channel to that of the E channel.This needs only be done if the TE OFF-SET volume was re-adjusted in the previous step
·**Symptoms of Mal-adjustment:**
Track search NG,Poor playability, carriage runaway

·**Measuring Equipment / Jig**	·Oscilloscope, L.P.F.
·**Measuring Point**	·TEY
·**Test Disc , Mode**	·ABEX TCD-784, TEST MODE
·**Adjustment Point**	·VR1002 (T.BAL VR)

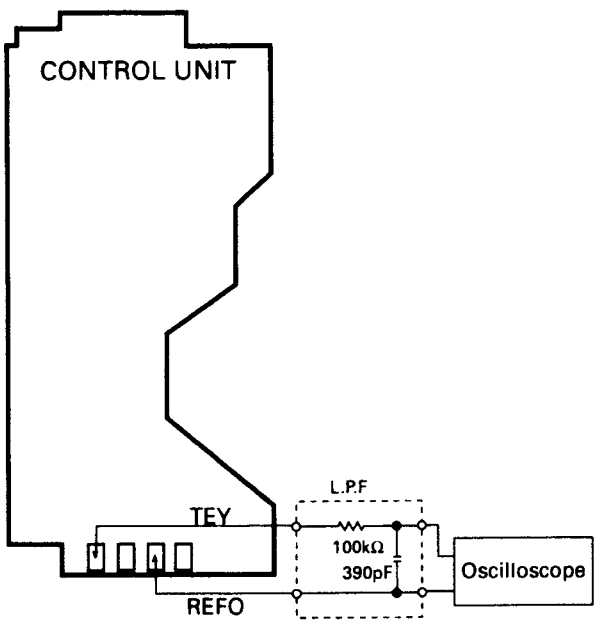

Adjustment Procedure
1.Load Disc and switch the regulator on.
2.Position the PU unit in the center of the disc using the **TR+** & **TR-** keys.
3.Close focus by pressing key **3**.
4.Observing the TEY waveform on the oscilloscope, adjust VR1002 until the positive and negative halves have the same amplitude (See waveform 7-9).
Check
After adjustment the TEY waveform should have an amplitude of 1.5±0.65 Vpp (ABEX-784)

4.2 TUNER SECTION

● **Connection Diagram**

NOTE:
Select C1 so that total capacity of 80pF is attained from the direction of the receiver jack.
Z: Output impedance of SSG.

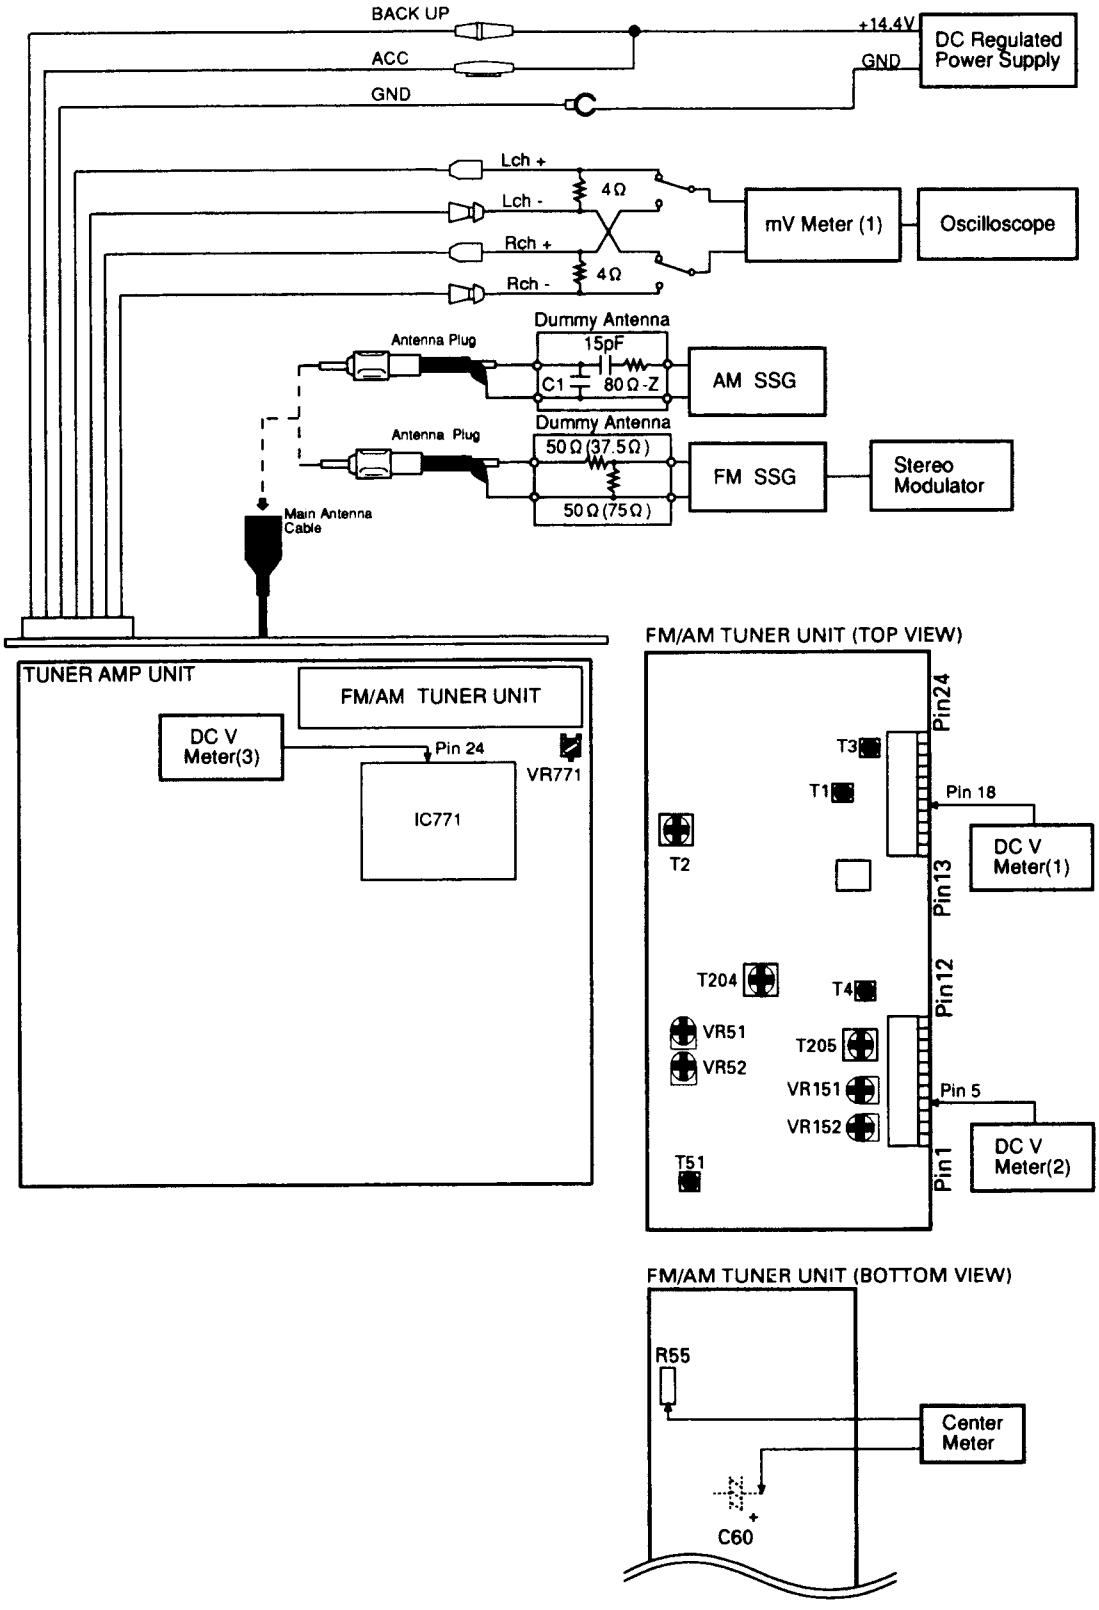

Fig.10

MW/LW ADJUSTMENT

	No.	AM SSG(400Hz,30%) Frequency(kHz)	AM SSG(400Hz,30%) Level(dB μV)	Displayed Frequency(kHz)	Adjustment Point	Adjustment Method (Switch Position)
IF	1	999	20	999	T204,T205,	mV Meter(1) : Maximum

FM ADJUSTMENT

Modulation M:MONO MOD., 400Hz 100%(75kHz Dev.)
S:STEREO MOD., 1kHz, L or R=90%, Pilot=10%(67.5kHz+7.5kHz Dev.)

NOTE:Before proceeding to further adjustments after switching power ON, let the tuner run for ten minutes to allow the circuits to stabilize.

	No.	FM SSG Frequency(MHz)	FM SSG Level(dBf)	Displayed Frequency(MHz)	Adjustment Point	Adjustment Method (Switch Position)
TUN Volt	1	108.0 M	65	108.0	T4	DC V Meter(1) : 6.5V±0.1V
IF	1	98.1 M	65	98.1	T51	Center Meter:0
ANT,RF	1	98.1 M	10	98.1	T1,T3	mV Meter(1) : Maximum
IFT	1	98.1 M	10	98.1	T2	mV Meter(1) : Maximum (STEREO MODE)
Soft Mute	1	98.1 M	65	98.1		mV Meter(1) : A (STEREO MODE)
	2	98.1 M	15	98.1	VR52	mV Meter(1) : A-3dB
MPX	1	98.1 S	65	98.1	VR152	mV Meter(1) : Separation Maximum
ARC	1	98.1 S	40	98.1	VR151	mV Meter(1) : Separation 5dB
SD	1	98.1 S	22	98.1	VR51	DC V Meter(2) : Approx. 5V (SEEK:ON)

FM SL ADJUSTMENT(DEH-605RDS)

Modulation MONO MOD., 400Hz 100%(75kHz Dev.)

No.	FM SSG Frequency(MHz)	FM SSG Level(dBf)	Displayed Frequency(MHz)	Adjustment Point	Adjustment Method (Switch Position)
1	106.1	52	106.1	VR771	DC V Meter(3) : 2.25V±0.05V

5. ERROR NUMBERS AND NEW TEST MODE

● Error Number Indication

If the CD should fail to operate or if an error has taken place during operation the player will enter into the error mode, and the cause of the error will be numerically indicated.

This is aimed at assisting in analysis or repair.

(1) Basic Means of Display

·With ERROR indicated in "MODE" on IP-BUS Display date, an error code is transmitted by the use of MIN and SEC. The MIN and SEC data will be identical.

·Examples of Display E-XX

(2) Error Codes

Error Code	Classification	Description	Cause/Detail
10	ELECTRIC	Carriage home failure	Carriage doesn't move to or from the innermost position →Home switch failed and/or carriage immobile
11	ELECTRIC	Focus failure	Focus failed →Defects, disc upside-down, severe vibration
12	ELECTRIC	SETUP failure Subcode failure	Spindle failed to lock or subcode unreadable →Spindle defective, defect, severe vibration
14	ELECTRIC	Mirror failure	Unrecorded CD-R The disc is upside-down, defects, vibration
17	ELECTRIC	Set up failure	AGC protect failed →Defects, disc upside-down, severe vibration
30	ELECTRIC	Search time out	Failed to reach target address →Carriage/tracking defective and/or defects
A0	SYSTEM	Power failure	Power overvoltage or short circuit detected →Switching transistor defective and/or power abnormal

"defects" means scratches, dirt etc an the surface of the disc.

● New Test Mode(aging operation and setup analysis)

The single CD player plays in normal mode. After being set up, it will display FOK (focus), LOCK (spindle), subcode, sound skip, protection against a mechanical error or the like, occurrence of an error, cause and time of an expiry, if any, (and disk number)

During the setup,the CD software operation status (internal RAM and C-point)is displayed.

(1) How to enter NEW TEST Mode

See the test mode flow chart Page 1-24.

(2) Relations of keys between TEST and NEW TEST Modes

Keys	Test Mode		New Test Mode	
	Regulator OFF	Regulator ON	PLAY in progress	Error Occurred, Protection Activated
BAND/REL	Regulator ON	Regulator OFF	—	Time of occurrence/ cause of error select
TR+	—	FWD-Kick	TR+	—
TR-	—	REV-Kick	TR-	—
1	—	Tracking close	PAUSE	—
2	—	Tracking open	REPEAT	—
3	—	Focus close	RANDOM	—
TR+ & TR-	To New Test Mode	Focus Mode Select	AUTO/MANU	TRACK No./ time of occurrence select

Operations,such as EJECT, CD ON/OFF, etc. are performed normally

(3) Error Cause (Error Number) Code

Error Code	Classification	Mode	Description	Cause/Detail
40	ELECTRIC	PLAY	FOK=L	Put out of focus
41	ELECTRIC	PLAY	LOCK=L 150ms	Spindle unlock
42	ELECTRIC	PLAY	Subcode unacceptable 500ms	Failed to read subcode
43	ELECTRIC	PLAY	Sound skipped	Last address memory operated

Scratch, Stain, Vibration, Servo defect, etc...

(4) Indicating an Operation Status During Setup

Status No.	Description	Protection operation
01	Carriage home mode started	None
02	Carriage moving inwards	10-second time out, Home switch failed
03	Carriage moving outwards	10-second time out, Home switch failed
05	Carriage moving outwards	None
11	Setup started	None
12	Spindle turn/Focus search started	None
13	Waiting for focus closure (XSI=L)	Failure to close focus
10,14	Waiting for focus closure (FOK=H)	Failure to close focus
15,16,17	Focus closed,Tracking open	Focus disrupted
18	During focus AGC Subcode waiting	Focus disrupted
19	During tracking AGC	Disrupted focus
20	Waiting for MIRR ,LOCK or subcode read Carriage closed, SPINDLE=ADAPTIVE	Focus disrupted, MIRR NG, Failure to lock, failed to read subcode

(5) Example of Display.

·SET UP in progress

8 digits

TNo.	Min	Sec
11	11	11

4 digits(Auto)

TNo.
11

4 digits(Manual)

Min	Sec
11	11

·Operation (PLAY, SEARCH, etc.) in progress perfectly identical with that in the normal mode.

·Protection/Error upon occurrence(4 digits display)

(a) Error number indicated

E–xx

Select the display with the BAND/REL key.

(b) Track number indicated

TNo.
10

(c) Absolute time indicated

Select the display with the TR+ and TR- keys.

Min Sec
40 05

·Protection/Error upon occurrence(8 digits display)

(a) Error number indicated

ERROR–xx

Select the display with the BAND/REL key.

(b) Track number and
absolute time indicated

TNo.	Min	Sec
10	40	05

6. EXPLODED VIEW PARTS LIST

● **Chassis(Exploded View:Page 2-9)**

NOTES:

● Parts marked by "✱"are generally unavailable because they are not in our Master Spare Parts List.

● Parts marked by "◉"are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.

● **Parts List(DEH-605RDS)**

Mark	No.	Description	Part No.
	1	Screw	BSZ26P050FMC
	2	Screw	BSZ26P080FMC
	3	Screw	PSS26P060FZK
	4	Screw	BSZ30P060FMC
	5	Screw	BSZ30P120FMC
	6	Cord Assy	CDE4142
	7	Cap	CNS1472
	8	Resistor	RS1/2P102JL
	9	Screw	CBA1284
	10	Handle	CNC4947
	11	Bush	CNV1009
	12	Case	CNB1817
	13	Holder	CNC3850
	14	Holder	CNC4946
	15	Insulator	CNM3726
	16	P.C.Board	CNP3534
	17	Case	CNS2269
	18	Cushion	CNM3074
	19	Cap	CNV2680
	20	Holder	CNV3620
	21	Chassis Unit	CXA5925
	22	CD Mechanism Module	CXK2810
	23	Tuner Amp Unit	CWX1648
	24	Screw	BSZ26P120FMC
	25	Cord	CDE4136
	26	Antenna Cable	CDH1146
	27	Plug(CN951)	CKM1139
	28	Plug(CN851)	CKS1238
	29	Connector(CN601)	CKS1529
	30	Connector(CN651)	CKS1546
	31	Holder	CNC4881
	32	Holder	CNC4882
	33	Bracket	CNC4940
	34	Holder	CNC5013
	35	Bracket	CNC5015
	36	Insulator	CNM3825
	37	Heat Sink	CNR1307
	38	Spacer	CNM3343
	39	IC(IC551)	PA3029A
	40	Screw	BSZ30P060FMC
	41	Bracket	CNC5014

Mark	No.	Description	Part No.
	42	FM/AM Tuner Unit	CWE1313
	43	Antenna Jack	CKX1043
	44	Holder	CNC4880
	45	Detach Grille Assy	CXA5860
	46	Screw	BUZ20P100FZK
	47	Button	CAC4040
	48	Button	CAC4041
	49	Button	CAC4042
	50	Button	CAC3741
	51	Button	CAC3742
	52	Button	CAC4039
	53	Button	CAC3744
	54	Grille	CNS2817
	55	Cover	CNS2818
	56	Key Board Unit	CWX1661
	57	LCD	CAW1228
	58	Holder	CNC5009
	59	Lens	CNV3671
	60	Rubber	CNV3672
	61	Connector	CNV3673
	62	Rubber	CNV3675
	63	Spacer	CNM4042
	64	Plug	CKS2402
	65	Panel Assy	CXA5875
	66	Screw	BPZ20P060FMC
	67	Spring	CBH1484
	68	Socket	CKS2782
	69	Holder	CNC4943
	70	Holder	CNC4944
	71	P.C.Board	CNP3532
	72	Arm	CNV3696
	73	Arm	CNV3697
	74	Panel Unit	CXA5913
	75	Screw	PMS20P030FZK
	76	Detach Mechanism Unit	CXA5188
	77	Washer	CBF1039
	78	Spring	CBH1484
	79	Arm	CNV3292
	80	Arm	CNV3293
	81	Holder Unit	CXA5124
	82	IC(IC971)	PA2023A
	83-90	·····	

● **The DEH-505SDK, DEH-505, DEH-405SDK and DEH-405 Parts Lists enumerate the parts which differ from those enumerated in the DEH-605RDS Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The DEH-605RDS Parts List is given on page 1-38.**

Mark No.	Description	DEH-605RDS	DEH-505SDK	DEH-505	DEH-405SDK	DEH-405
6	Cord Assy	CDE4142	CDE4141	CDE4142	CDE4141	CDE4142
19	Cap	CNV2680	·····	·····	CNV2680	CNV2680
21	Chassis Unit	CXA5925	CXA5933	CXA5934	CXA5935	CXA5934
23	Tuner Amp Unit	CWX1648	CWX1649	CWX1651	CWX1650	CWX1652
25	Cord	CDE4136	·····	·····	CDE4136	CDE4136
28	Plug(CN851)	CKS1238	·····	·····	CKS1238	CKS1238
29	Connector(CN601)	CKS1529	CKS1534	CKS1534	CKS1534	CKS1534
31	Holder	CNC4881	CNC4881	·····	CNC4881	·····
32	Holder	CNC4882	CNC4882	·····	CNC4882	·····
35	Bracket	CNC5015	CNC5016	CNC5016	CNC5015	CNC5015
36	Insulator	CNM3825	CNM3825	·····	CNM3825	·····
42	FM/AM Tuner Unit	CWE1313	CWE1311	CWE1311	CWE1311	CWE1311
45	Detach Grille Assy	CXA5860	CXA5861	CXA5866	CXA5865	CXA5867
52	Button	CAC4039	·····	·····	·····	·····
54	Grille	CNS2817	·····	·····	CNS2835	CNS2837
	Grille Unit	·····	CXA5921	CXA5922	·····	·····
56	Key Board Unit	CWX1661	CWX1662	CWX1662	CWX1664	CWX1664
57	LCD	CAW1228	CAW1229	CAW1229	CAW1229	CAW1229
58	Holder	CNC5009	CNC5010	CNC5010	CNC5010	CNC5010
65	Panel Assy	CXA5875	CXA5876	CXA5876	CXA5876	CXA5876
68	Socket	CKS2782	CKS2783	CKS2783	CKS2783	CKS2783
71	P.C.Board	CNP3532	CNP3526	CNP3526	CNP3526	CNP3526
83	Plug(CN851)	·····	CKS1242	CKS1242	·····	·····
84	Cord	·····	CDE4138	CDE4138	·····	·····
85	Cap	·····	CNV2680	CNV2680	·····	·····
86	Spacer	·····	CNM4027	CNM4027	·····	·····
87	Remote Control Assy	·····	CXA6155	CXA6155	·····	·····
88	Battery Cover	·····	CNS2850	CNS2850	·····	·····
89	IC(IC922)	·····	RPM-678CBR	RPM-678CBR	·····	·····
90	Spacer	·····	CNM3882	·····	CNM3882	·····

● **CD Mechanism Module(Exploded View:Page 2-11)**

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	PMS26P040FMC	11	Screw	CBA1077
2	Control Unit	CWX1641	12	Screw	CBA1230
3	Connector(CN1001)	CKS1955	13	Screw	CBA1296
4	Connector(CN1701)	CKS2775	14	Washer	CBF1038
5	Connector(CN1002)	CKS2811	15	Washer	CBF1060
6	Connector(CN1801)	CKS2196	16	Spring	CBH1415
7	CD Mechanism Unit	CXA6475	17	Spring	CBH1417
8	Screw	BMZ20P030FMC	18	Spring	CBH1418
9	Screw	BSZ20P040FMC	19	Spring	CBH1421
10	Screw	CBA1041	20	Spring	CBH1423

Mark	No.	Description	Part No.
	21	Spring	CBH1457
	22	Spring	CBH1552
	23	Spring	CBH1553
	24	Spring	CBH1554
	25	Spring	CBH1555
	26	Spring	CBH1556
	27	Spring	CBH1557
	28	Spring	CBH1558
	29	Spring	CBH1559
	30	Spring	CBH1560
	31	Spring	CBH1576
	32	Spring	CBH1577
	33	Spring	CBH1578
	34	Spring	CBH1583
	35	Spring	CBH1628
	36	Spring	CBL1170
	37	Spring	CBL1171
	38	Spring	CBL1172
	39	Connector	CDE4147
	40	PU Unit	CGY1031
	41	Shaft	CLA2220
	42	Roller	CLA2255
	43	Shaft	CLA2256
	44	Frame	CNC4888
	45	Arm	CNC4889
	46	Lever	CNC4891
	47	Lever	CNC4892
	48	Bracket	CNC4893
	49	Arm	CNC4895
	50	Arm	CNC4898
	51	Bracket	CNC5424
	52	Spacer	CNM3315
	53	Sheet	CNM4066
	54	Sheet	CNM3693
	55	Bracket	CNM3917
	56	Belt	CNT1053
	57	Clamper Unit	CXA6552
	58	Guide	CNV2891
	59	Holder	CNV3276
*	60	Roller	CNV3412
	61	Damper	CNV3720
	62	Arm	CNV3565
	63	Arm	CNV3566
	64	Gear	CNV3567
	65	Gear	CNV3568

Mark	No.	Description	Part No.
	66	Gear	CNV3569
	67	Gear	CNV3570
	68	Arm	CNV3571
	69	Holder	CNV3572
	70	Gear	CNV3573
	71	Holder	CNV3574
	72	Holder	CNV3575
	73	Holder	CNV3576
	74	Rack	CNV3577
	75	Arm	CNV3578
	76	Plate	CNV3629
	77	Guide	CNV3694
	78	P.C.Board	CNP3418
	79	P.C.Board	CNP3666
	80	Screw Unit	CXA2375
	81	Motor Unit	CXA4649
	82	Chassis Unit	CXA5602
	83	Arm Unit	CXA5603
	84	Arm Unit	CXA5604
	85	Bracket Unit	CXA5605
	86	Lever Unit	CXA5606
	87	Arm Unit	CXA5607
	88	Arm Unit	CXA5608
	89	Gear Unit	CXA5609
	90	Motor Unit	CXA5703
	91	Bracket Unit	CXA5938
	92	Frame Unit	CXA6192
	93	Motor Unit	CXA6456
	94	Screw	JFZ17P035FNI
	95	Screw	JFZ20P014FMC
	96	Screw	JFZ20P020FZK
	97	Screw	JFZ20P025FMC
	98	Photo-transistor	PT4800
	99	Washer	YE15FUC
	100	Washer	YE20FUC
	101	Spacer	CNM3999
	102	Sheet	CNM4028
	103	Holder	CNV3805
	104	Spacer	CNC5436
	105	Screw	JFZ20P045FMC

7. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

=====Circuit Symbol & No.	Part Name=====	Part No.
Unit Number	: CWE1313(DEH-605RDS) CWE1311(DEH-505SDK,505,405SDK,405)	
Unit Name	: FM/AM Tuner Unit	
MISCELLANEOUS		
IC 1		PA2021B
IC 2		PA2022A
Q 1		3SK195
Q 2 202		2SC2712
Q 3		DTC124EU
Q 51		DTC124TU
Q 52		2SC4207
Q 53		2SA1586
Q 201		2SK435
D 1		1SV172
D 2 3 4		KV1410
D 5		MA151WK-MT
D 6 151 201 202		MA157-MR
D 203		SVC203CP
L 1	Inductor	LCTBR12K2125
L 2 52	Ferri-Inductor	LAU150K
L 51	Ferri-Inductor	LAU2R2K
L 201	Ferri-Inductor	LAU4R7K
L 202	Coil 1mH	CTF1026
L 203	Inductor	LAU390K
L 204	Ferri-Inductor	LAU680K
L 205	Ferri-Inductor	LAU330K
L 206	Inductor	CTF1198
T 1	Coil	CTC1078
T 2	Coil	CTE1077
T 3	Coil	CTC1077
T 4	Coil	CTC1079
T 51	Coil	CTC1081
T 202	Coil	CTB1102
T 203	Coil	CTE1076
T 204	Coil	CTE1074
T 205	Coil	CTE1075
AR 1	Capacitor with Discharge Gap	DSP-201M
CF 1 51	52(DEH-605RDS)	CTF1292
CF 1 51	52(DEH-505SDK,505,405SDK,405)	CTF1290
CF 201	Ceramic Filter	CTF1291
CF 202	Ceramic Filter	CTF1300
X 151	Ceramic Resonator	CSS1308
X 201	Crystal Resonator	CSS1111
VR 51	Semi-fixed 47kΩ(B)	CCP1210
VR 52	Semi-fixed 68kΩ(B)	CCP1211
VR 151	Semi-fixed 10kΩ(B)	CCP1206
VR 152	Semi-fixed 22kΩ(B)	CCP1208

=====Circuit Symbol & No.	Part Name=====	Part No.
RESISTORS		
R 1		RS1/16S223J
R 2		RS1/16S271J
R 3 10 16 18 20		RS1/16S223J
R 4 5		RS1/16S0R0J
R 6		RS1/16S680J
R 7 14		RS1/16S563J
R 8		RS1/16S152J
R 9		RS1/16S473J
R 11		RS1/16S474J
R 12		RS1/16S123J
R 13 15 217		RS1/16S563J
R 17 206		RS1/16S102J
R 21 22		RS1/16S560J
R 51 74		RS1/16S391J
R 52		RS1/16S152J
R 53		RS1/16S751J
R 55 157		RS1/16S682J
R 56		RS1/16S332J
R 58 73 203		RS1/16S102J
R 60		RS1/16S123J
R 72		RS1/16S391J
R 101		RS1/16S224J
R 102 222		RS1/16S822J
R 103		RS1/16S223J
R 104		RS1/16S822J
R 151 152		RS1/16S272J
R 153		RS1/16S103J
R 154 155 202		RS1/16S103J
R 156		RS1/16S153J
R 158		RS1/16S183J
R 159 216		RS1/16S103J
R 204 213		RS1/16S222J
R 205		RS1/16S823J
R 207		RS1/16S225J
R 208		RS1/16S752J
R 209		RS1/16S822J
R 214		RS1/16S333J
R 215		RS1/16S330J
R 218		RS1/16S333J
R 220		RS1/16S100J
R 221		RS1/16S473J
CAPACITORS		
C 1 54		CCSRCH220J50
C 2		CCSRCH390J50
C 3 102 154 163 203 210		CKSQYB473K16
C 4 12		CCSRCH070D50
C 5 53		CCSRCH270J50

=====Circuit Symbol & No. Part Name=====										Part No.
C	6									CKSRYB222K50
C	7									CCSRCH040C50
C	8	105								CKSRYB222K50
C	9	16								CCSRCH470J50
C	10									CCSRCH090D50
C	11									CKSRYB223K25
C	13									CCSRCH070D50
C	14									CKSRYB103K50
C	15	22	55	101	151	164	219	220	225	227 CKSQYB104K25
C	17									CCSRCH100D50
C	18									CCSRCH080D50
C	19	20	21	52	62	71	74	201	207	209 CKSRYB103K50
C	23									CEA3R3M50LL
C	24	29	73	106	213					CKSRYB223K25
C	25									CKSRYB682K50
C	26	28	231							CEA101M16LL
C	51	223								CKSRYB103K50
C	56	162	211							CEA010M50LL
C	57	64	66	237						CCSRCH101J50
C	58									CKSRYB153K25
C	60									CEAR47M50LL
C	61									CEAR22M50LL
C	63									CKSQYB104K25
C	65									CEA0R1M50LL
C	103									CKSQYB222K50
C	104									CEA4R7M35LL
C	152	153								CKSRYB223K25
C	155									CEAR47M50LL
C	156									CKSQYB563K16
C	158	212								CEA100M16LL
C	159									CCSRCH331J50
C	160									CKSYB105K16
C	161									CKSQYB104K25
C	202									CKSRYB332K50
C	204									CCSRCH120J50
C	205									CCSRCH560J50
C	206	221								CCSRCH680J50
C	208									CEA470M16LL
C	214	230								CKSRYB472K50
C	215	228								CKSRYB103K50
C	216									CCSRCH100D50
C	217									CCSRCH221J50
C	218	234								CEA220M16LL
C	222									CCSRCH150J50
C	224									CCSRCH181J50
C	226									CEA4R7M35LL
C	229									CEAR68M50LL
C	232									CCSRCH390J50
C	233									CKSRYB332K50
C	235									CKSQYB104K25
C	236									CKSRYB223K25

Unit Number : CWX1648(DEH-605RDS)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	471							NJM4558L
IC	481							LC7538JMHS
IC	482	483						NJM4558MD
IC	501							LC72140M
IC	551							PA3029A
IC	601							PD4483B
IC	771							CWV1044
IC	961							PAJ001A
IC	971							PA2023A
Q	451	452	502	504	508	771	773	2SC2712

=====Circuit Symbol & No. Part Name=====										Part No.
Q	453	454	455	456						DTC314TK
Q	457									2SA1162
Q	501									2SC3295
Q	503									2SC3098
Q	505	509								2SK208
Q	551	601	604	606	864	957	983			DTC114EK
Q	602	863	982							DTA114EK
Q	603	605	607	956						2SB1238
Q	772									DTC124EK
Q	861	862								2SC2712
Q	981									2SD2396
D	501	971								MA151WK-MT
D	504	505								MA3027H
D	771	972	973							1SS133
D	772									MTZ4R7B
D	861									MA151WA-MN
D	951	952	957	961						ERA15-02VH
D	956									ERA15-10VH
D	981									RB100AVH
D	984									HZS9LC3

L	501									Ferri-Inductor	CTF-157
L	502									Ferri-Inductor	LAU220K
L	601	602	603							Ferri-Inductor	LAU470K
TH	601									Thermistor	CCX1008
IB	551	552								Diode Array	CWW1338
IB	601									Diode Array	CWW1336
IB	602									Diode Array	CWW1337
X	501									Crystal Resonator	CSS1011
X	601									Crystal Resonator	CSS1023
VR	771									Semi-fixed 2.2kΩ(B)	VRMB6VS222
BZ	601									Buzzer	CPV1011
TUN	501									FM/AM Tuner Unit	CWE1313

RESISTORS

R	451	452	514	515	521	522	602	604	618	619	RS1/10S473J
R	453	454									RS1/10S0R0J
R	455	456	457	458	463	464	529	533	536	538	RS1/10S102J
R	459	460	505	865	866	952	956				RS1/10S223J
R	467	468	488	489	490	491					RS1/10S103J
R	471	472									RS1/10S272J
R	473	474									RD1/4PS163JL
R	475	476									RS1/10S273J
R	477	478									RS1/10S331J
R	481	482									RS1/10S272J
R	485	486	487	566	567	568	569				RD1/4PS472JL
R	492	493	494	495	507	974					RS1/10S103J
R	503	508	509	512	516	530	551	552	553	554	RS1/10S472J
R	504	511	513	534	535	601	603	863			RS1/10S222J
R	506										RS1/10S221J
R	510										RS1/10S123J
R	517	518	519	520							RD1/4PS222JL
R	523										RS1/10S563J
R	524	784									RS1/10S101J
R	525	782									RS1/10S332J
R	526										RS1/10S331J
R	527										RS1/10S821J
R	528										RS1/10S680J
R	531										RS1/8S103J
R	532	781									RS1/10S152J
R	539	540	541	605	606	616	652	657	658	659	RS1/10S102J
R	542										RS1/10S822J
R	545	546									RS1/8S0R0J
R	548										RS1/10S330J
R	549										RD1/4PS102JL

=====Circuit Symbol & No. Part Name=====	Part No.
R 555 556	RS1/10S2R2J
R 557	RD1/4PS102JL
R 558 559 560 561 562 563 564 565	RD1/4PS2R2JL
R 570	RD1/4PS752JL
R 571	RS1/10S560J
R 573	RS1/10S682J
R 617	RS1/8S473J
R 620 963	RS1/10S683J
R 621 634 772 773 774 775 776 777 778	RS1/10S473J
R 622 624	RD1/4PS222JL
R 623 625 971	RS1/10S104J
R 626	RS1/10S183J
R 627 629 632 957 973 984	RS1/10S472J
R 628 630 958	RD1/4PS272JL
R 633	RD1/4PS472JL
R 645 646 647	RS1/10S472J
R 648	RS1/10S682J
R 651	RD1/4PS102JL
R 653 654 655 656	RS1/10S681J
R 660 662 663 664 780 783 972	RS1/10S102J
R 670 671 672	RD1/4PS472JL
R 673	RD1/4PS103JL
R 771	RS1/10S471J
R 861 862	RD1/4PS821JL
R 864	RS1/8S222J
R 951	RS1/10S0R0J
R 959	RD1/4PS513JL
R 961	RS1/8S823J
R 962	RS1/10S363J
R 964	RD1/4PS473JL
R 965	RD1/4PS273JL
R 966	RS1/10S103J
R 981	RD1/4PS471JL
R 982	RD1/4PS221JL
R 983	RS1/10S392J
CAPACITORS	
C 451 452	CEAS4R7M25
C 471 472 481 482 861	CEAS100M16
C 473 474	CCSQCH560J50
C 475 951 963 1000 μ F/16V	CCH1149
C 476 477	CKSQYB393K25
C 483 484 485 486 491 492 553 567 568 569	CEA100M16LL
C 487 488	CKSYB224K16
C 489 490	CKSQYB272K50
C 493 494 506 507	CKSQYB223K25
C 495 496	CKSQYB562K50
C 497 498 499 500	CCSQCH330J50
C 501 505 509 512 517	CCSQCH101J50
C 502 607 982	CKSQYB473K25
C 504 510 514 523 772 952 954	CKSQYB103K25
C 511	CCSQCH681J50
C 513 0.047 μ F	CCG1008
C 515	CFTNA474J50
C 516	CEA4R7M35LL
C 518 519	CCSQCH120J50
C 520 4.7 μ F/16V	CCH1165
C 551 552 554 555 606	CKSQYB102K50
C 556 3300 μ F/16V	CCH1150
C 557 558 601 609 956	CKSQYB104K25
C 559 560 561 562 563 564 565 566	CQMA104J50
C 570 608	CEA100M16LL
C 571 572 573 574	CCSQCH220J50
C 575	CEAS4R7M25
C 603	CKSQYB104K25
C 604 605	CCSQCH150J50
C 610	CKSQYB104K25

=====Circuit Symbol & No. Part Name=====	Part No.
C 612 613	CKSQYB102K50
C 771	CEAR47M50LL
C 773 862	CEA100M16LL
C 863 864	CCSQCH221J50
C 962	CEAR22M50LL
C 964	CEA2R2M50LL
C 965	CEA220M6R3LL
C 971	CEA010M50LL
C 972	CEAS470M10
C 973	CEAS101M10
C 974	CEAS221M10
C 975 330 μ F/10V	CCH1181
C 981	CEAS331M16

Unit Number : CWX1641
Unit Name : Control Unit

MISCELLANEOUS

IC 1001		UPC2571GS
IC 1201		UPD63700GF
IC 1301		PA3026
IC 1302		XRA6285FP
IC 1303		NJM4558M
IC 1601		TC9268F
IC 1602		TA2063F
IC 1701		PQ05TZ51
Q 1001		2SB1260
Q 1601 1602		2SD1781K
Q 1603		2SB709A
D 1601		MA151WA-MN
D 1701 1702 1703 1704		SC016-2
D 1801 1802	Chip LED	CL200IRX
L 1601	Inductor	LCTBR39K2125
X 1601	Crystal Resonator	CSS1067
S 1801 1802	Switch(Home,Clamp)	CSN1028
VR1001	Semi-fixed 2.2kΩ(B)	CCP1177
VR1002	Semi-fixed 22kΩ(B)	CCP1183
VR1003 1004	Semi-fixed 47kΩ(B)	CCP1185

RESISTORS

R 1001	RS1/8S100J
R 1002	RS1/8S120J
R 1003 1201 1307 1309	RS1/16S103J
R 1004 1013 1024 1025 1311 1315 1318 1708	RS1/16S102J
R 1005	RS1/16S823J
R 1006	RS1/16S182J
R 1007	RS1/16S333J
R 1011 1012	RS1/16S683J
R 1014 1015 1310	RS1/16S473J
R 1018	RS1/16S622J
R 1019	RS1/16S563J
R 1020	RS1/16S622J
R 1021	RS1/16S513J
R 1022	RS1/16S133J
R 1027	RS1/16S183J
R 1028	RS1/16S822J
R 1301 1302	RS1/16S222J
R 1303 1606 1607	RS1/16S223J
R 1304	RS1/16S123J
R 1305 1306 1705	RS1/16S332J
R 1308	RS1/16S163J
R 1314	RS1/16S0R0J
R 1317	RS1/16S473J
R 1601	RS1/16S301J
R 1604 1605	RS1/16S102J
R 1608 1609	RS1/16S162J
R 1610	RS1/16S103J
R 1801 1802	RS1/8S821J

=====Circuit Symbol & No.	Part Name=====	Part No.
CAPACITORS		
C 1001 1008 1010 1011 1303		CKSRYB102K50
C 1002 1609 1706		CEV101M6R3
C 1003		CKSQYB104K16
C 1004		CEV470M6R3
C 1005		CCSRCH101J50
C 1006		CKSRYB561K50
C 1007 1704		CKSYB334K16
C 1009		CCSRCH181J50
C 1012 1307 1310 1605 1608		CKSRYB103K50
C 1013		CKSRYB472K50
C 1014		CCSRCH220J50
C 1015 1016 1017 1018 1201 1202		CKSYF105Z16
C 1021		CKSYB104K16
C 1022		CKSRYB332K50
C 1023		CKSRYB561K50
C 1301 1302		CKSRYF683Z25
C 1304		CKSRYB152K50
C 1305		CKSRYB271K50
C 1308		CKSRYF103Z50
C 1309		CEV470M16
C 1601		CCSRCH151J50
C 1602		CCSRCH100D50
C 1603 1604 1705		CKSYB224K16
C 1606 1607		CCSRCH090D50
C 1612		CEV220M6R3
C 1613 1614		CEV4R7M35
C 1701 1702		CCSRCH100D50
C 1703		CEV220M16
Unit Number : CWX1661(DEH-605RDS)		
Unit Name : Key Board Unit		
MISCELLANEOUS		
IC 901		PD6122A
Q 901 902		2SB1132
Q 903		UN2211
D 901 902		MA153-MC
D 903		MA3047M
L 901	Coil	LCTB150K3216
X 901	Ceramic Resonator	CSS1084
IL 901 902 903	Lamp 14V 40mA	CEL1297
IL 904 905 906	Lamp 14V 40mA	CEL1295
LCD901	LCD	CAW1228
RESISTORS		
R 901 902 903 908		RS1/8S222J
R 904 906		RS1/10S472J
R 905 907		RS1/10S332J
R 909 910		RS1/8S471J
R 911 912 913 914 915 916 917 918 919		RS1/10S471J
R 920		RS1/10S121J
CAPACITORS		
C 901 902 903 904		CKSQYB103K25

=====Circuit Symbol & No.	Part Name=====	Part No.
Unit Number : CWX1662(DEH-505SDK,505) CWX1664(DEH-405SDK,405)		
Unit Name : Key Board Unit		
MISCELLANEOUS		
IC 921		LC7582E
IC 922	(DEH-505SDK,505)	RPM-678CBR
D 921 922 923		MA153-MC
IL 921 922 923	Lamp 14V 40mA	CEL1295
IL 924 925 926	Lamp 14V 40mA	CEL1297
LCD901	LCD	CAW1229
RESISTORS		
R 921	(DEH-505SDK,505)	RS1/10S470J
R 923 926 930 934		RS1/8S822J
R 924 927 931 935		RS1/10S133J
R 925 928 932 936		RS1/10S223J
R 929 933 937		RS1/10S683J
R 938 939		RS1/10S104J
R 940 941 942		RS1/10S103J
CAPACITORS		
C 921	(DEH-505SDK,505)	CEA470M6R3LS
C 922		CCSQCH301J50
C 923		CKSQYF104Z25
C 924		CKSQYF224Z25
C 925		CKSQYB103K50
Unit Number :		
Unit Name : Detector P.C.Board		
P 1 2	Photo Transistor	PT4800
Miscellaneous Parts List		
M 1	Motor Unit(Spindle)	CXA5703
M 2	Motor Unit(Carriage)	CXA4649
M 3	Motor Unit(Loading)	CXA6456
	PU Unit	CGY1031

● **The DEH-505SDK, DEH-505, DEH-405SDK and DEH-405 Parts Lists enumerate the parts which differ from those enumerated in the DEH-605RDS Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The DEH-605RDS Parts List is given on page 1-42.**

Tuner Amp Unit

Circuit Symbol & No.	DEH-605RDS Part No.	DEH-505SDK Part No.	DEH-505 Part No.	DEH-405SDK Part No.	DEH-405 Part No.
Tuner Amp Unit	CWX1648	CWX1649	CWX1651	CWX1650	CWX1652
IC601	PD4483B	PDR009B	PDR009B	PDR009B	PDR009B
IC771	CWV1044	CWV1045	·····	CWV1045	·····
Q455,456,771	2SC2712	2SC2712	·····	2SC2712	·····
Q601	DTC114EK	DTC114EK	·····	DTC114EK	·····
Q773	2SC2712	·····	·····	·····	·····
Q851,852	·····	2SC2712	2SC2712	·····	·····
D771	1SS133	·····	·····	·····	·····
D772	MTZ4R7B	MTZ4R7B	·····	MTZ4R7B	·····
VR771	VRMB6VS222	·····	·····	·····	·····
BZ601	CPV1011	CPV1011	·····	CPV1011	·····
X601	CSS1023	CSS1065	CSS1065	CSS1065	CSS1065
FM/AM Tuner Unit	CWE1313	CWE1311	CWE1311	CWE1311	CWE1311
R605,606,780	RS1/10S102J	RS1/10S102J	·····	RS1/10S102J	·····
R607,779	·····	RS1/10S0R0J	·····	RS1/10S0R0J	·····
R608	·····	RS1/10S0R0J	RS1/10S0R0J	RS1/10S0R0J	RS1/10S0R0J
R609	·····	·····	·····	RS1/10S0R0J	RS1/10S0R0J
R611	·····	·····	RS1/10S473J	·····	RS1/10S473J
R613	·····	RS1/10S473J	RS1/10S473J	·····	·····
R614	·····	RS1/10S473J	RS1/10S473J	RS1/10S473J	RS1/10S473J
R615	·····	RS1/10S102J	·····	RS1/10S102J	·····
R636,637,638,639	·····	RD1/4PS103JL	RD1/4PS103JL	RD1/4PS103JL	RD1/4PS103JL
R640,641,642,643	·····	RS1/10S103J	RS1/10S103J	RS1/10S103J	RS1/10S103J
R644	·····	RS1/10S103J	RS1/10S103J	RS1/10S103J	RS1/10S103J
R648	RS1/10S682J	RS1/10S0R0J	RS1/10S0R0J	RS1/10S0R0J	RS1/10S0R0J
R649	·····	RS1/10S105J	RS1/10S105J	RS1/10S105J	RS1/10S105J
R673	RD1/4PS103JL	·····	·····	·····	·····
R771	RS1/10S471J	RS1/10S471J	·····	RS1/10S471J	·····
R772	RS1/10S473J	RS1/10S473J	·····	RS1/10S473J	·····
R773,774,775,776	RS1/10S473J	·····	·····	·····	·····
R777,778	RS1/10S473J	·····	·····	·····	·····
R781	RS1/10S152J	RS1/10S152J	·····	RS1/10S152J	·····

Circuit Symbol & No.	DEH-605RDS Part No.	DEH-505SDK Part No.	DEH-505 Part No.	DEH-405SDK Part No.	DEH-405 Part No.
Tuner Amp Unit	CWX1648	CWX1649	CWX1651	CWX1650	CWX1652
R782	RS1/10S332J	RS1/10S332J	•••••	RS1/10S332J	•••••
R783	RS1/10S102J	•••••	•••••	•••••	•••••
R784	RS1/10S101J	RS1/10S101J	•••••	RS1/10S101J	•••••
R851,852	•••••	RD1/4PS821JL	RD1/4PS821JL	•••••	•••••
R853,854	•••••	RS1/10S222J	RS1/10S222J	•••••	•••••
R855,856	•••••	RS1/10S223J	RS1/10S223J	•••••	•••••
C604,605	CCSQCH150J50	•••••	•••••	•••••	•••••
C610	CKSQYB104K25	•••••	•••••	•••••	•••••
C772	CKSQYB103K25	CKSQYB103K25	•••••	CKSQYB103K25	•••••
C773	CEA100M16LL	CEA100M16LL	•••••	CEA100M16LL	•••••
C851	•••••	CEAS100M16	CEAS100M16	•••••	•••••
C852	•••••	CEA100M16LL	CEA100M16LL	•••••	•••••
C853,854	•••••	CCSQCH221J50	CCSQCH221J50	•••••	•••••

PIONEER
The Art of Entertainment

Service Manual

ORDER NO.
CRZ1563

The chapter 1 of this Service Manual will not be reprinted. On your additional orders, we may supply only the chapter 2. For the chapter 1, please make copies and attach to the chapter 2 at your side if necessary.

HIGH POWER CD PLAYER WITH RDS TUNER

DEH-605RDS EW,X1B/EW

HIGH POWER CD PLAYER WITH FM/MW/LW TUNER

DEH-505SDK GR

DEH-505 EW,X1B/EW

DEH-405SDK GR

DEH-405 EW,X1B/EW

● **See the service manual CX-540(CRT1574) for the CD mechanism description, disassembly and circuit description.**

CHAPTER 2

CONTENTS

CHAPTER 2

1. PACKING METHOD 2-2
2. BLOCK DIAGRAM 2-7
3. EXPLODED VIEW 2-9
4. CIRCUIT DIAGRAM AND PATTERN

4.1 TUNER AMP UNIT(DEH-605RDS) 2-13
4.2 TUNER AMP UNIT(DEH-505SDK,405SDK) 2-18
4.3 TUNER AMP UNIT(DEH-505,405) 2-23
4.4 CD MECHANISM MODULE 2-28
4.5 FM/AM TUNER UNIT 2-37
4.6 KEY BOARD UNIT(DEH-605RDS) 2-41
4.7 KEY BOARD UNIT(DEH-505SDK,505,405SDK,405) 2-43

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O.Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 300 Allstate Parkway Markham, Ontario L3R 0P2 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY.LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL:[03]580-9911

© PIONEER ELECTRONIC CORPORATION 1994

K-FFK. JAN. 1994 Printed in Japan

1. PACKING METHOD

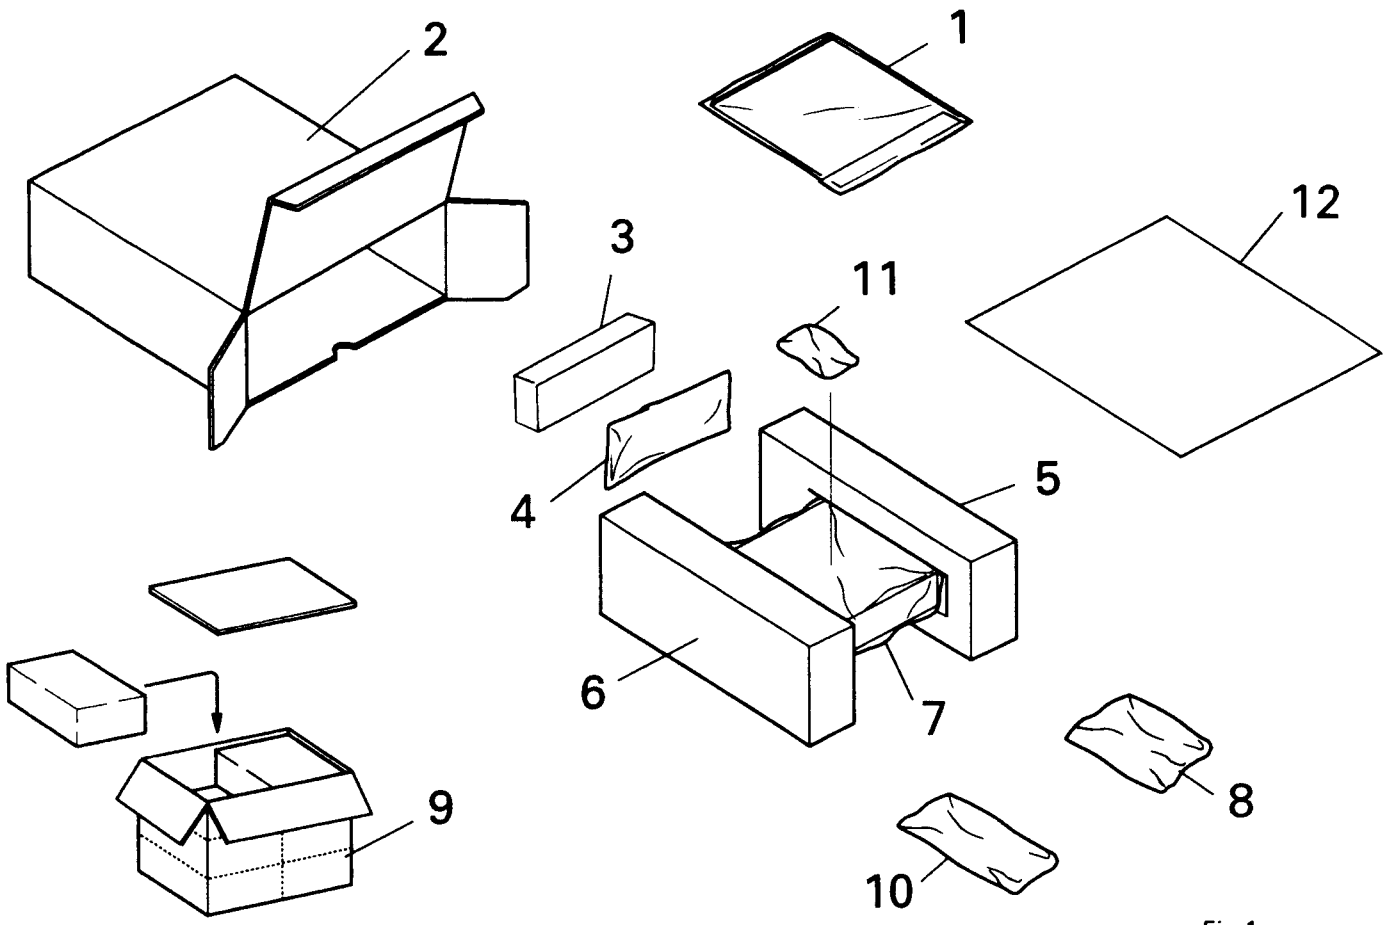

Fig.1

● **Parts List(DEH-605RDS)**

✱: Non Spare Part

Mark	No.	Description	Part No.
	1-1	Owner's Manual	CRD1717
	1-2	Owner's Manual	CRD1718
	1-3	Installation Manual	CRD1719
✱	1-4	Card	CRY-062
✱	1-5	Passport	CRY1013
✱	1-6	Caution Card	CRP1129
	1-7	Polyethylene Bag	CEG1116
	2	Carton	CHG2427
	3	Case	CNS2269
	4	Cord Assy	CDE4142
	5	Protector	CHP1603
	6	Protector	CHP1602
	7	Cover	CEG1092
	8	Accessory Assy	CEA1917
	8-1	Screw	CBA1284
	8-2	Handle(X2)	CNC4947
	8-3	Bush	CNV1009
✱	8-4	Polyethylene Bag	E36-615
	9	Contain Box	CHL2427
	10	·····	
	11	·····	
	12	Spacer(except X1B model)	CHW1387

● **The DEH-505SDK, DEH-505, DEH-405SDK and DEH-405 Parts Lists enumerate the parts which differ from those enumerated in the DEH-605RDS Parts List only. The parts other than those enumerated in the former are identical with those in the latter, to which you are requested to refer, accordingly. The DEH-605RDS Parts List is given on page 2-2.**

Mark	No.	Description	DEH-605RDS	DEH-505SDK	DEH-505	DEH-405SDK	DEH-405
	1-1	Owner's Manual	CRD1717	CRD1723	CRD1720	CRD1723	CRD1720
	1-2	Owner's Manual	CRD1718	·····	·····	·····	·····
*	1-5	Passport	CRY1013	CRY1013	·····	CRY1013	·····
	2	Carton	CHG2427	CHG2429	CHG2428	CHG2420	CHG2419
	9	Contain Box	CHL2427	CHL2429	CHL2428	CHL2420	CHL2419
	10	Accessory Assy	·····	CEA1473	CEA1473	·····	·····
	11	Remote Control Assy	·····	CXA6155	CXA6155	·····	·····

Owner's Manual

Model	Part No.	Language
DEH-605RDS	CRD1717	English,French,Italian,German,Dutch,Spanish,Portuguese
	CRD1718	Swedish,Norwegian,Finnish
DEH-505SDK,405SDK	CRD1723	French,German
DEH-505,405	CRD1720	English,French,Italian,German,Dutch,Spanish,Portuguese, Swedish,Norwegian,Finnish

Installation Manual

Model	Part No.	Language
DEH-605RDS, DEH-505SDK,505, DEH-405SDK,405	CRD1719	English,French,Italian,German,Dutch,Spanish,Portuguese Swedish,Norwegian,Finnish

● **X1B/EW Model**

Mark	No.	Description	DEH-605RDS/EW	DEH-605RDS/X1B/EW
	1-2	Owner's Manual	CRD1718	·····
*	1-4	Card	CRY-062	URY-001
*	1-5	Passport	CRY1013	CRY1014
	1-7	Polyethylene Bag	CEG1116	E36-618
	7	Cover	CEG1092	UEG-002
	9	Contain Box	CHL2427	UHD-002

Mark	No.	Description	DEH-505/EW	DEH-505/X1B/EW
*	1-4	Card	CRY-062	URY-001
	1-7	Polyethylene Bag	CEG1116	E36-618
	7	Cover	CEG1092	UEG-002
	9	Contain Box	CHL2428	UHD-002

Mark	No.	Description	DEH-405/EW	DEH-405/X1B/EW
*	1-4	Card	CRY-062	URY-001
	1-7	Polyethylene Bag	CEG1116	E36-618
	7	Cover	CEG1092	UEG-002
	9	Contain Box	CHL2419	UHD-002

● **Accessory Assy**

Accessory Assy CEA1917

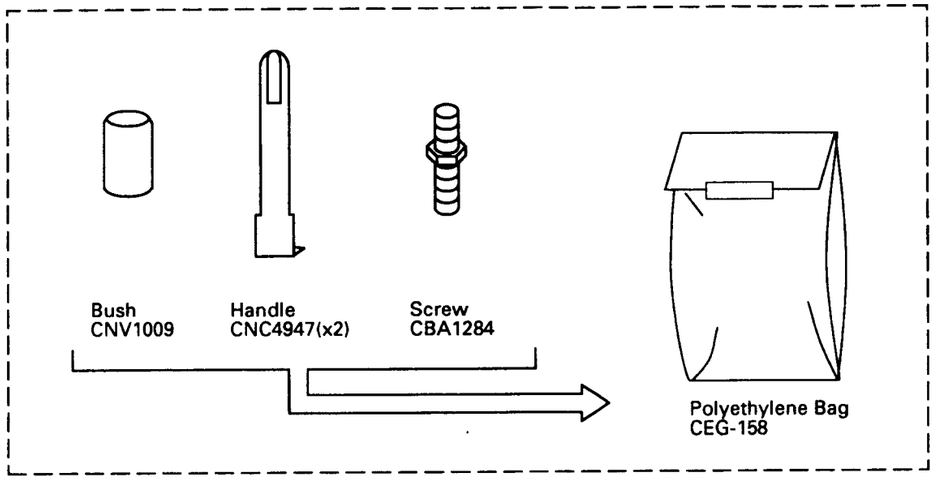

Remote Control Assy CXA6155

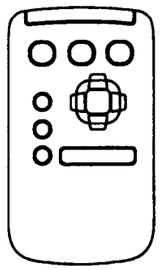

Accessory Assy CEA1473

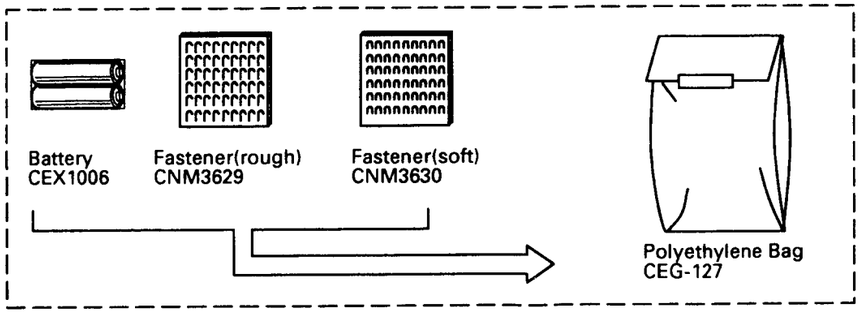

Fig.2

● **LCD(CAW1228).....DEH-605RDS**

SEGMENT

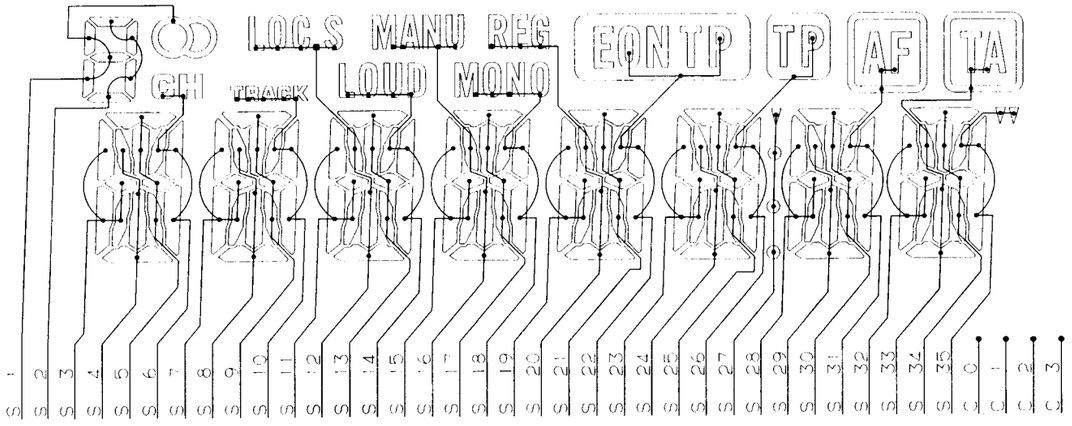

COMMON

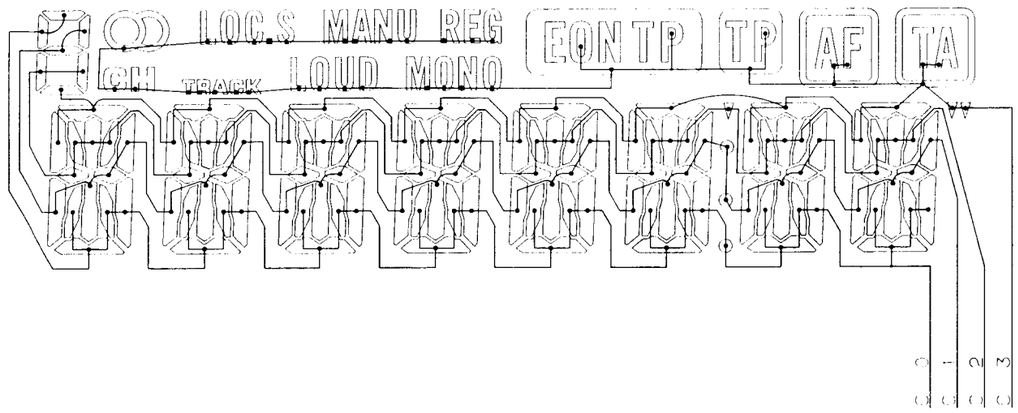

Fig.3

● **LCD(CAW1229).....DEH-505SDK,505,405SDK,405**

SEGMENT

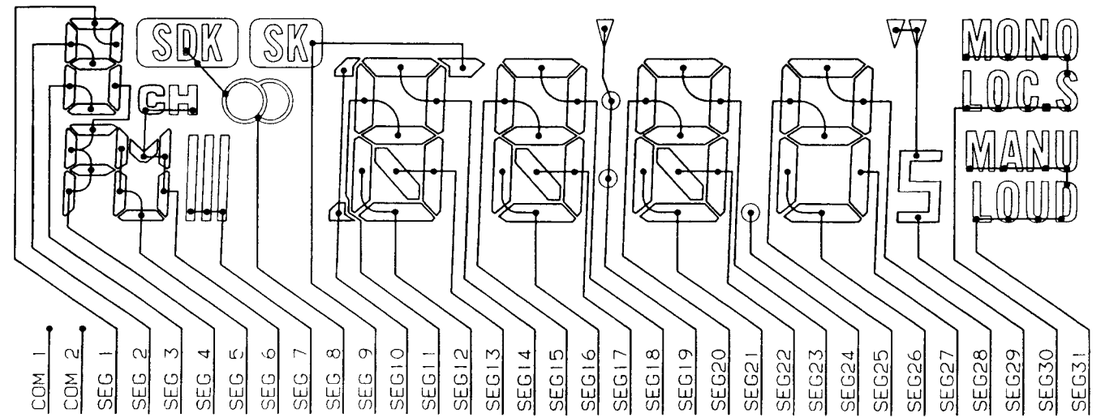

COMMON

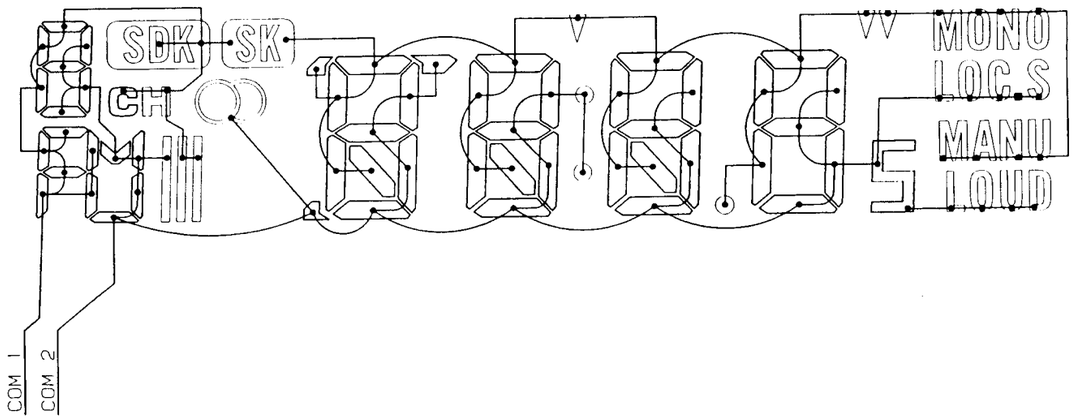

Fig.4

2. BLOCK DIAGRAM

● **DEH-605RDS**

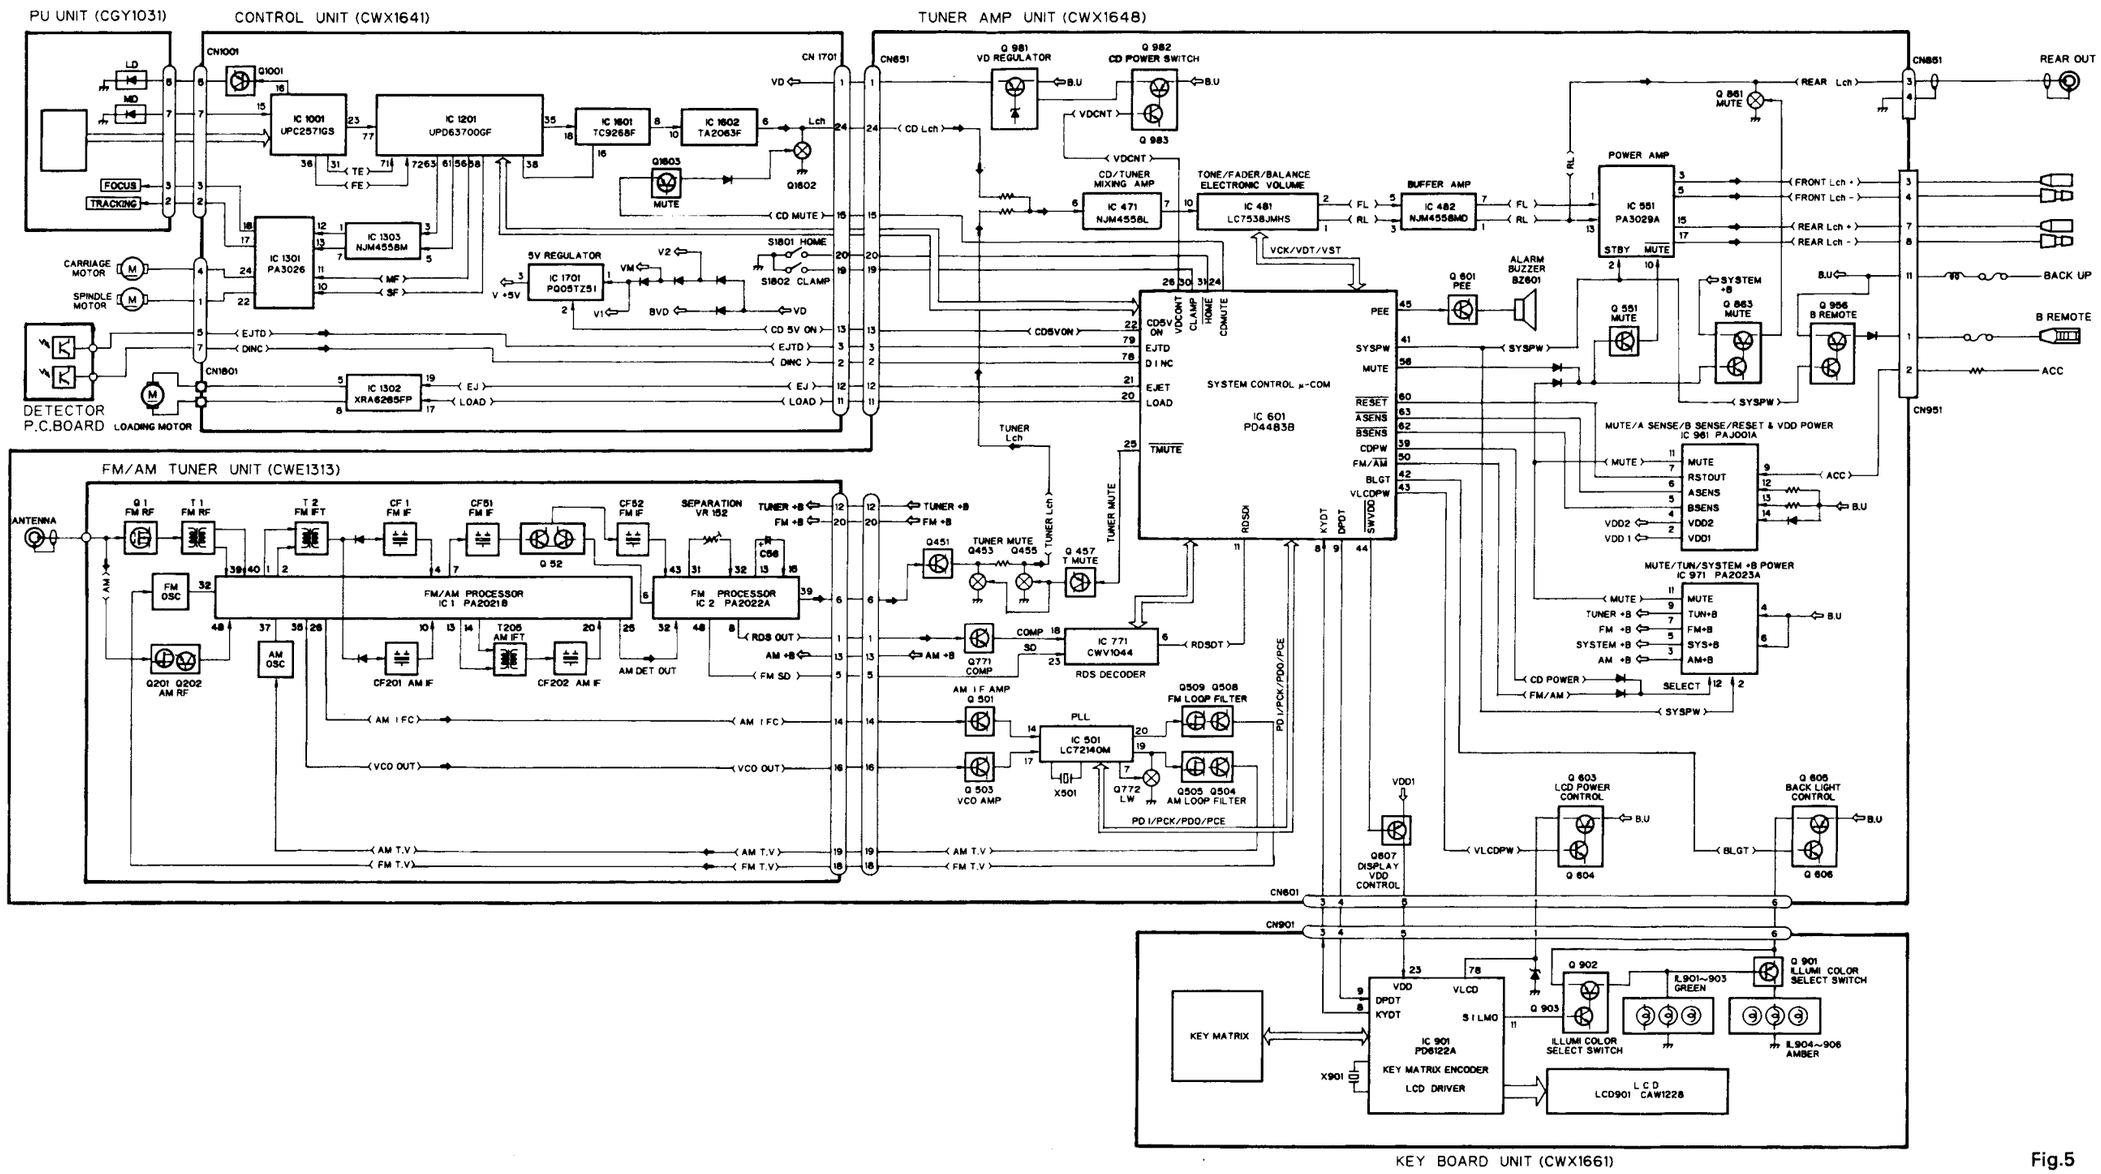

Fig.5

3. EXPLODED VIEW

● **Chassis (Parts List:Page 1-38)**

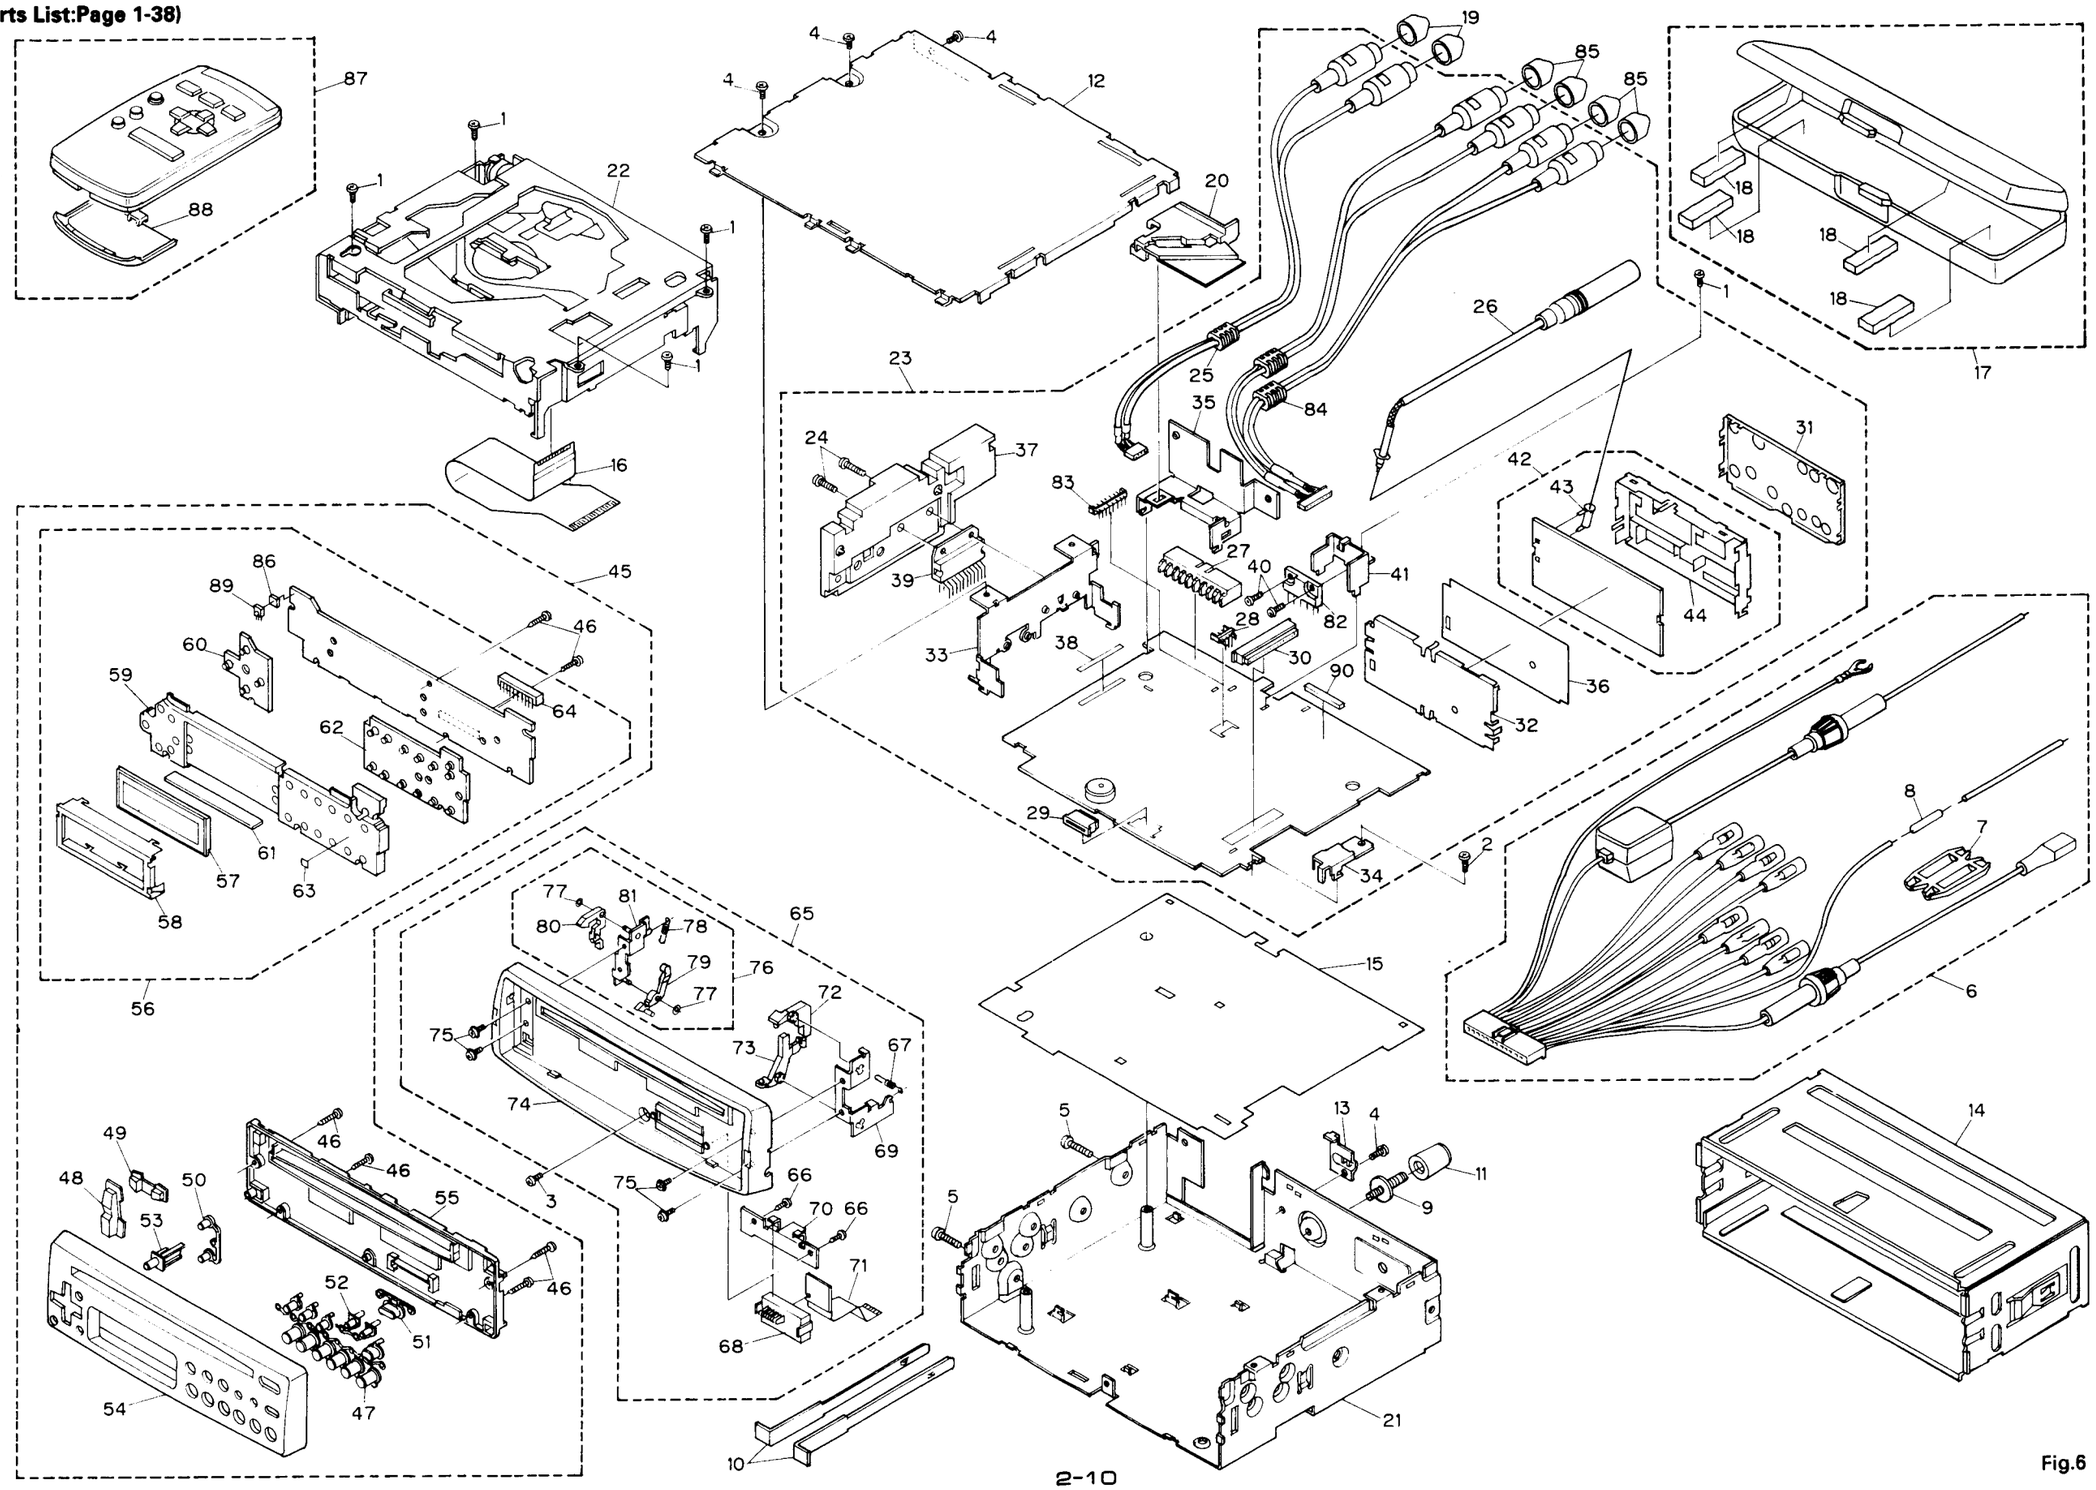

Fig.6

4. CIRCUIT DIAGRAM AND PATTERN

4.1 TUNER AMP UNIT(DEH-605RDS)

● **Connection Diagram**

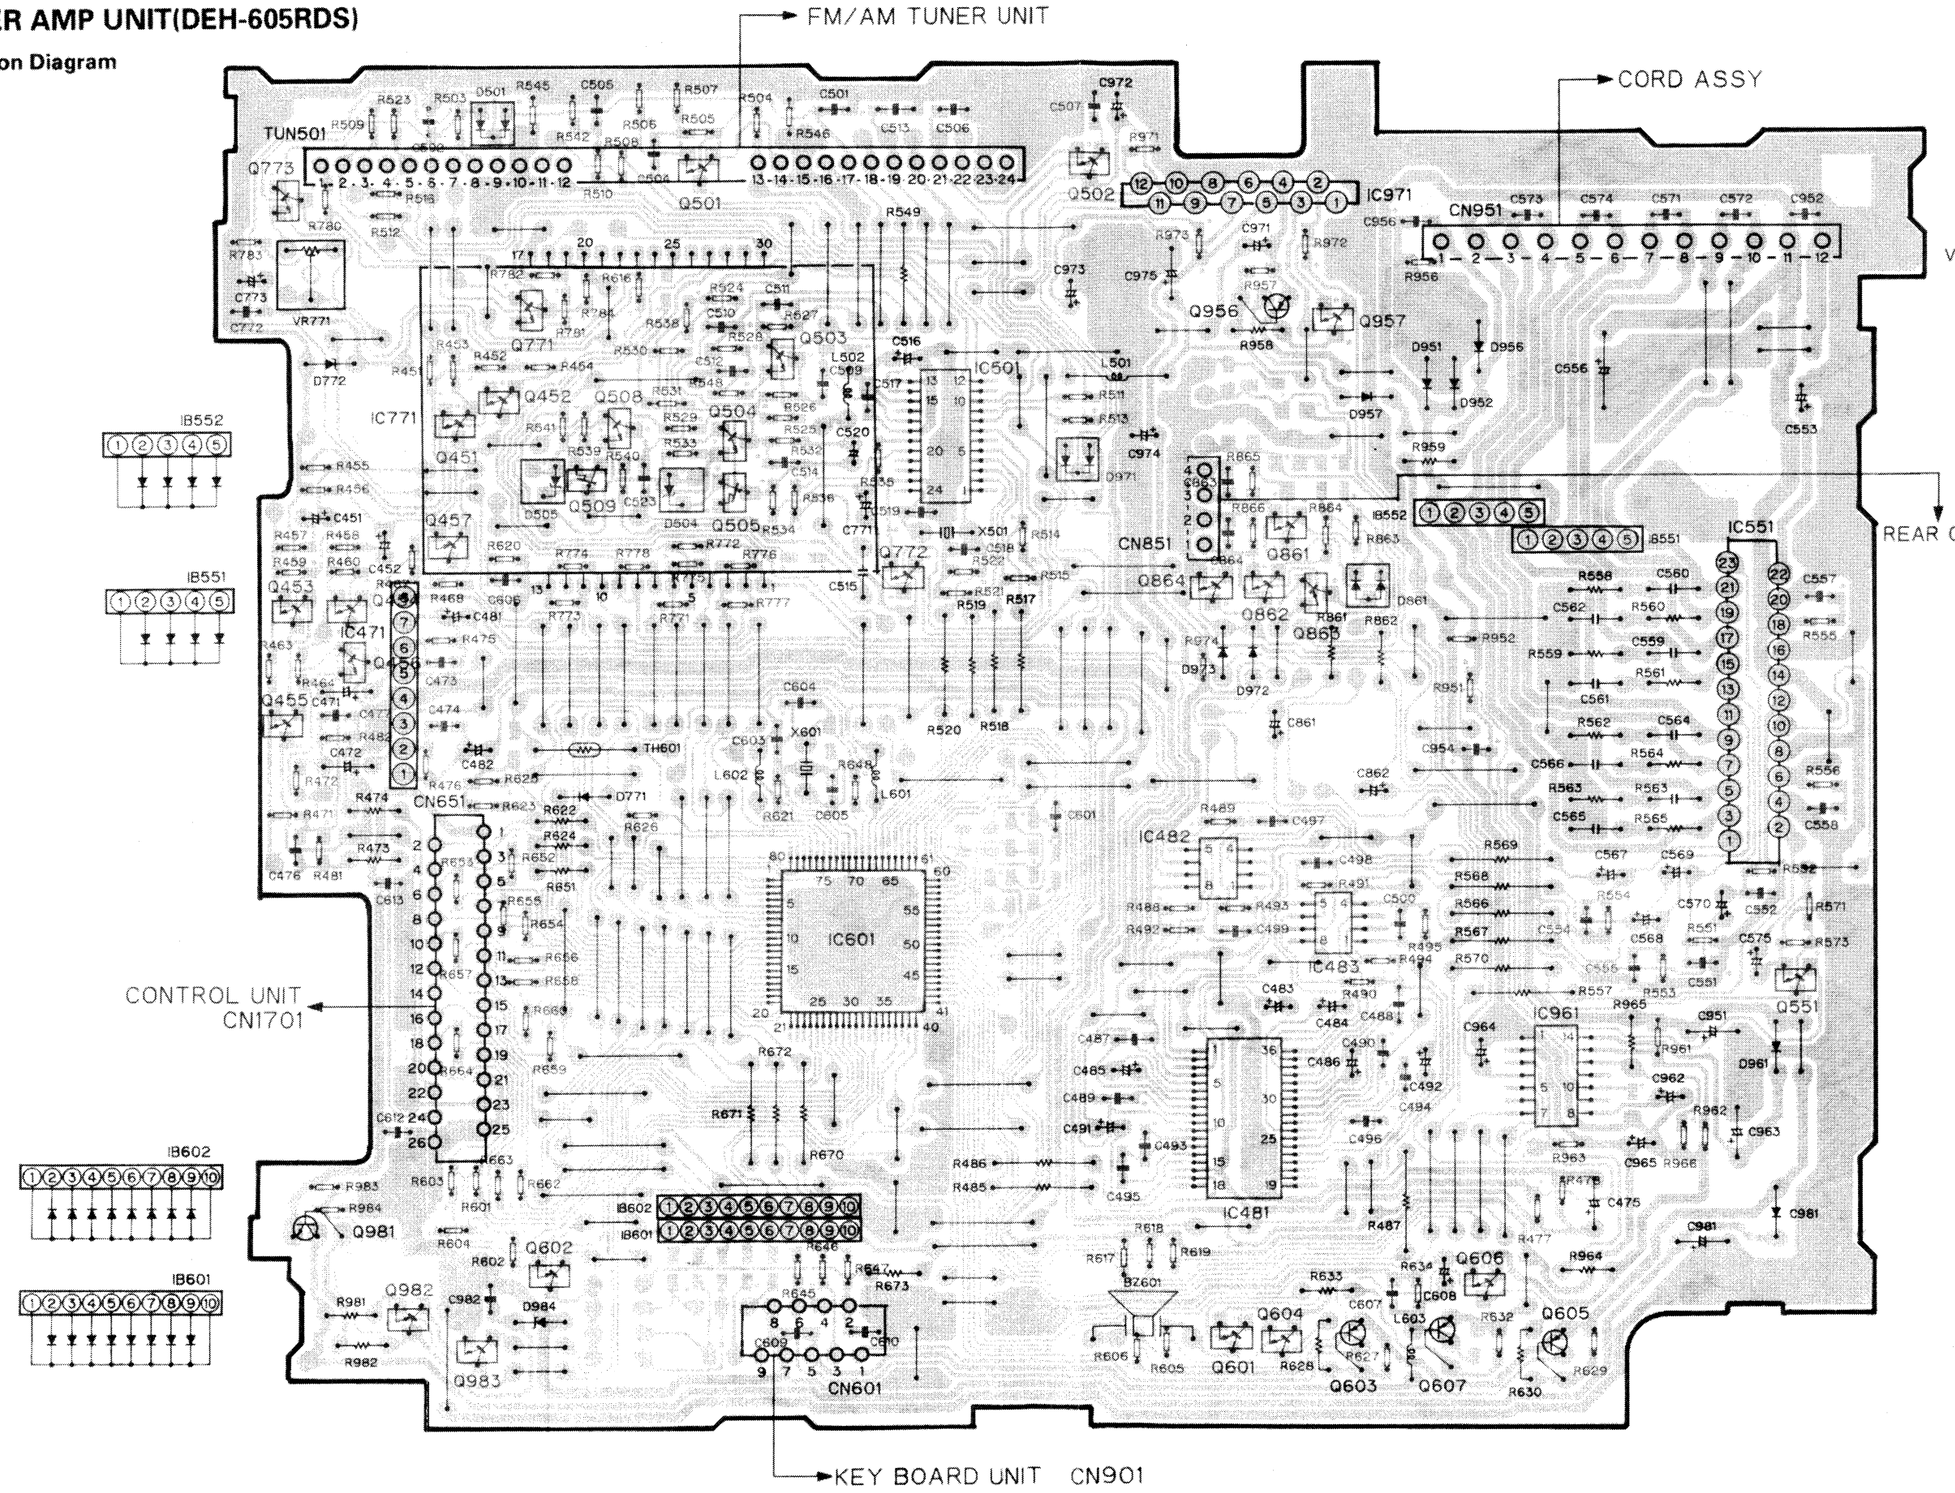

ADJ	IC, Q
	Q501 Q502
	Q773 IC971
VR771	
	Q771 Q956 Q957
	Q503
	Q452 IC501
	IC771 Q451 Q508 Q504
	Q509 Q505
	Q861 Q457 Q772
	Q864 Q862 Q863 Q453 Q454
	Q456
	Q455 IC551 IC471
	IC482
	IC601 IC483
	Q551
	IC961
	IC481
	Q981
	Q602 Q606
	Q982
	Q983 Q601 Q604 Q603 Q607 Q605

Fig.8

● **CD Mechanism Module (Parts List:Page 1-39)**

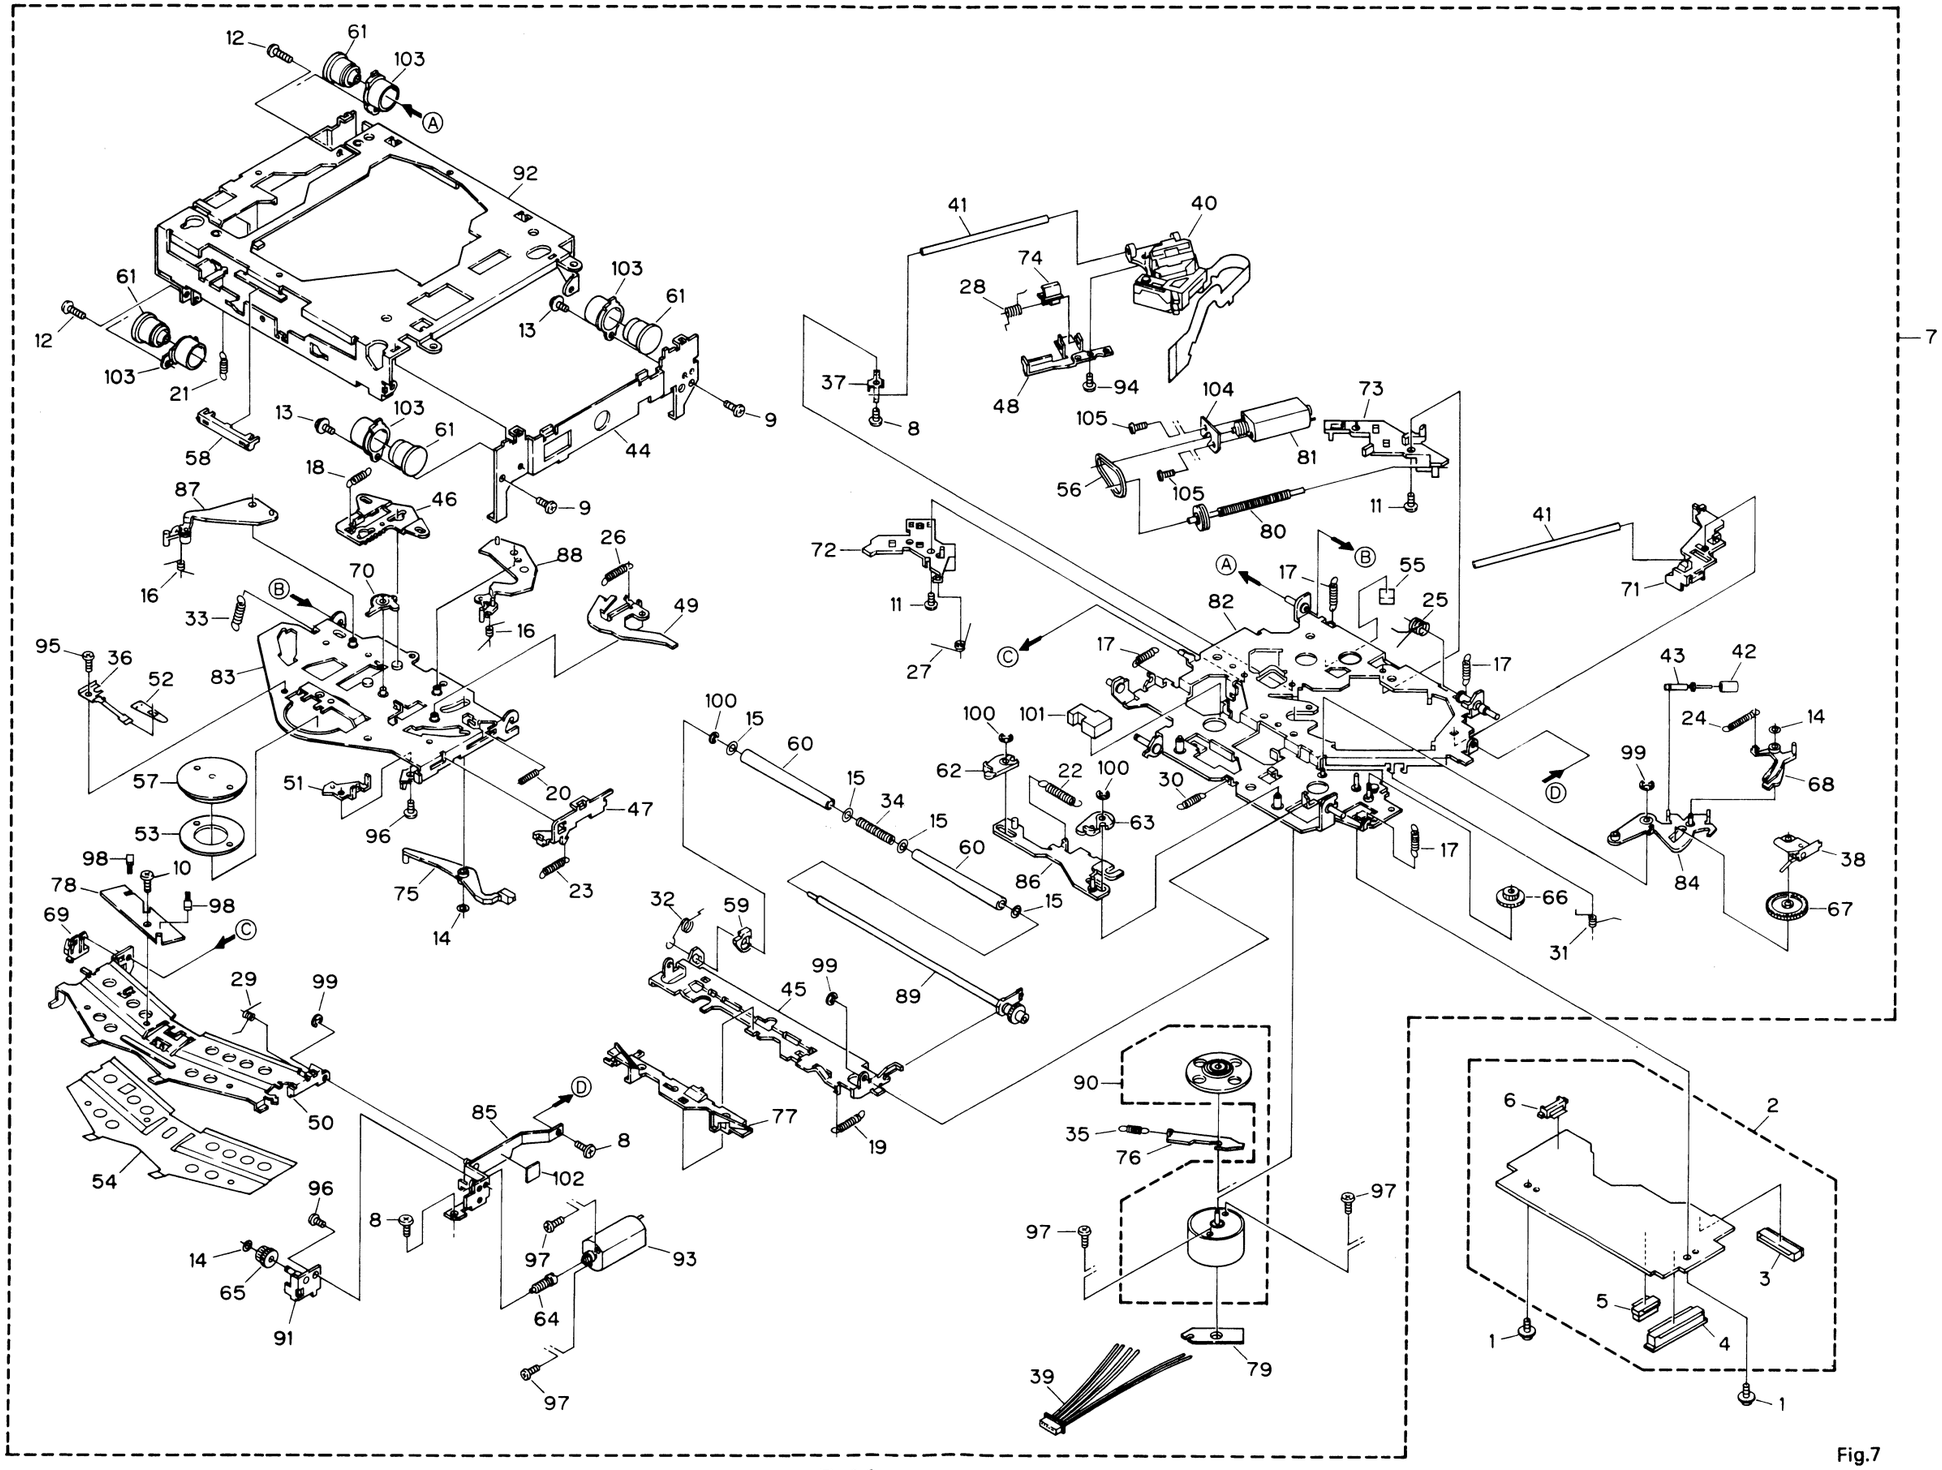

Fig.7

● Circuit Diagram

TUNER AMP UNIT (CWX1648)

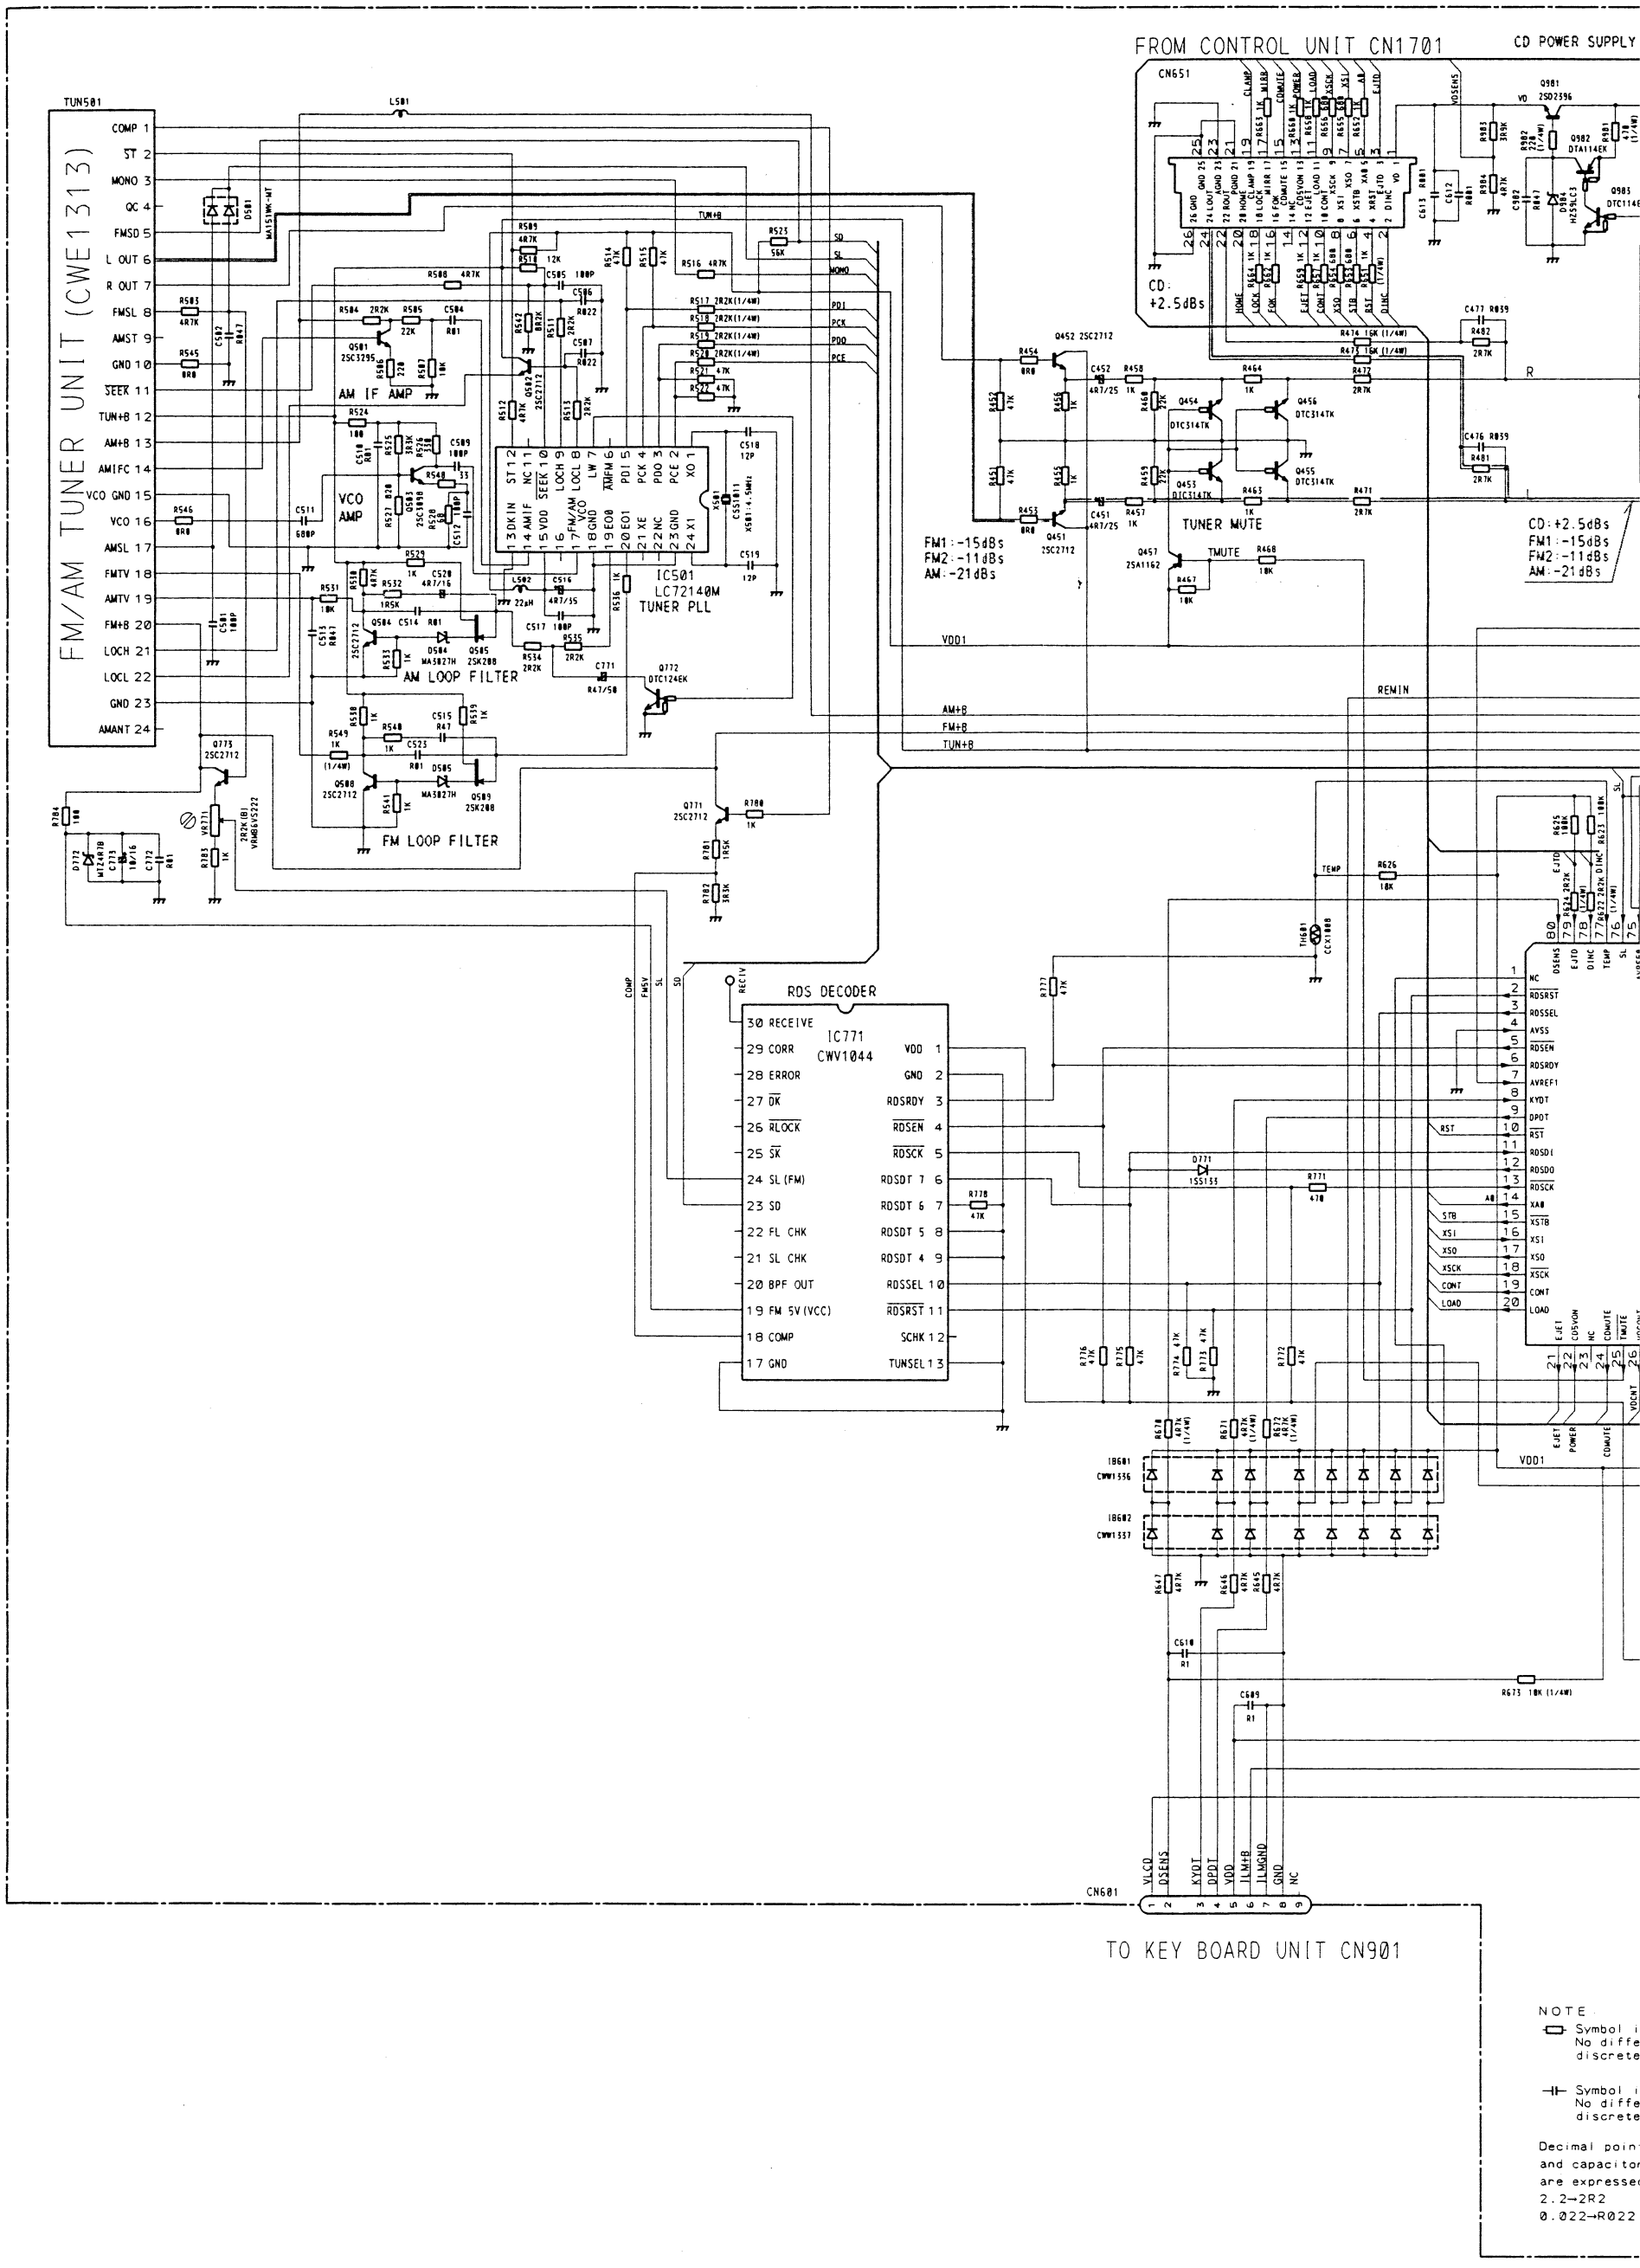

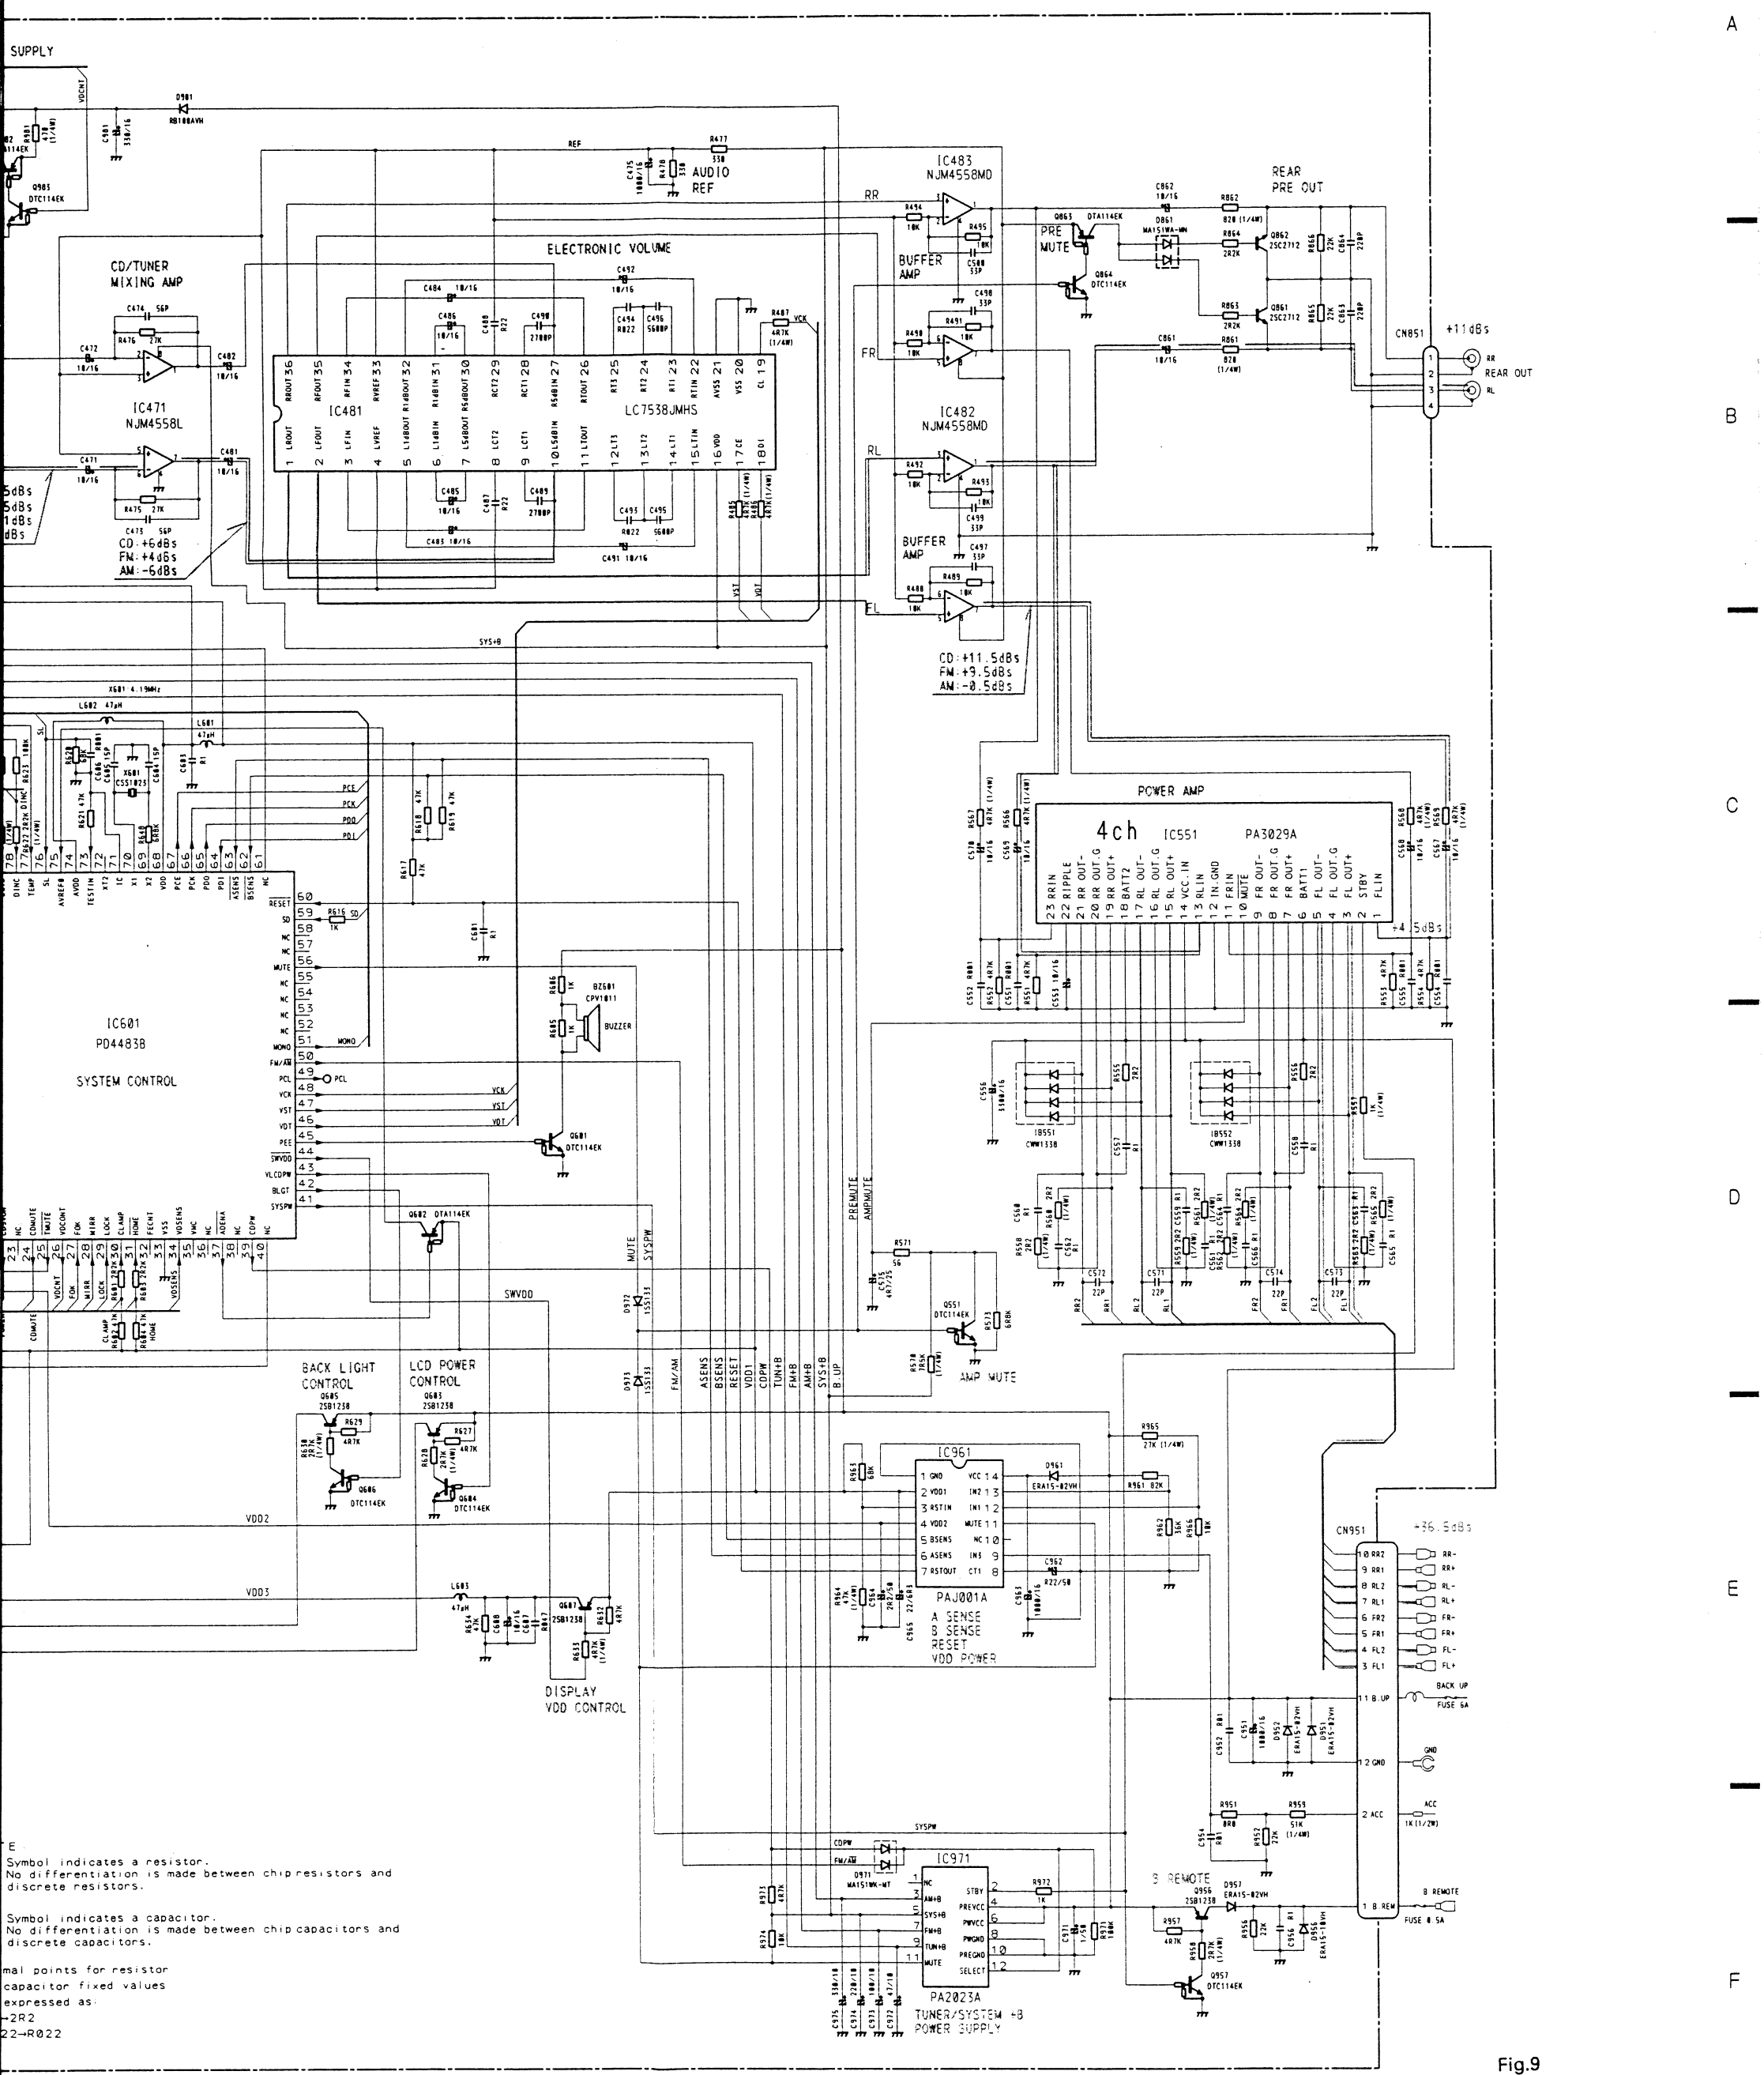

E
Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.

mal points for resistor
capacitor fixed values
expressed as:
→2R2
22→R022

Fig.9

4.2 TUNER AMP UNIT(DEH-505SDK,405SDK)

● **Circuit Diagram**

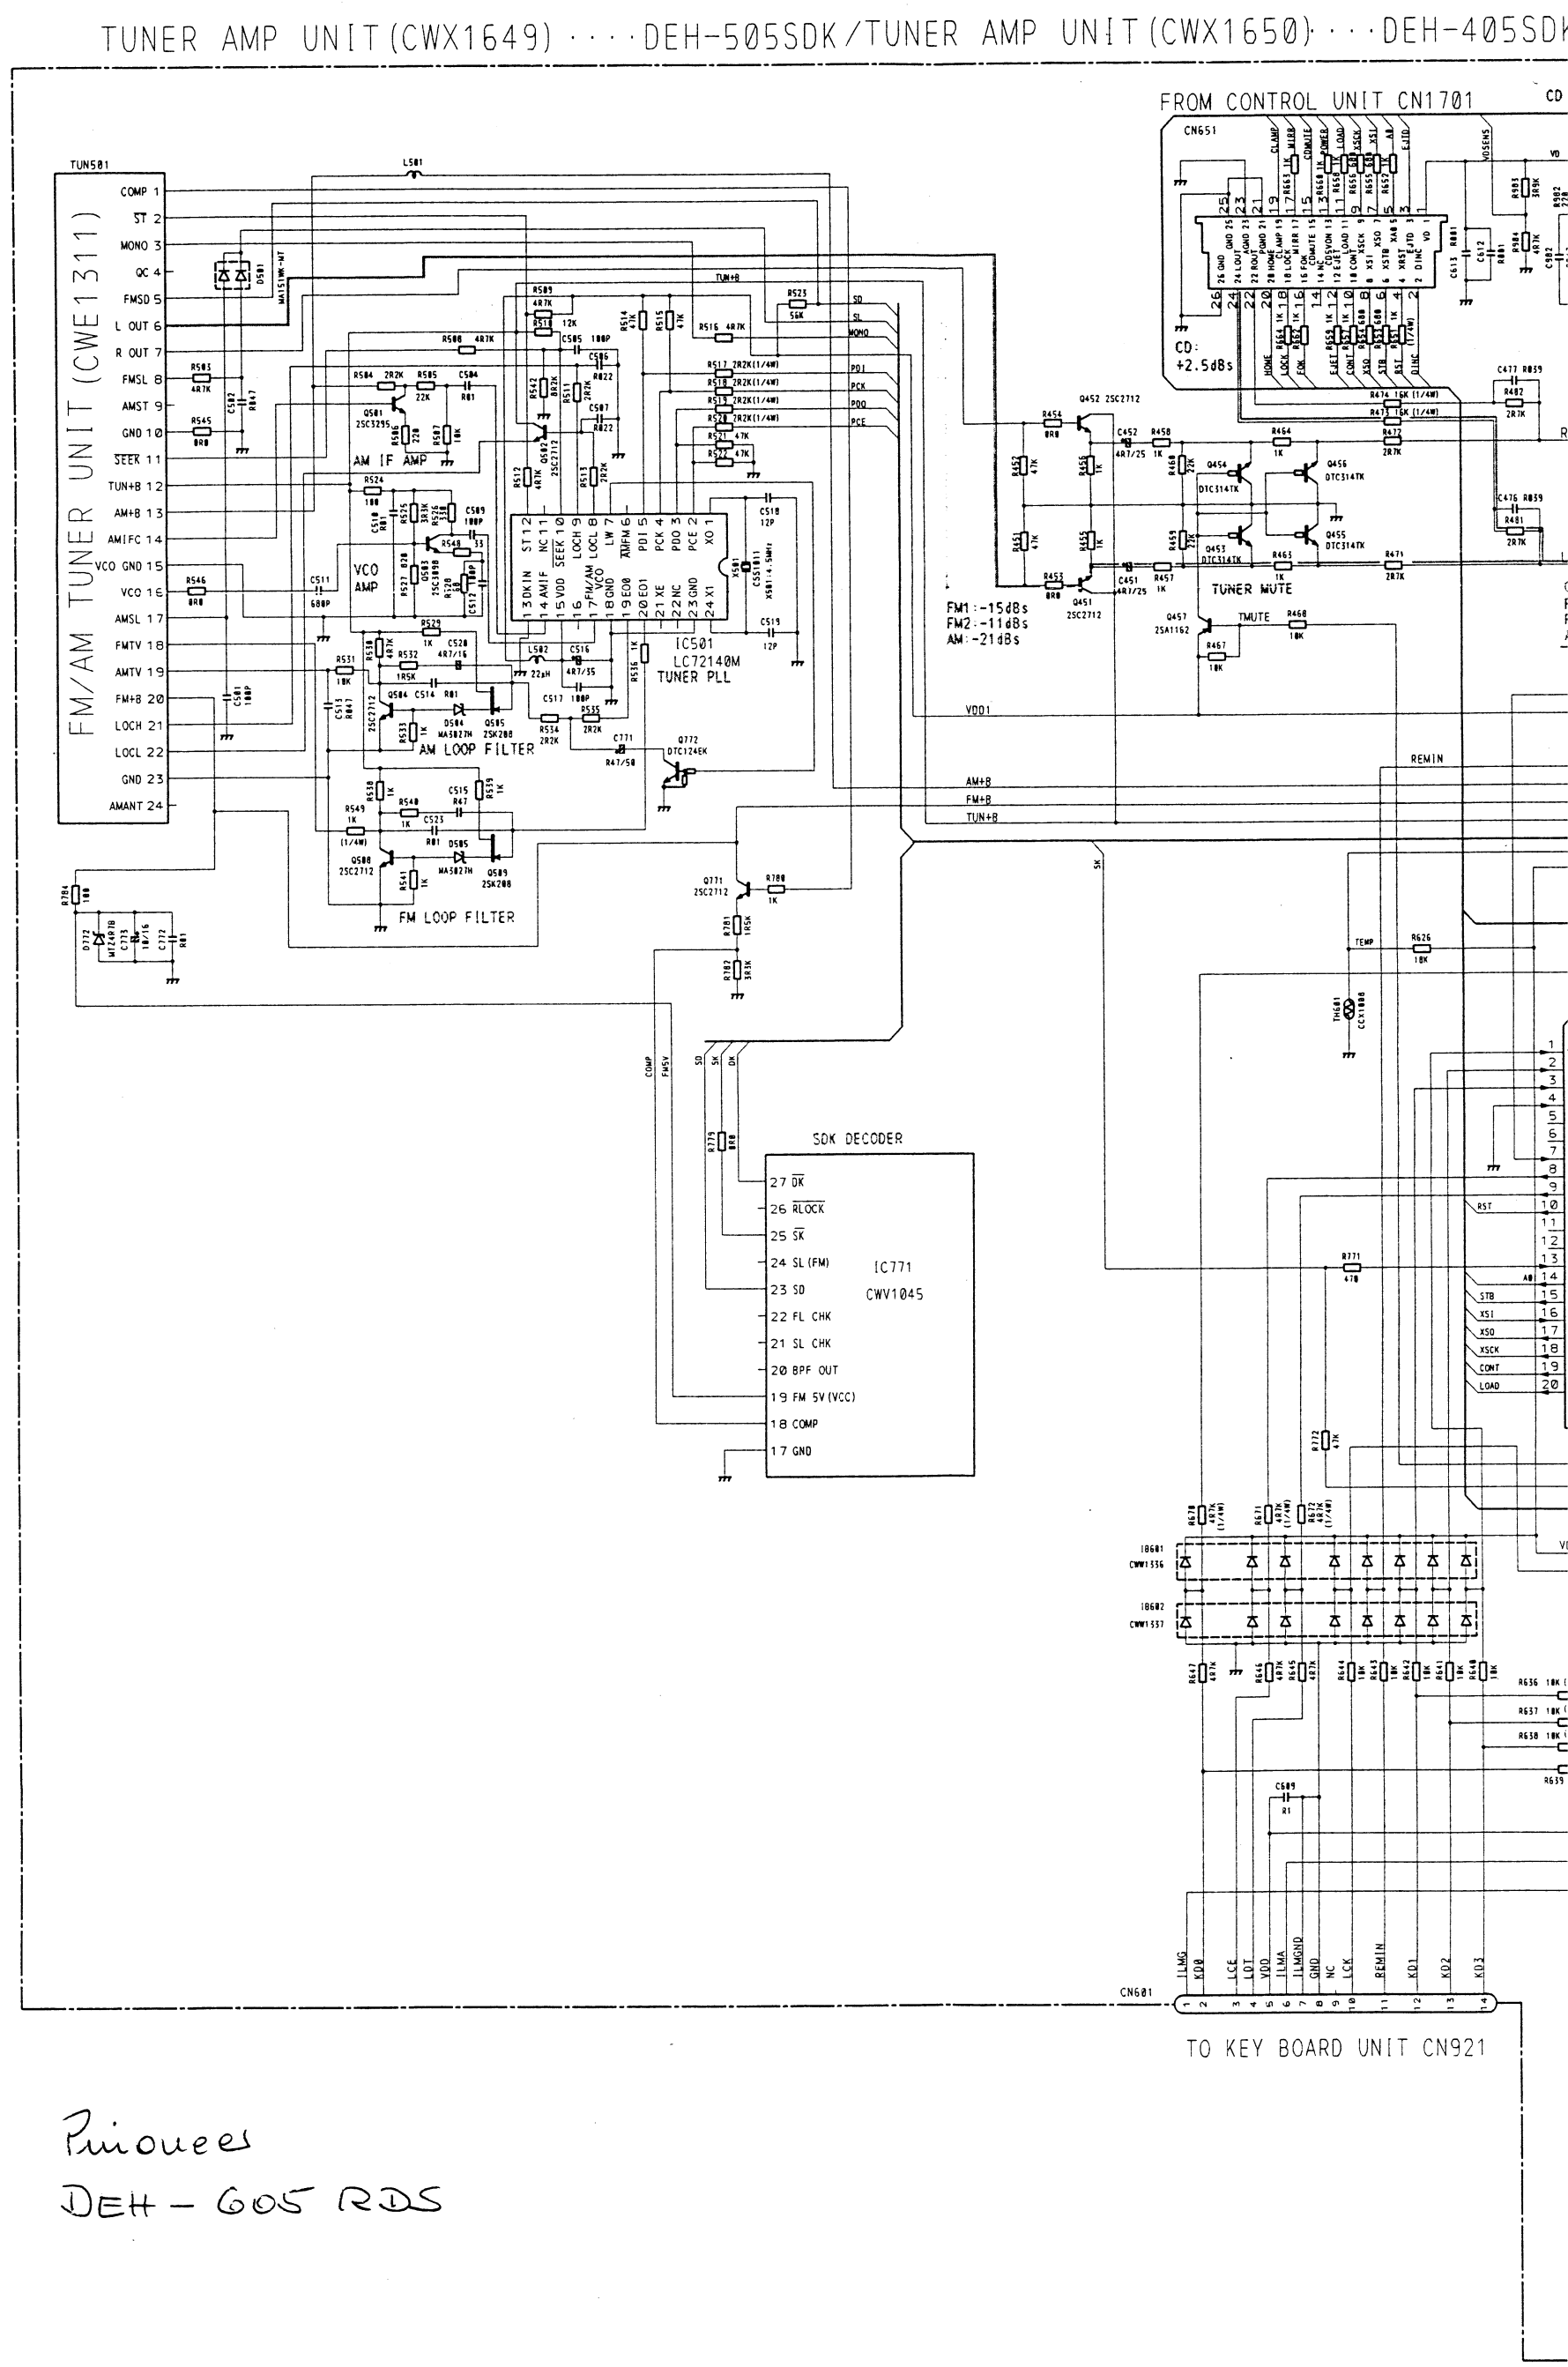

Pioneer
DEH-605RDS

01 CD POWER SUPPLY

	DEH-505SDK	DEH-405SDK
R609	VACANT	0R0
R613	47K	VACANT

NOTE

Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:
2.2→2R2
0.022→R022

Fig.10

● **Connection Diagram**

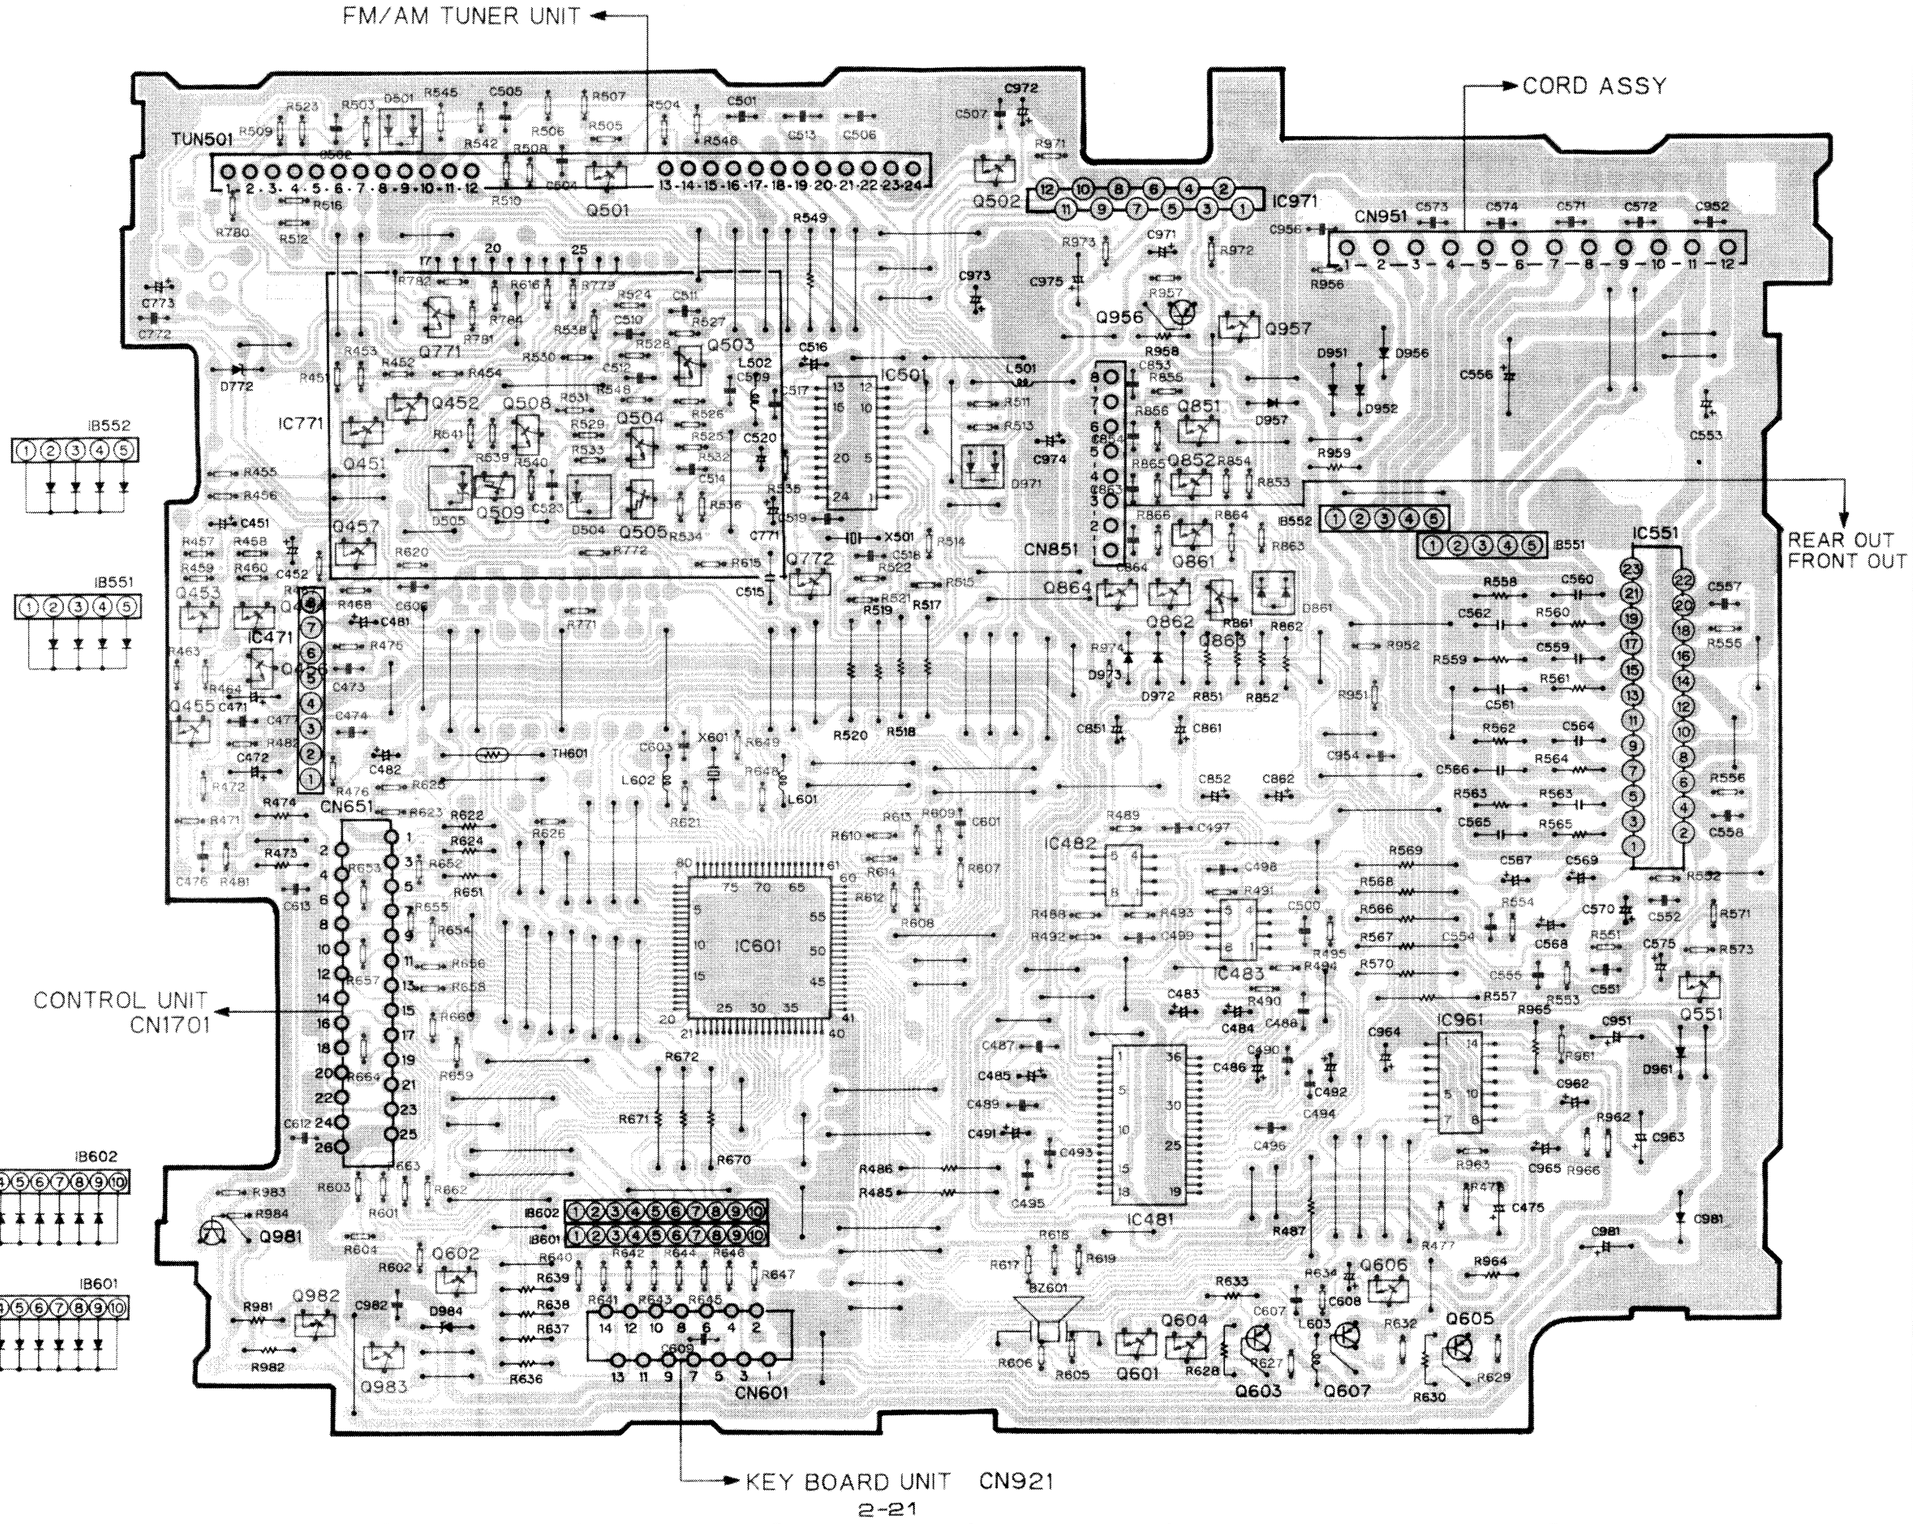

IC. Q	
Q501 Q502 IC971	A
Q771 Q956 Q957	–
Q503	
Q452 IC501	
IC771 Q451 Q508 Q504 Q851	
Q509 Q505 Q852	
Q861 Q457 Q772	B
Q864 Q862 Q863 Q453 Q454	
Q456	
Q455 IC551 IC471	–
IC482	
IC601 IC483	C
Q551	
IC961	
IC481	–
Q981	
Q602 Q606	
Q982	D
Q983 Q601 Q604 Q603 Q607 Q605	

Fig.11

4.3 TUNER AMP UNIT(DEH-505,405)

● **Connection Diagram**

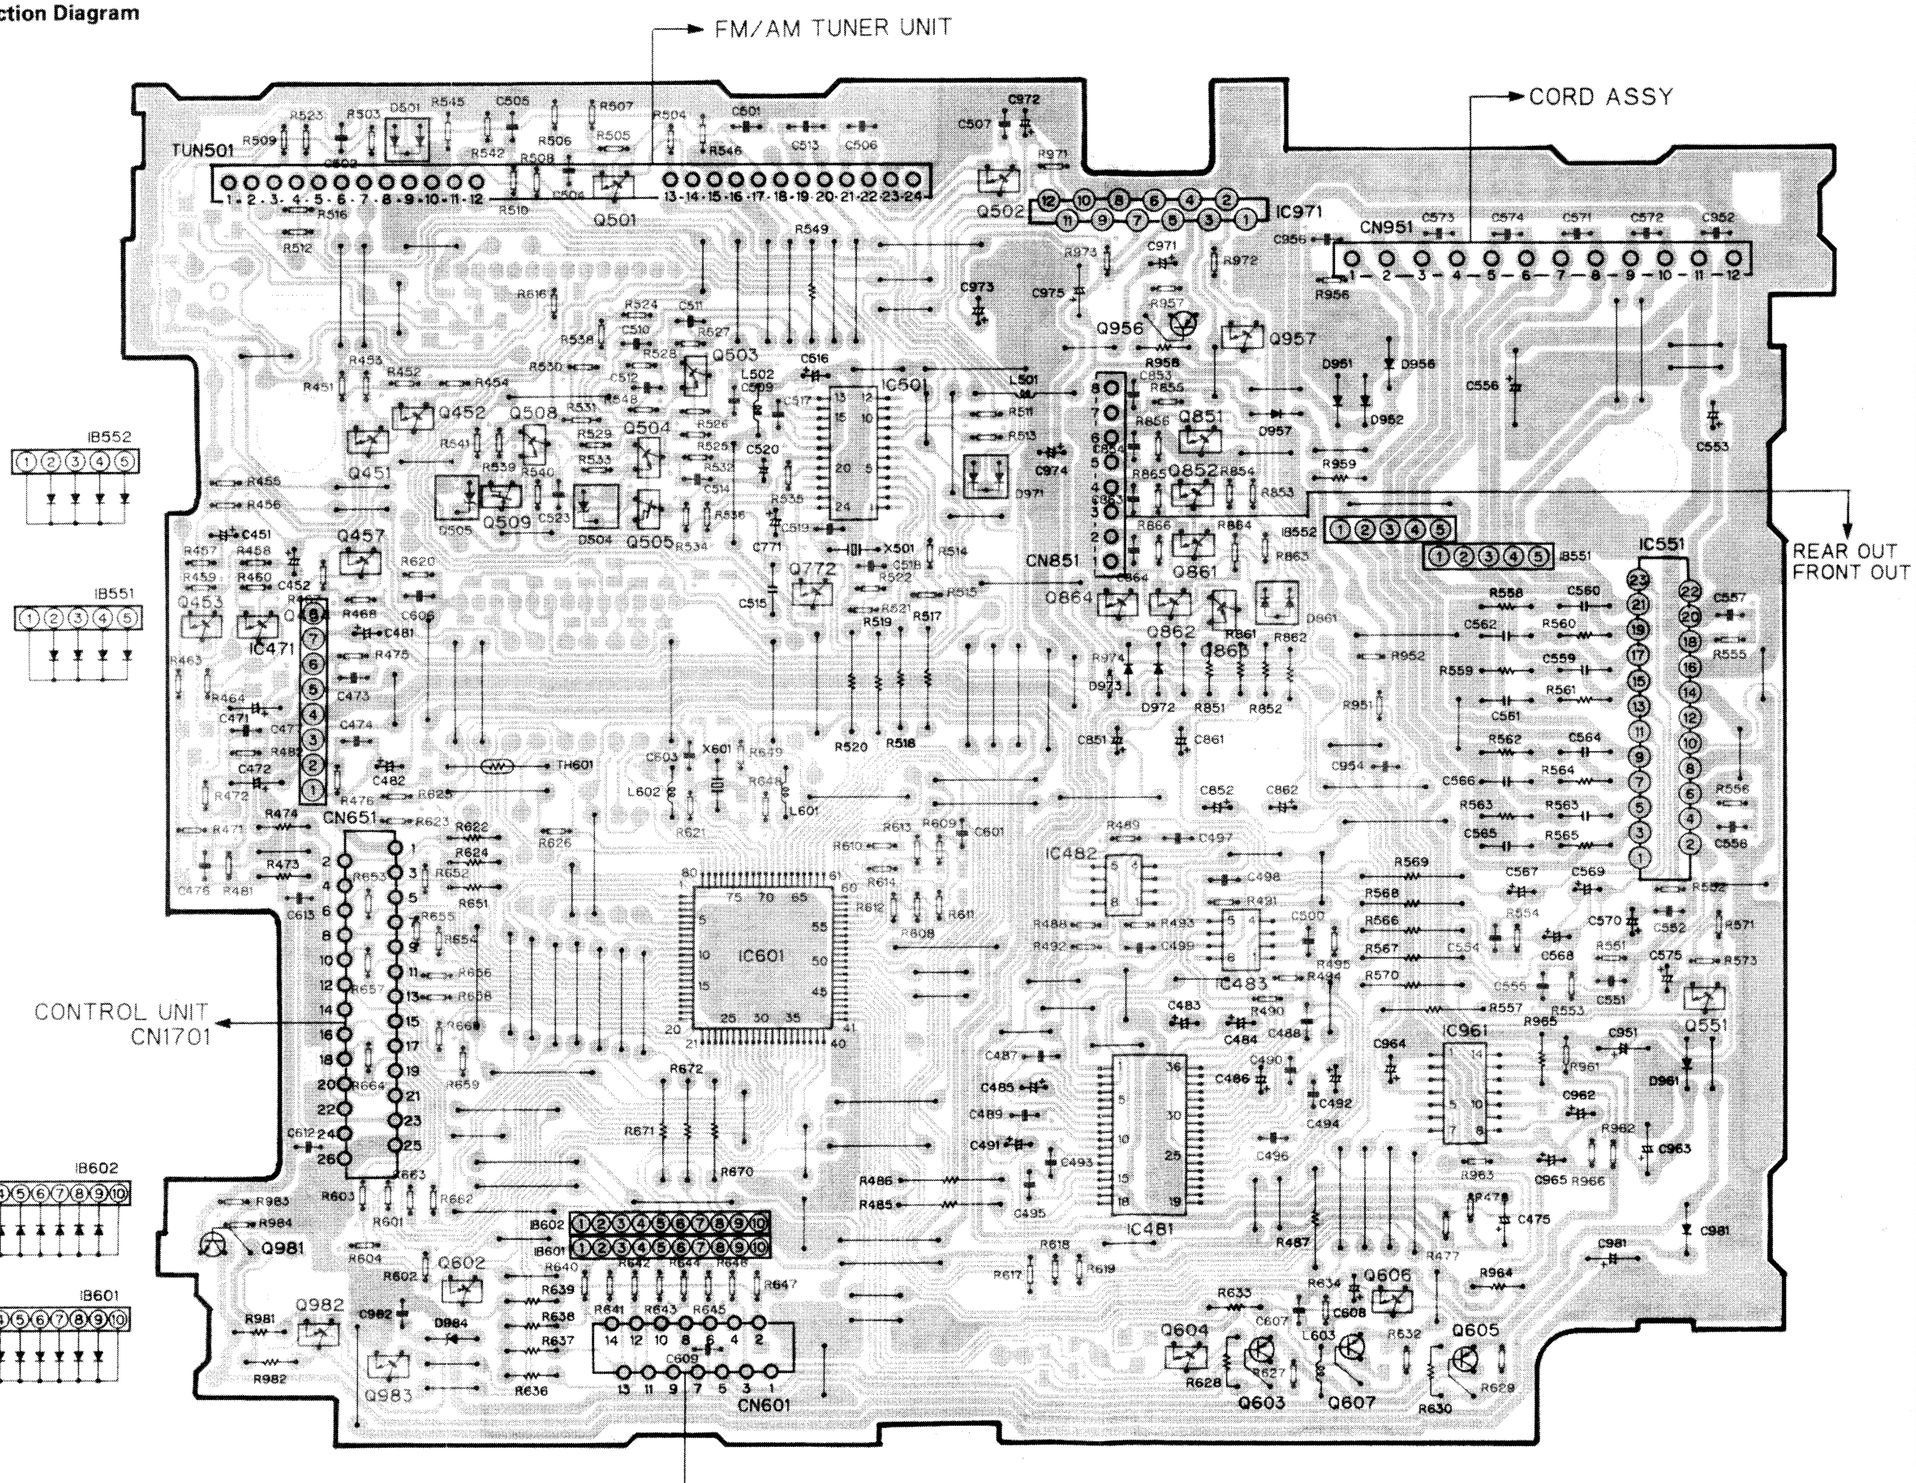

IC. Q
Q501 Q502
IC971
Q956 Q957
Q503
Q452 IC501
Q451 Q508
Q504 Q851
Q509 Q505 Q852
Q861
Q457 Q772
Q864 Q862 Q863
Q453 Q454
IC551
IC471
IC482
IC601 IC483
Q551
IC961
IC481
Q981
Q602 Q606
Q982
Q983 Q604
Q603 Q607 Q605

Fig.12

● Circuit Diagram

TUNER AMP UNIT(CWX1651)・・・DEH-505 /TUNER AMP UNIT(CWX1652)・・・DEH-405

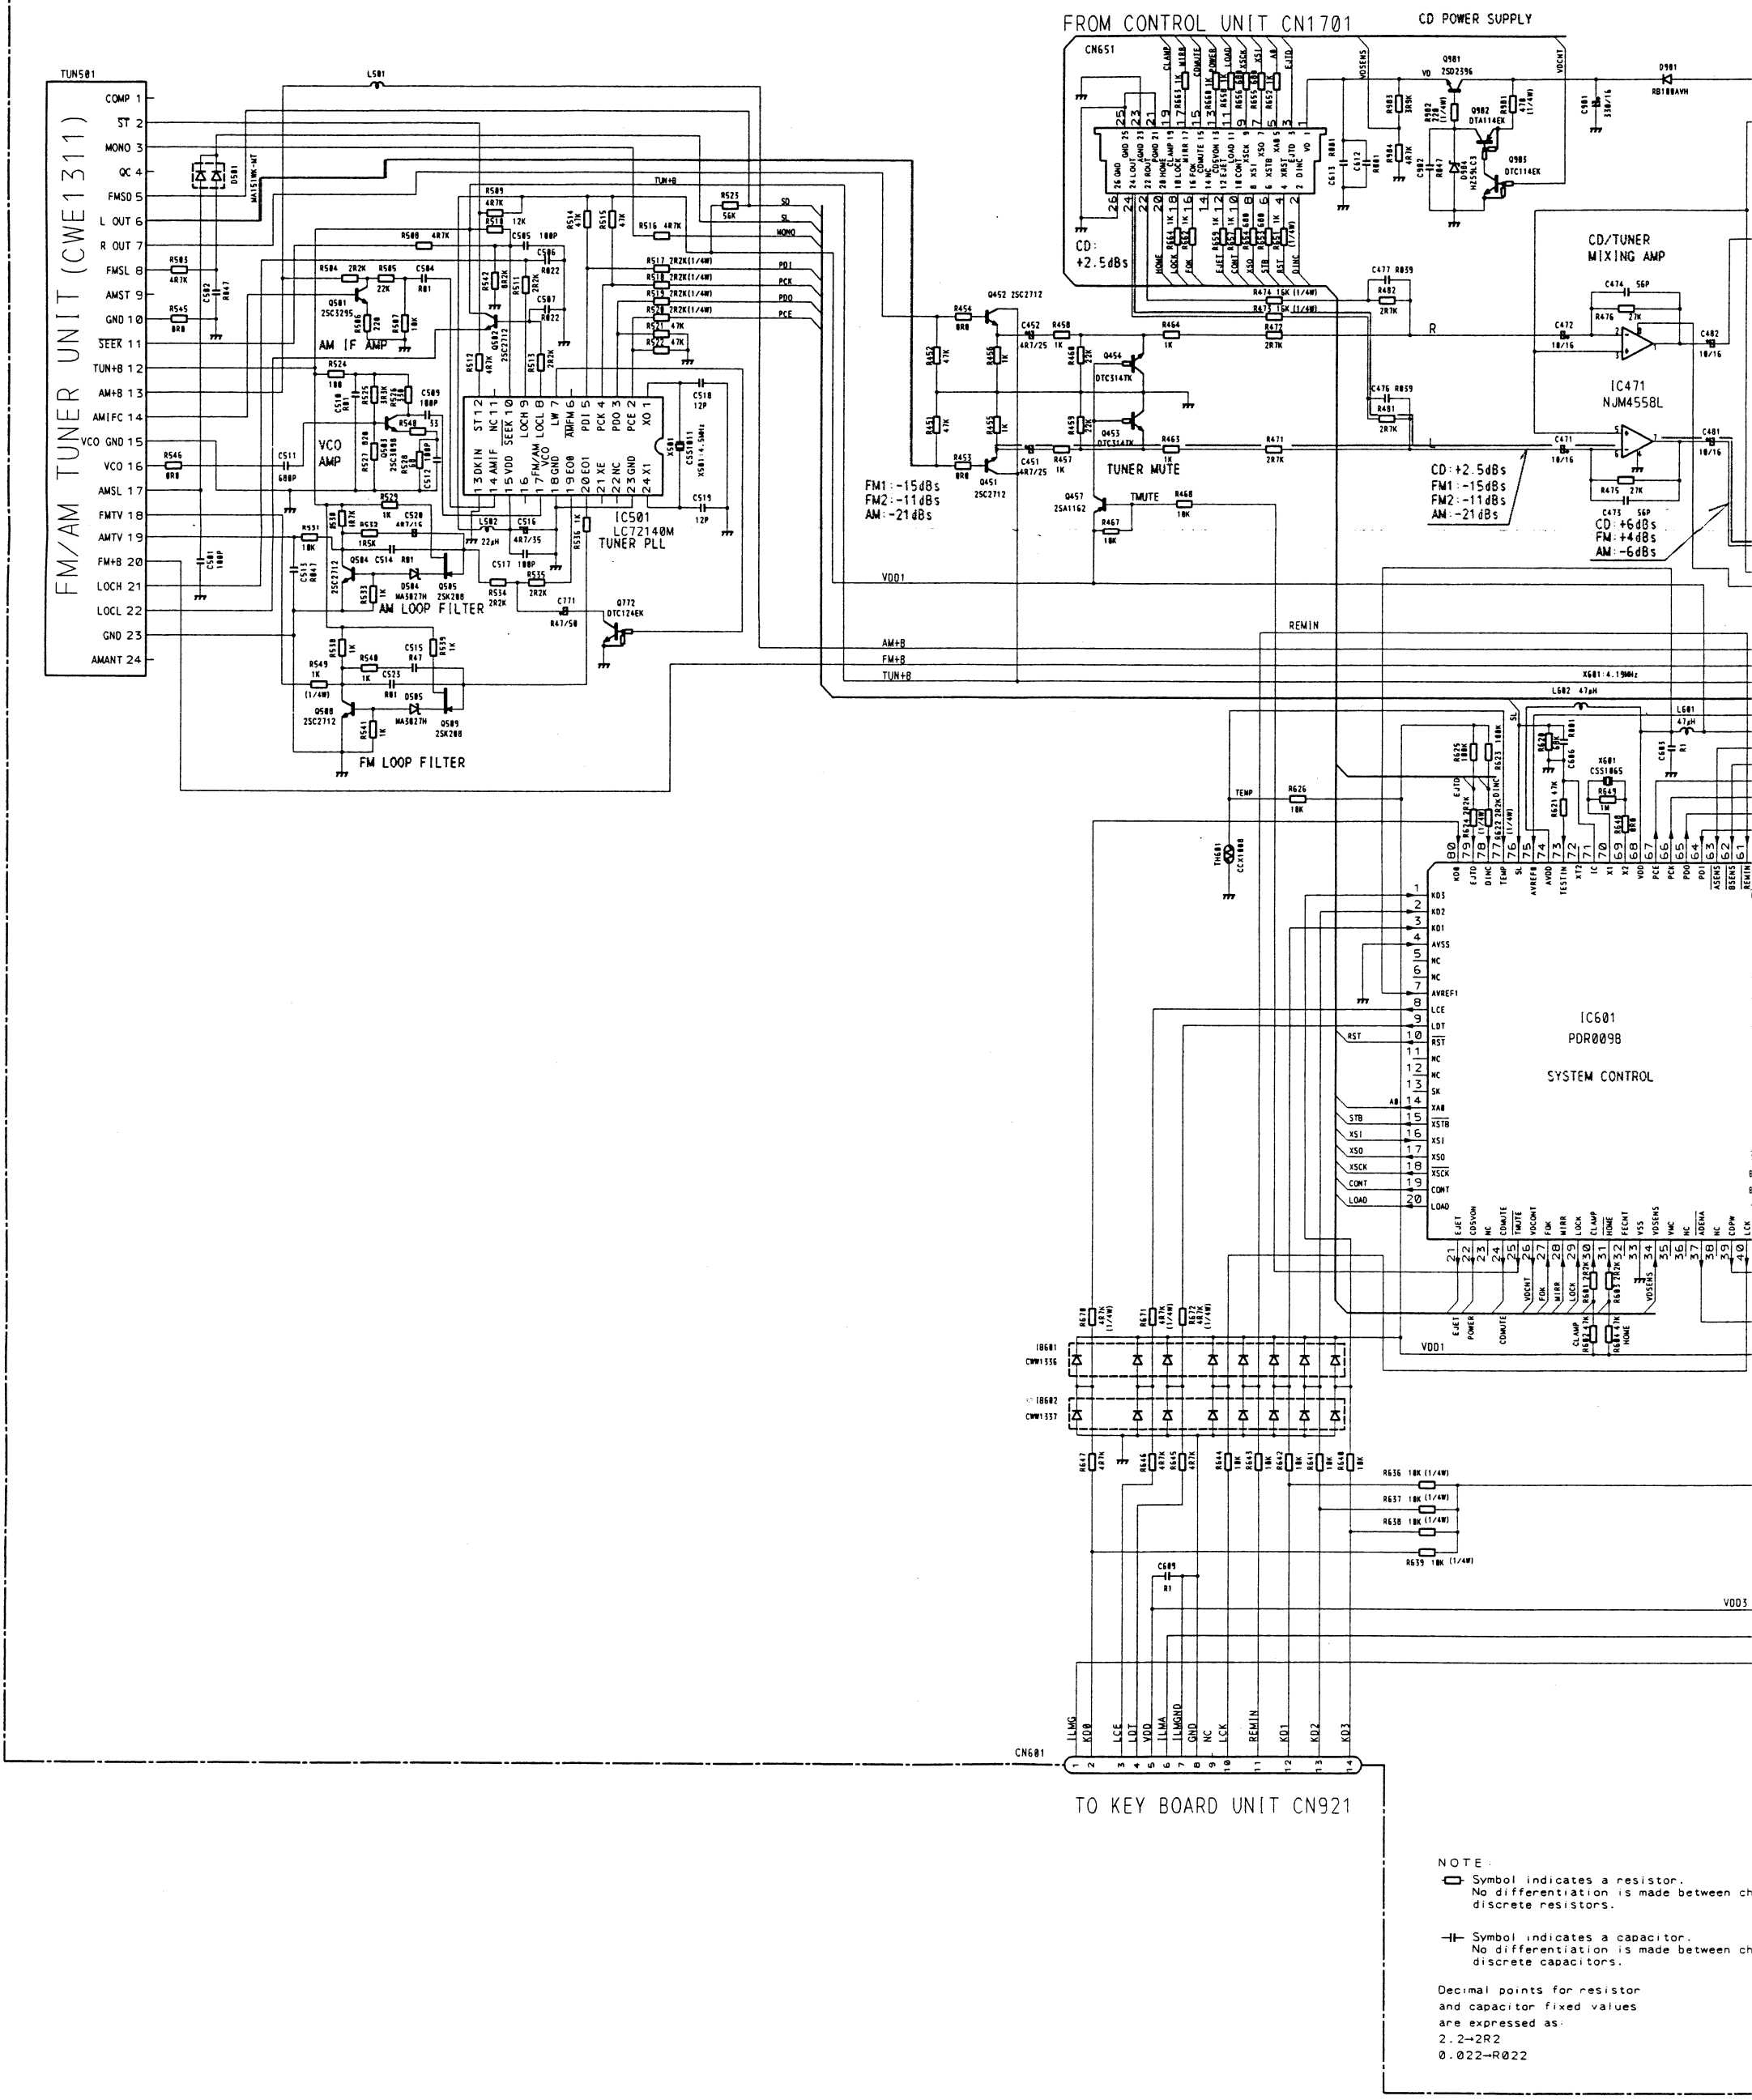

NOTE:

- Symbol indicates a resistor. No differentiation is made between ch discrete resistors.
- Symbol indicates a capacitor. No differentiation is made between ch discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:
2.2→2R2
0.022→R022

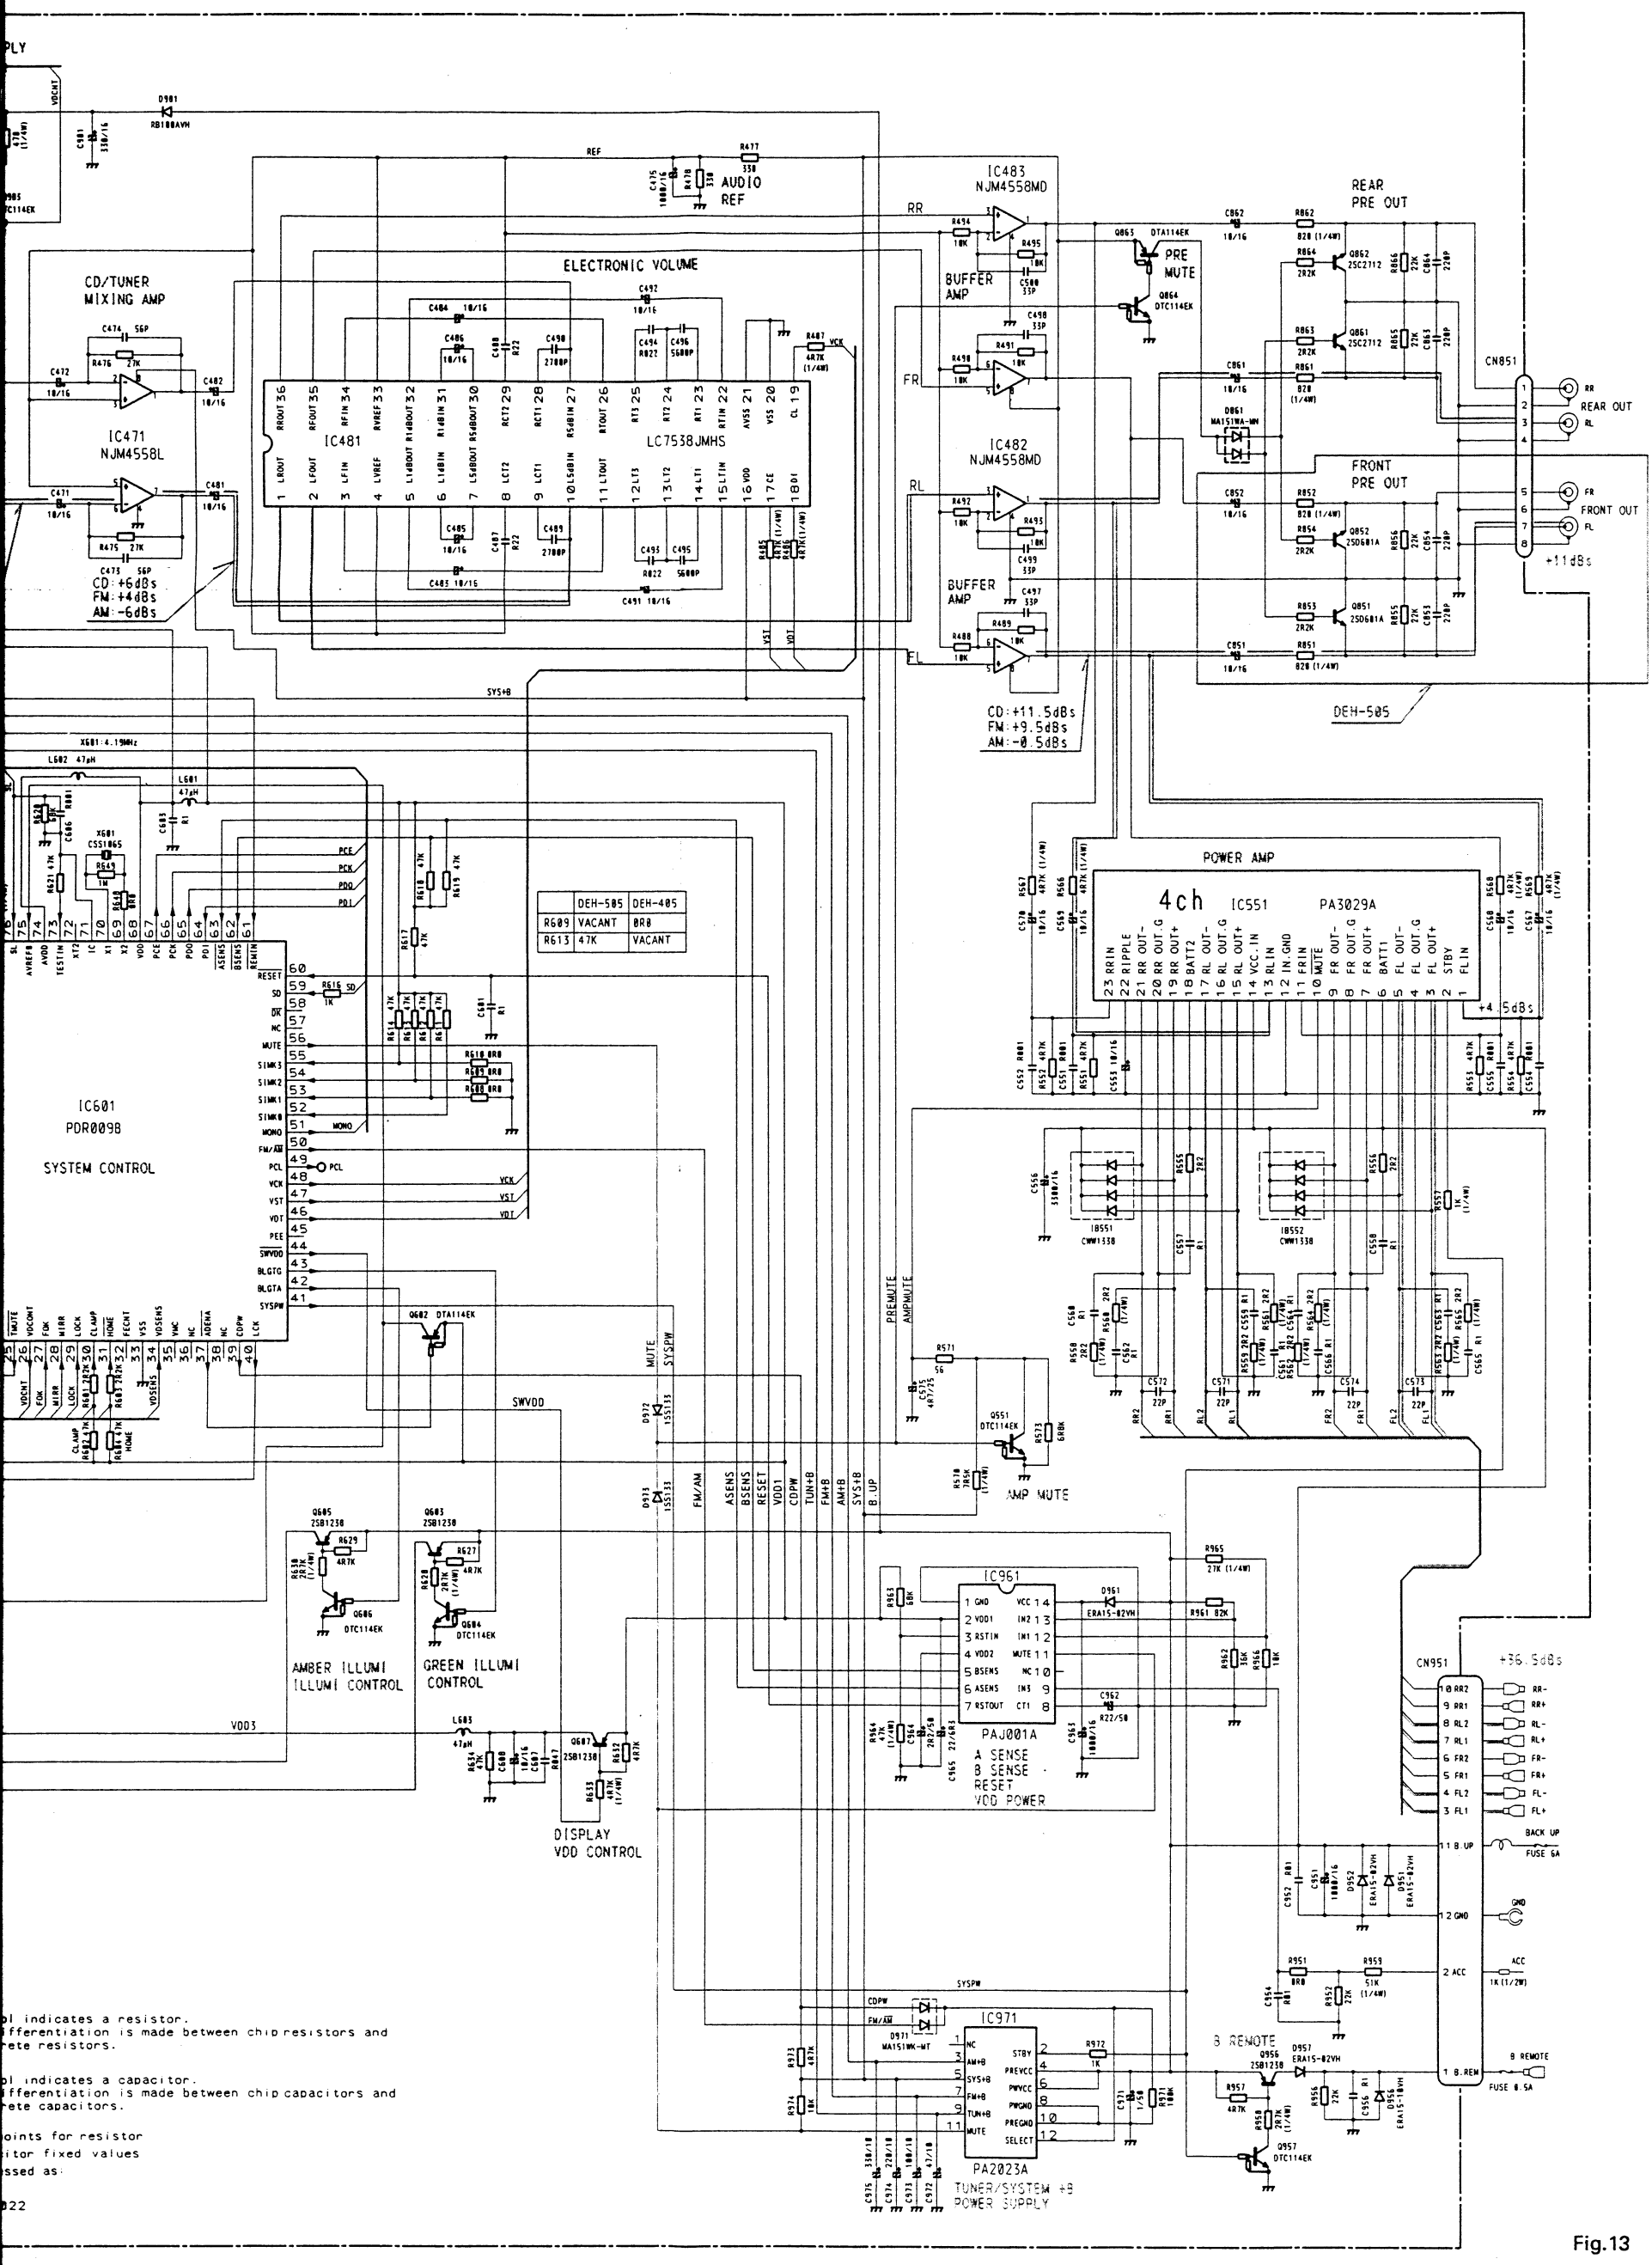

	DEH-505	DEH-405
R609	VACANT	0R0
R613	47K	VACANT

l indicates a resistor.
ifferentiation is made between chip resistors and
ete resistors.

l indicates a capacitor.
ifferentiation is made between chip capacitors and
ete capacitors.

oints for resistor
itor fixed values
ssed as:

022

Fig.13

Pioneer

4.4 CD MECHANISM MODULE

● **Circuit Diagram**

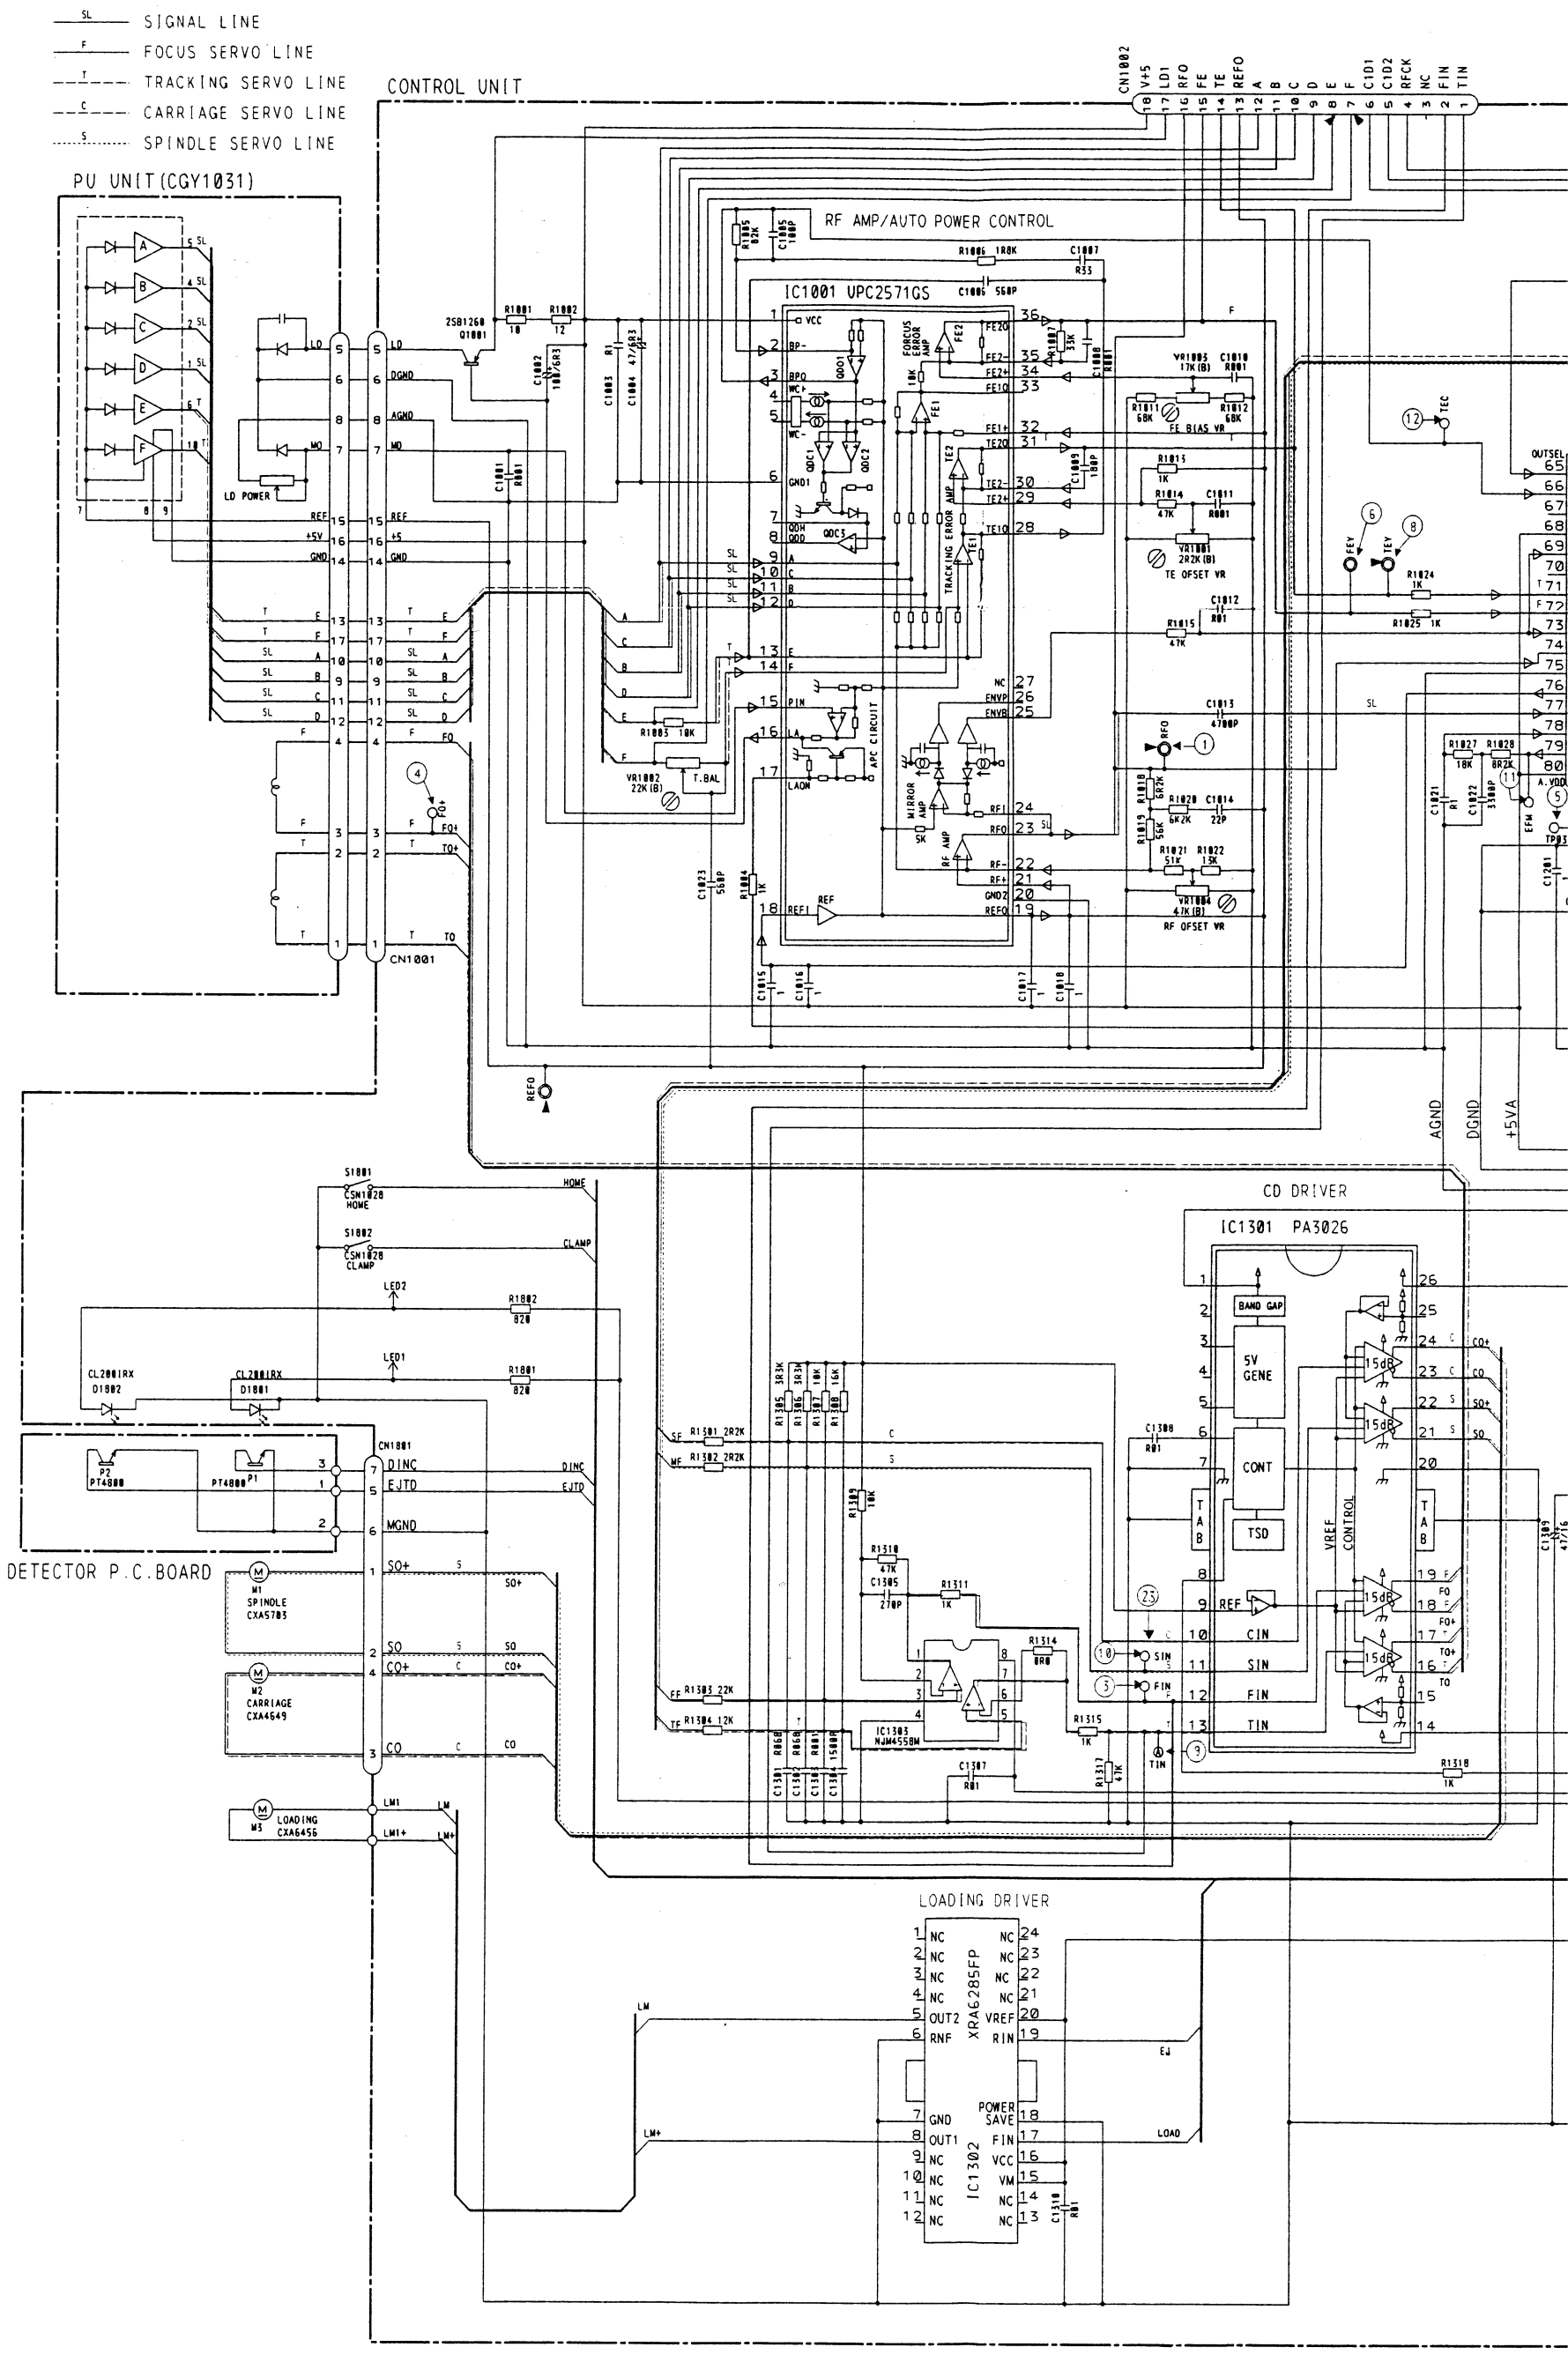

NOTE:

Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:
2.2→2R2
0.022→R022

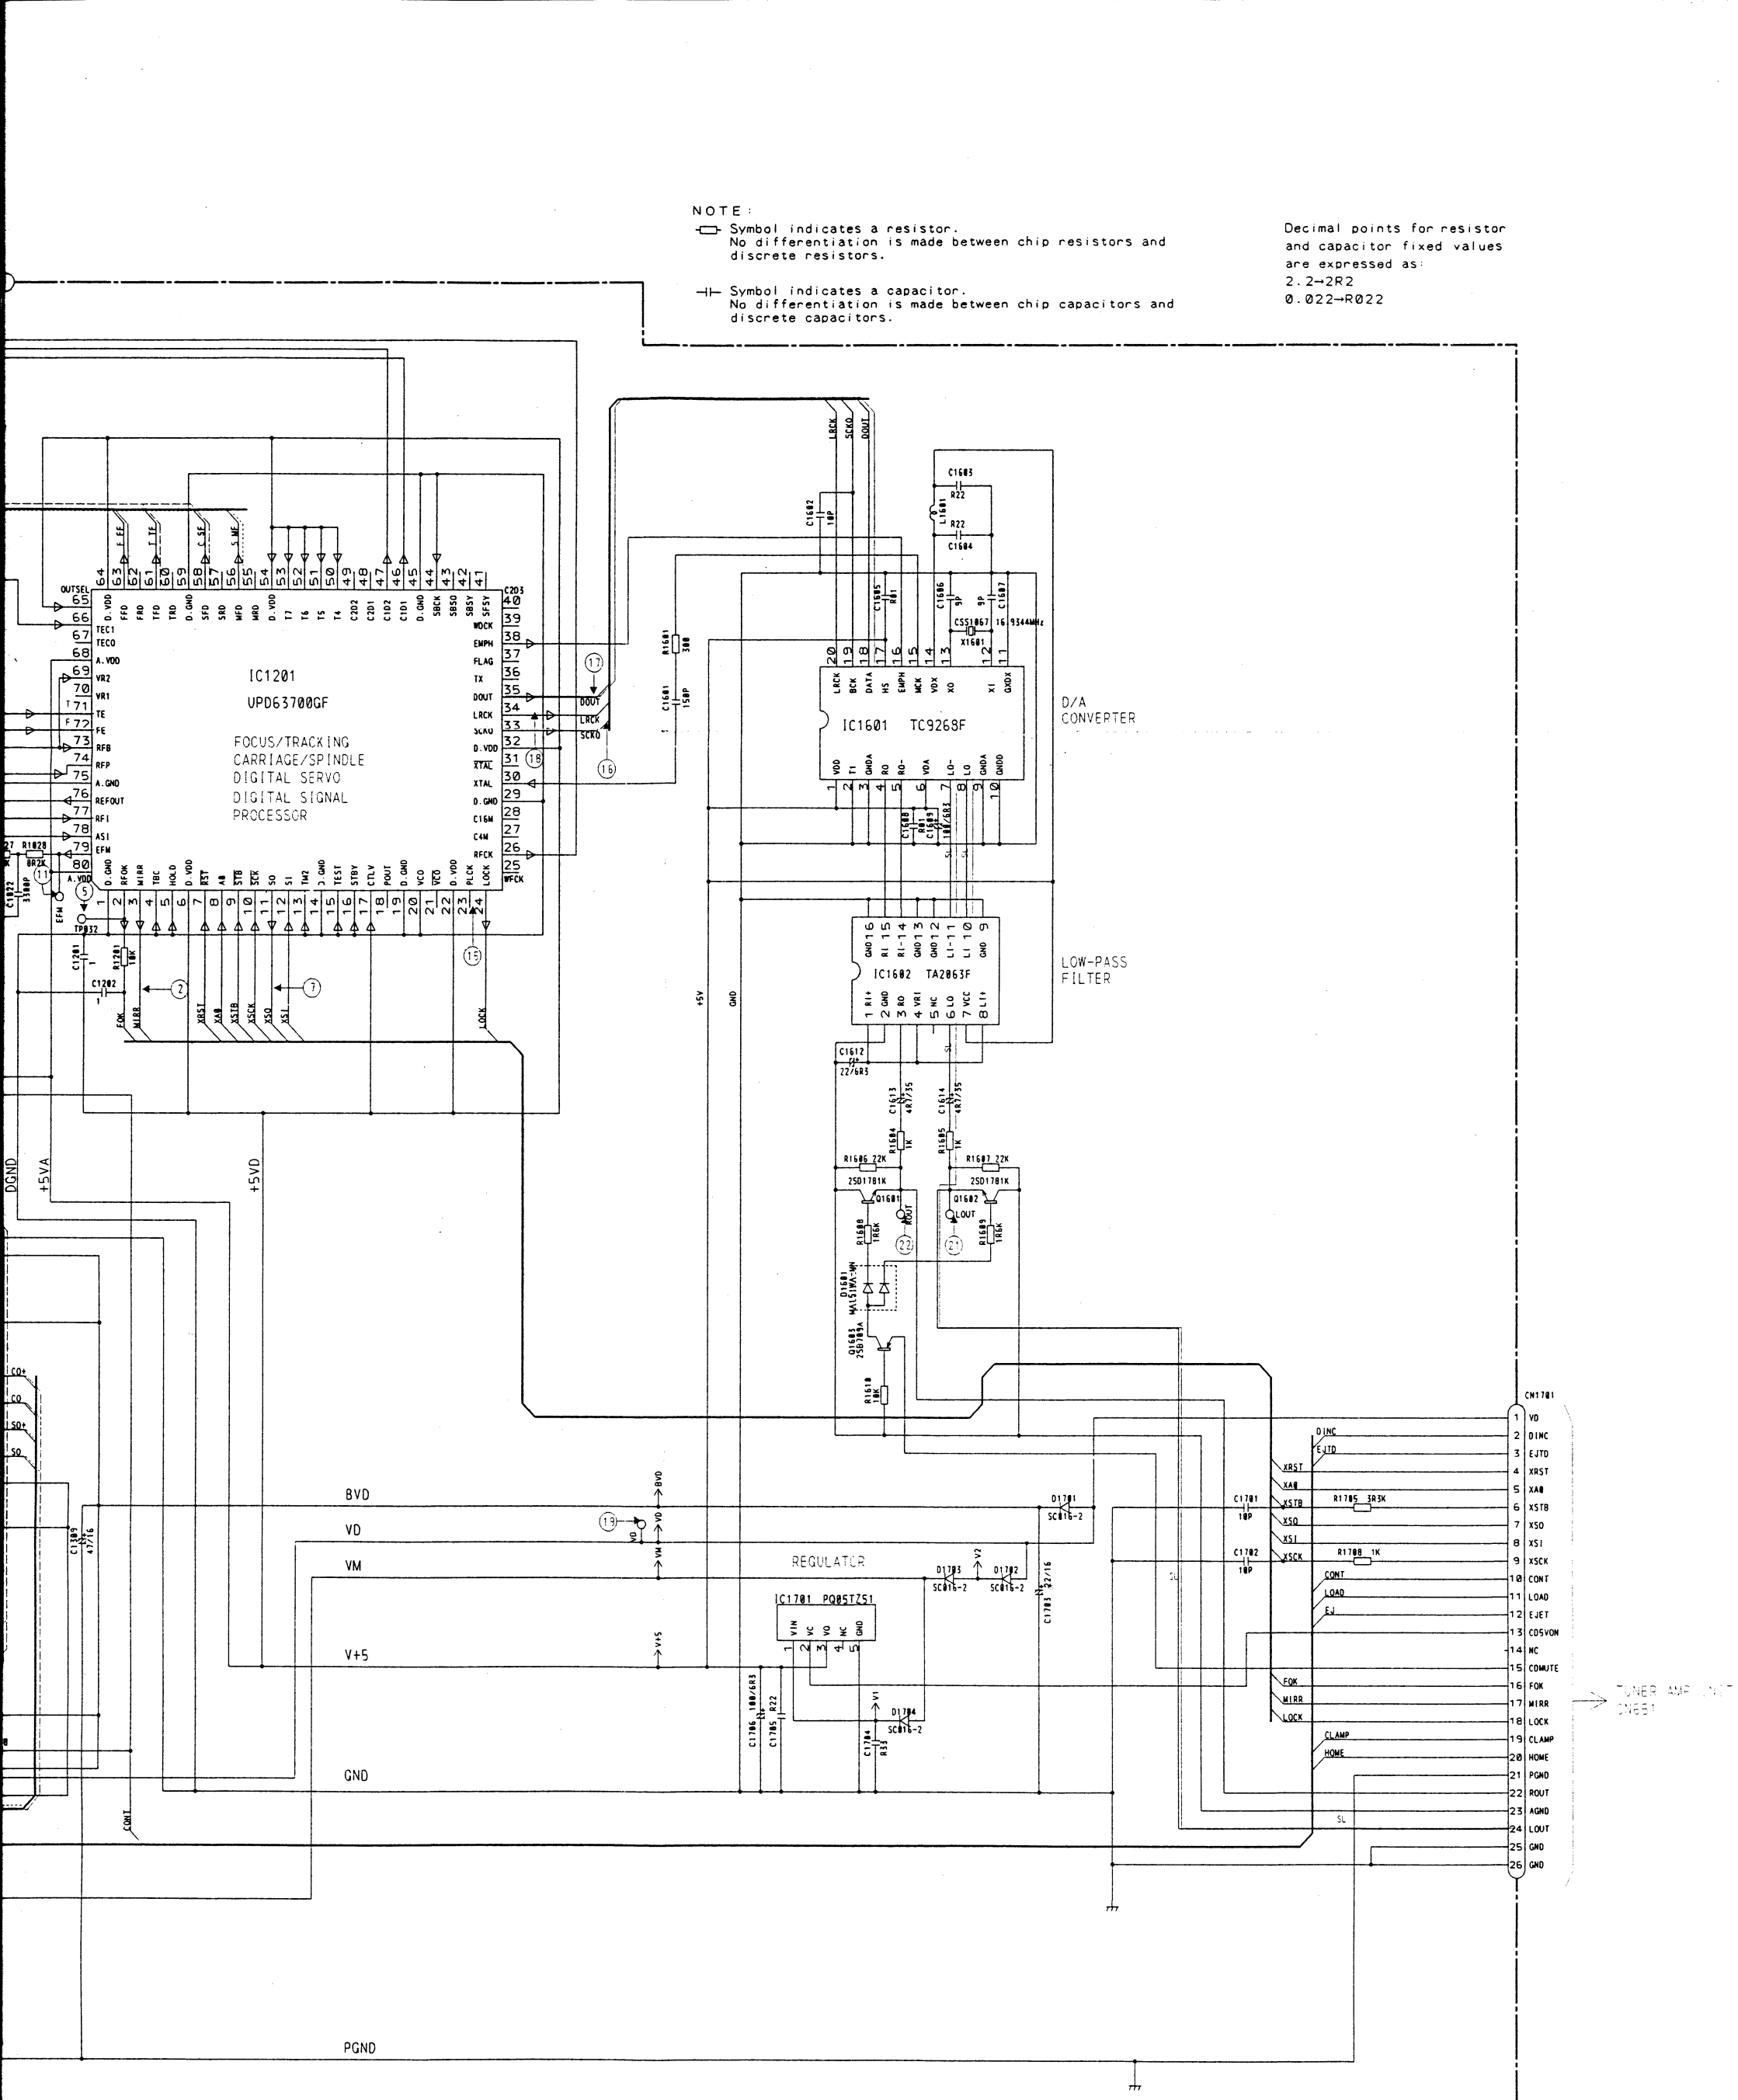

SWITCHES
MISCELLANEOUS
S1801 HOME SWITCH ..... ON-OFF
S1802 CLAMP SWITCH ..... ON-OFF
The underlined indicates the switch position.

Fig.14

PU UNIT(CGY1031)

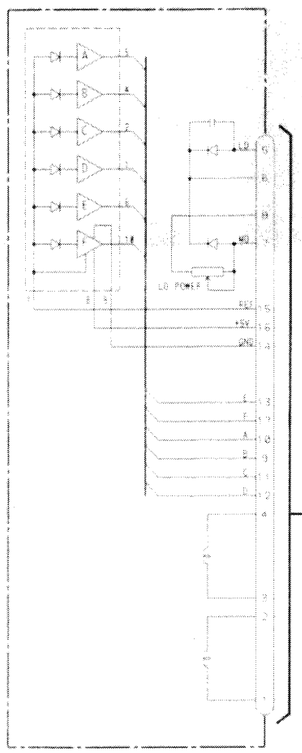

M1
SPINDLE MOTOR

M2
CARRIAGE MOTOR

DETECTOR
P.C.BOARD

CONTROL UNIT
CN1001

DETECTOR P.C.BOARD

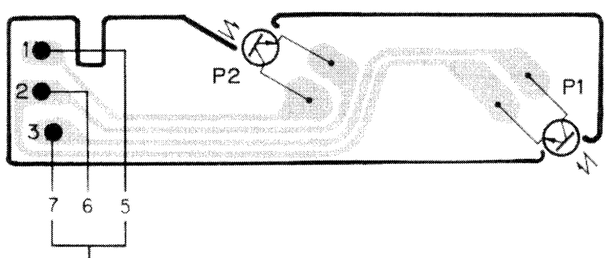

CONTROL UNIT
CN1801

CONTROL UNIT

IC, Q

IC302
IC301 IC303

IC1601
IC1602

Q1601
Q1602 Q1603 IC1201

IC1701 Q1001

ADJ

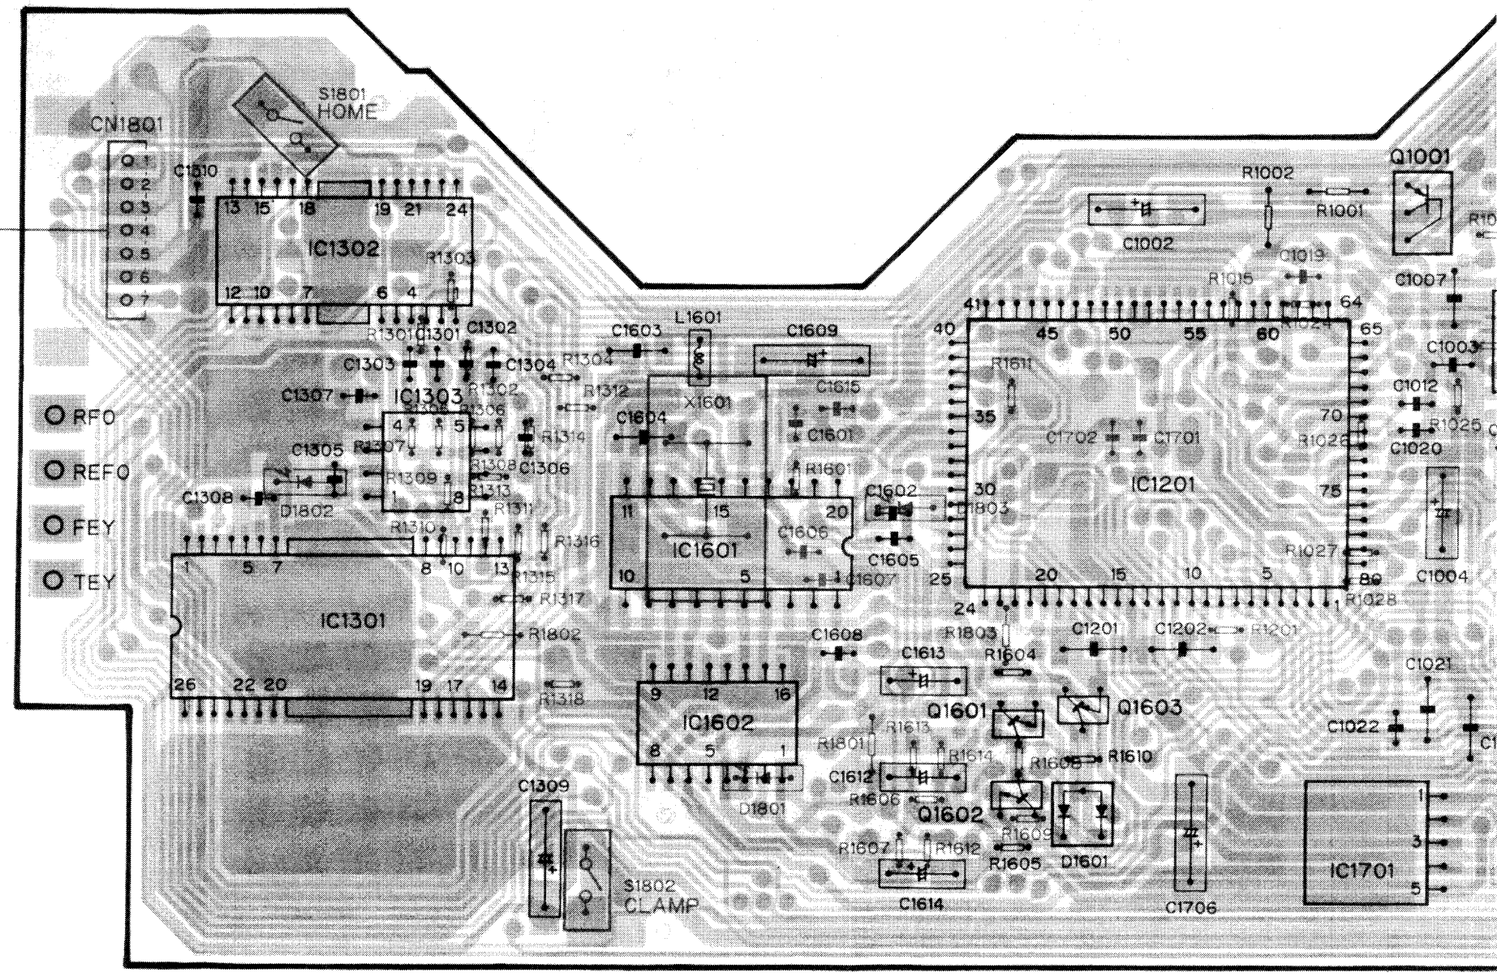

2-31

2-32

CONTROL UNIT

IC, Q	IC302 IC301	IC303	IC1601 IC1602	Q1601 Q1602	Q1603	IC1201	IC1701	Q1001	IC1001
ADJ									VR1003 VR1002 VR1001 VR1004

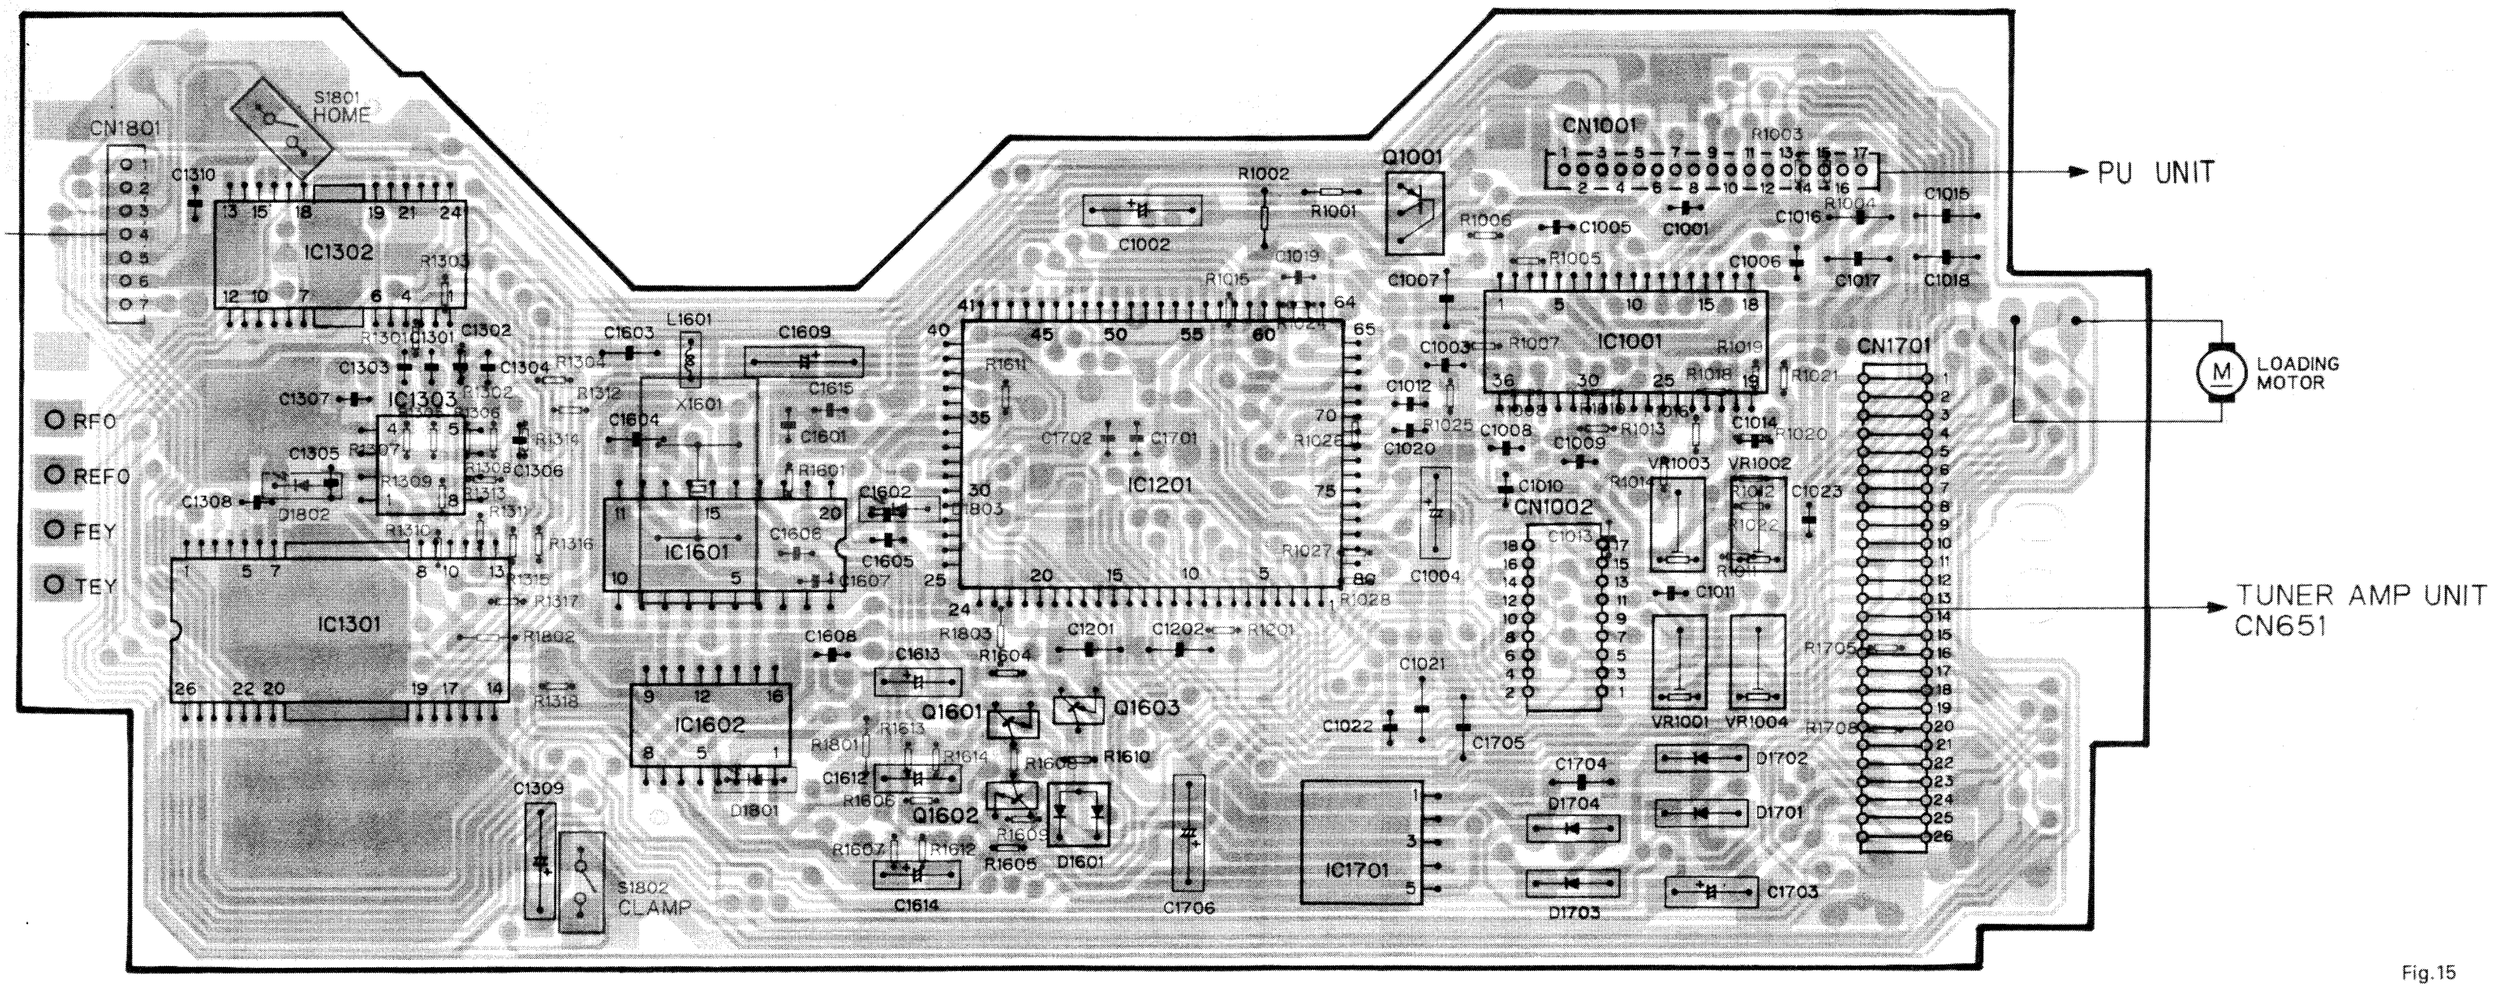

Fig.15

● Waveforms

Note: 1. The encircled numbers denote measuring pointes in the circuit diagram.
2. Reference voltage
REFO: 2.5V

① RFO 0.5V/div. 0.2µs/div.
Normal mode: play

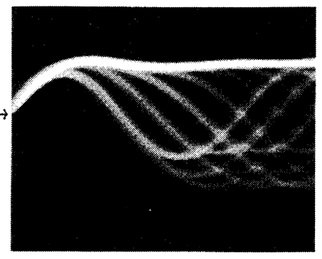

① CH1: RFO 1V/div.
② CH2: MIRR 5V/div. 0.5ms/div.
Test mode: Tracking open

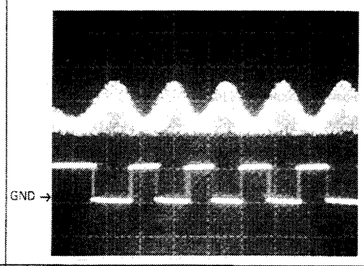

① CH1: RFO 1V/div.
② CH2: MIRR 5V/div. 0.5ms/div.
Normal mode: The defect part passes 800µm.

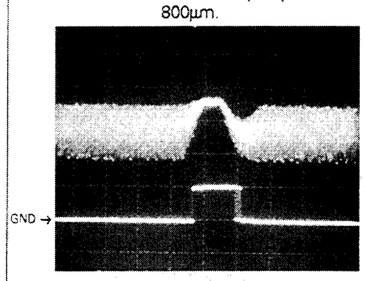

③ CH1: FIN 0.5V/div.
④ CH2: FO+ 2V/div. 0.2s/div.
Test mode: No disc, Focus close

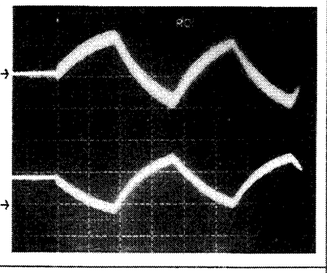

③ CH1: FIN 0.5V/div.
⑤ CH2: FOK 2V/div. 0.2s/div.
Normal mode: Focus close

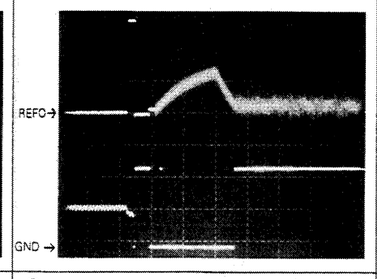

⑥ CH1: FEY 0.5V/div.
⑦ CH2: XSO 2V/div. 1ms/div.
Normal mode: Focus close

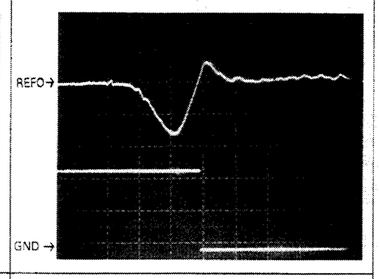

⑧ CH1: TEY 0.5V/div.
⑨ CH2: TIN 0.5V/div. 0.5ms/div.
Test mode: 32 track jump (FWD)

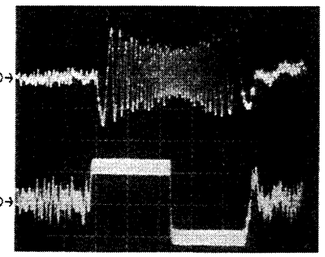

⑧ CH1: TEY 0.5V/div.
⑨ CH2: TIN 0.5V/div. 0.5ms/div.
Test mode: Single jump (FWD)

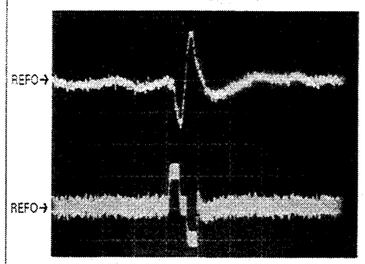

⑧ CH1: TEY 0.5V/div.
⑨ CH2: TIN 0.5V/div. 5ms/div.
Test mode: 100 track jump (FWD)

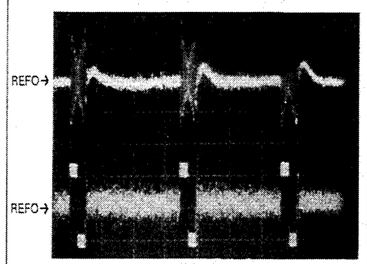

⑥ CH1: FEY 0.2V/div.
③ CH2: FIN 0.5V/div. 20ms/div.
Normal mode: Play

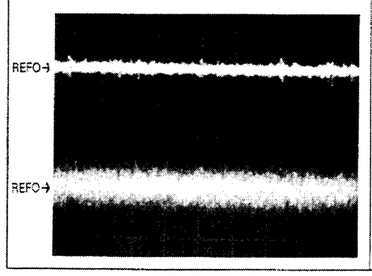

③ CH1: FIN 0.5V/div.
⑩ CH2: SIN 1V/div. 0.5s/div.
Normal mode: Focus close (12cm)

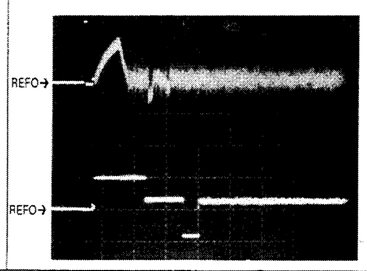

③ CH1: FIN 0.5V/div.
⑩ CH2: SIN 1V/div. 0.5s/div.
Normal mode: Focus close (8cm)

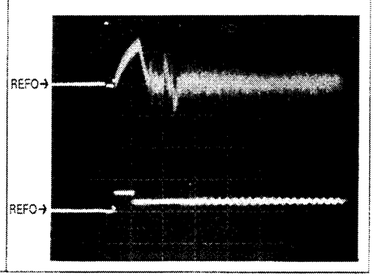

⑧ CH1: TEY 0.5V/div.
⑨ CH2: TIN 0.5V/div. 20ms/div.
Normal mode: Play

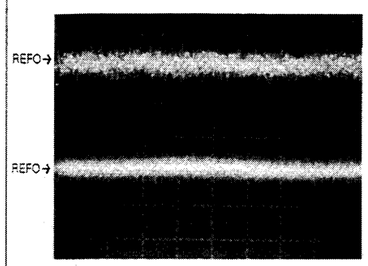

⑧ CH1: TEY 0.5V/div.
㉓ CH2: CIN 0.5V/div. 5ms/div.
Test mode: 100 track jump (FWO)

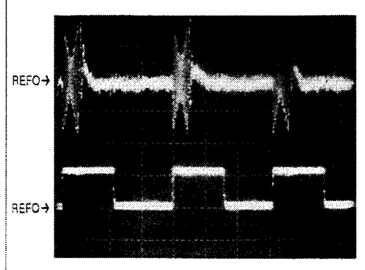

⑩ SIN 0.5V/div. 50ms/div.
Normal mode: 1Play (12cm disc)

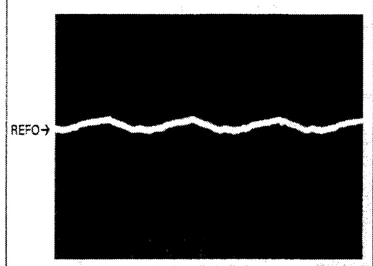

⑩ SIN 0.5V/div. 10ms/div.
Search (12cm disc)

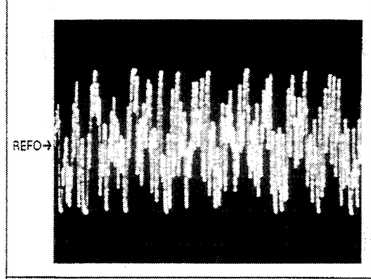

⑪ EFM 2V/div. 5µs/div.
Play

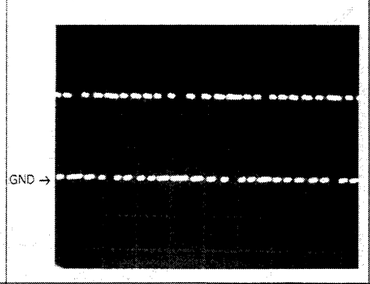

⑧ CH1: TEY 1V/div.
⑫ CH2: TEC 1V/div. 2ms/div.
Test mode: Focus closed
Tracking open

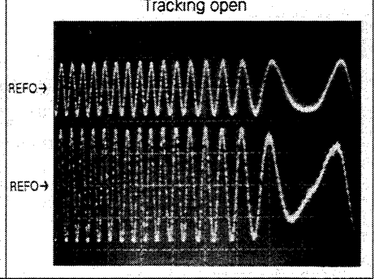

⑧ CH1: TEY 0.5V/div.
⑥ CH2: FEY 0.5V/div. 0.1s/div.
Normal mode: AGC after focus close

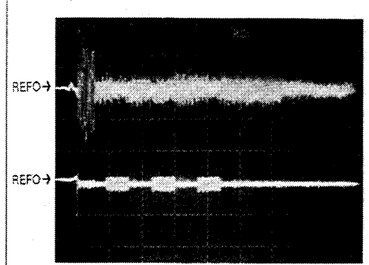

⑮ PLCK 2V/div. 0.5µs/div.
Play

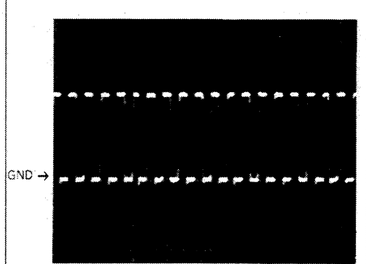

⑯ SCKO 2V/div. 1µs/div.
Play

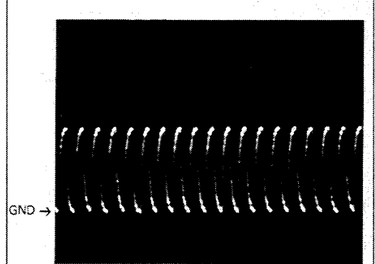

⑰ Dout 2V/div. 10µs/div.
Play

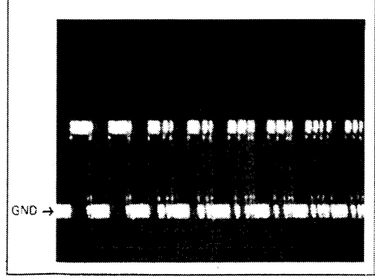

⑱ LRCK 2V/div. 20µs/div.
Play

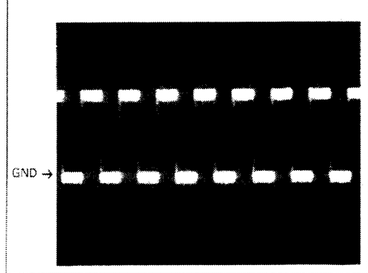

⑲ VD 5V/div. 50ms/div.
Normal mode: No disc

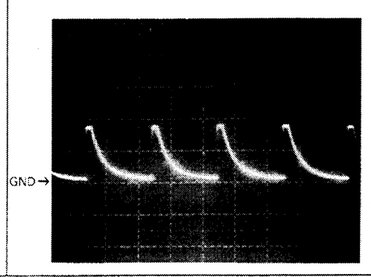

㉒ CH1: R OUT 1
㉑ CH2: L OUT 1
Normal mode: Pla

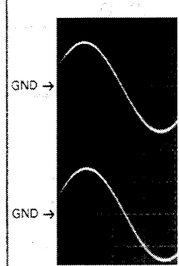

ram.

ns/div.
isses

'div.



'div.

div:

⑧ CH1: TEY 0.5V/div.
⑨ CH2: TIN 0.5V/div. 20ms/div.
Normal mode: Play

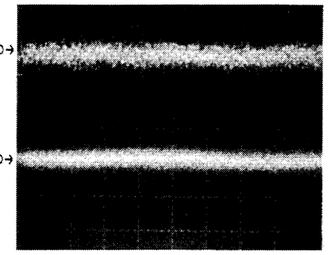

⑧ CH1: TEY 0.5V/div.
㉓ CH2: CIN 0.5V/div. 5ms/div.
Test mode: 100 track jump (FWO)

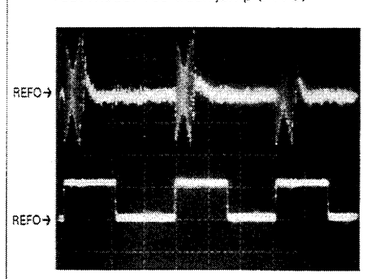

⑩ SIN 0.5V/div. 50ms/div.
Normal mode: Play (12cm disc)

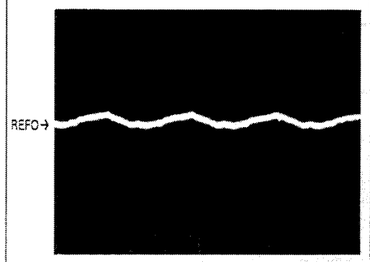

⑩ SIN 0.5V/div. 10ms/div.
Search (12cm disc)

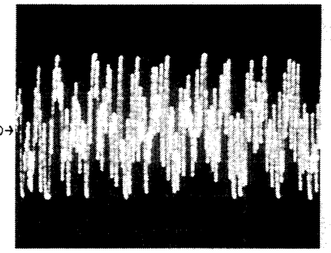

⑪ EFM 2V/div. 5µs/div.
Play

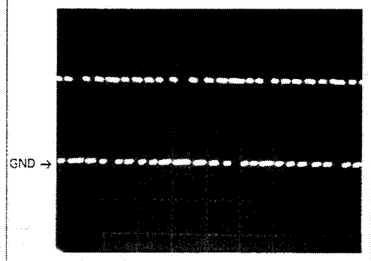

⑧ CH1: TEY 1V/div.
⑫ CH2: TEC 1V/div. 2ms/div.
Test mode: Focus closed
Tracking open

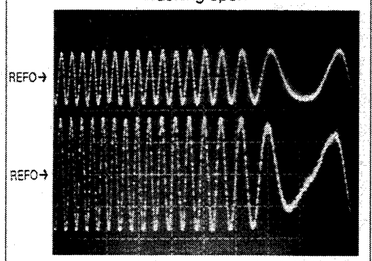

⑧ CH1: TEY 0.5V/div.
⑥ CH2: FEY 0.5V/div. 0.1s/div.
Normal mode: AGC after focus close

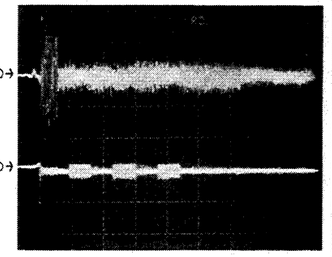

⑮ PLCK 2V/div. 0.5µs/div.
Play

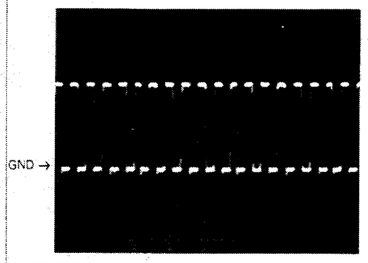

⑯ SCKO 2V/div. 1µs/div.
Play

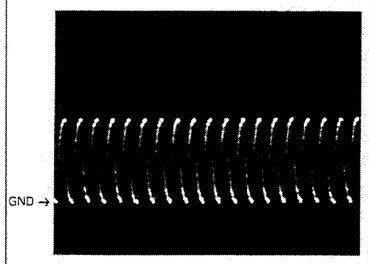

⑰ Dout 2V/div. 10µs/div.
Play

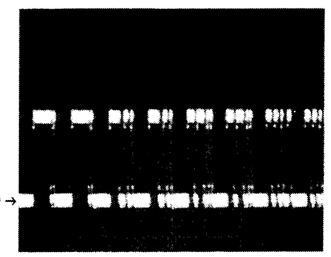

⑱ LRCK 2V/div. 20µs/div.
Play

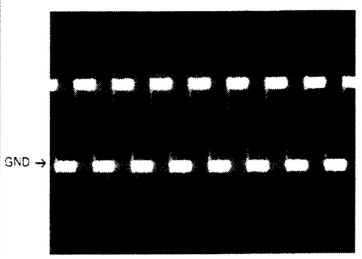

⑲ VD 5V/div. 50ms/div.
Normal mode: No disc

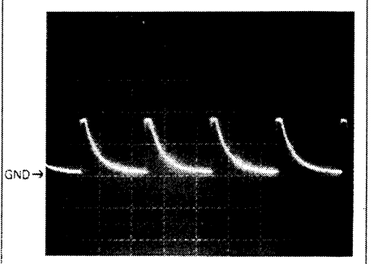

㉒ CH1: R OUT 1V/div.
㉑ CH2: L OUT 1V/div. 0.2ms/div.
Normal mode: Play (1kHz 0dB)

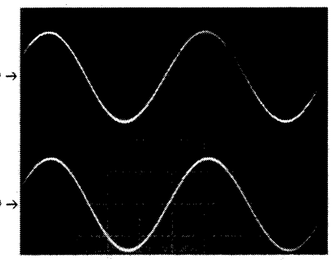

⑥ CH1: FEY 1V/div.
③ CH2: FIN 1V/div. 1ms/div.
Normal mode: During AGC

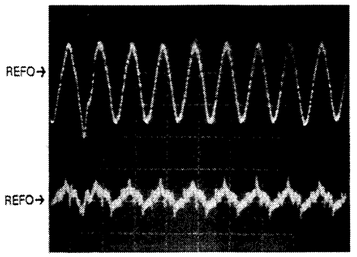

⑧ CH1: TEY 0.2V/div.
⑨ CH2: TIN 0.5V/div. 1ms/div.
Normal mode: During AGC

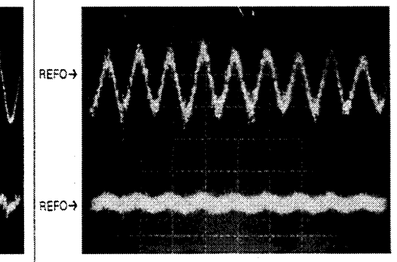

4.5 FM/AM TUNER UNIT

● Circuit Diagram

NOTE

Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.

Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as.
2.2→2R2
0.022→R022

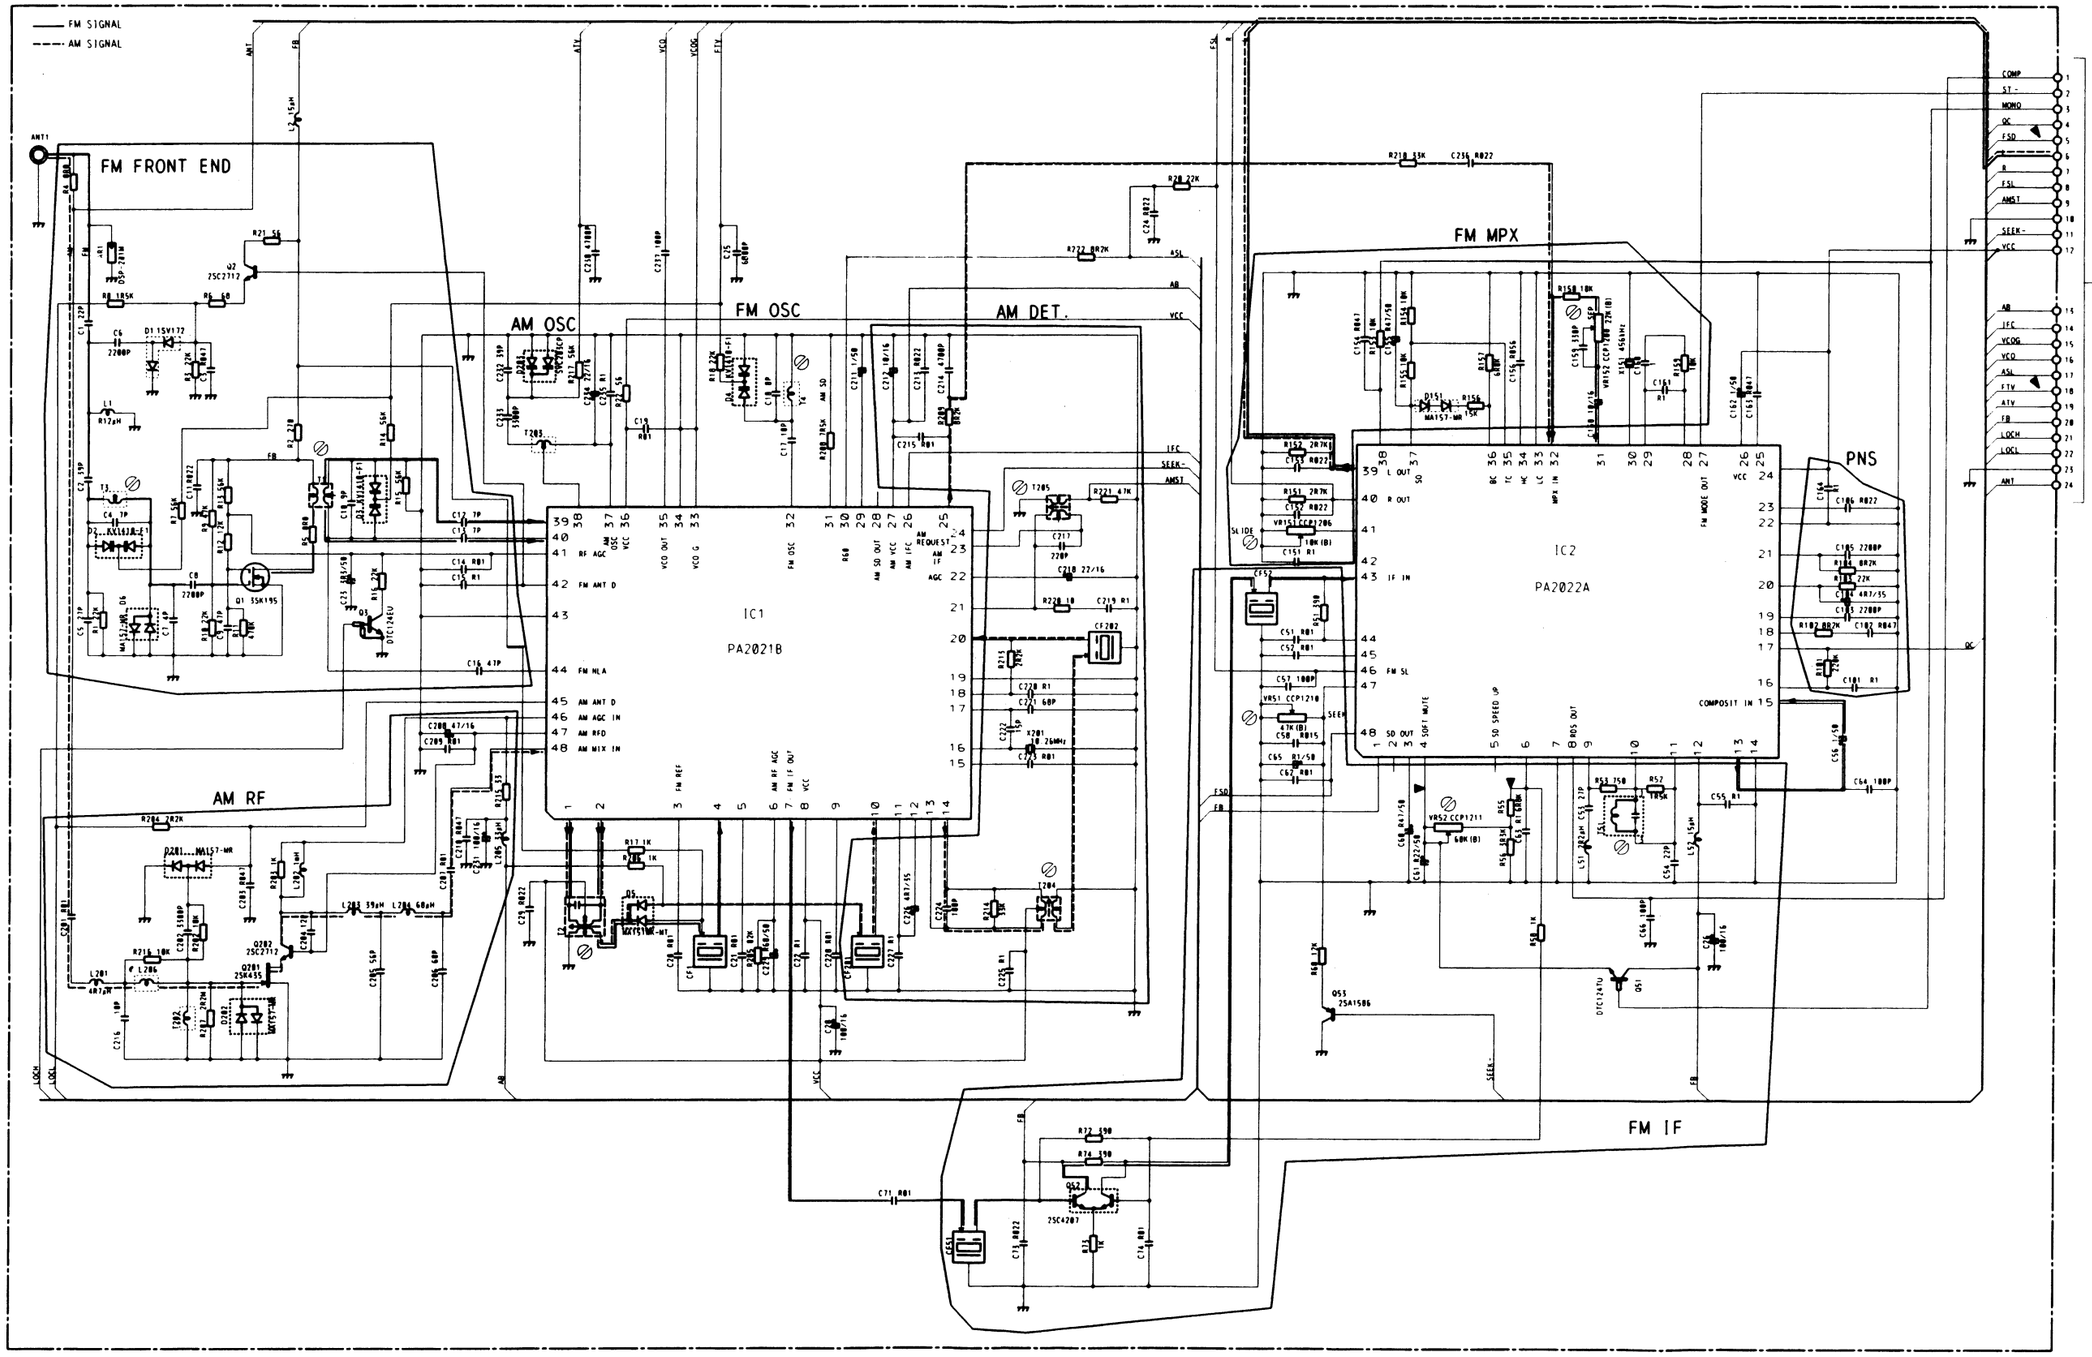

Fig.16

● **Connection Diagram**

IC, Q	Q201	Q3	Q202	Q1			Q2	IC1			Q52		Q53	Q51	IC2	
ADJ	T3				T1	T2					T4	T204 T205 VR51	VR52	VR151	VR152	T51

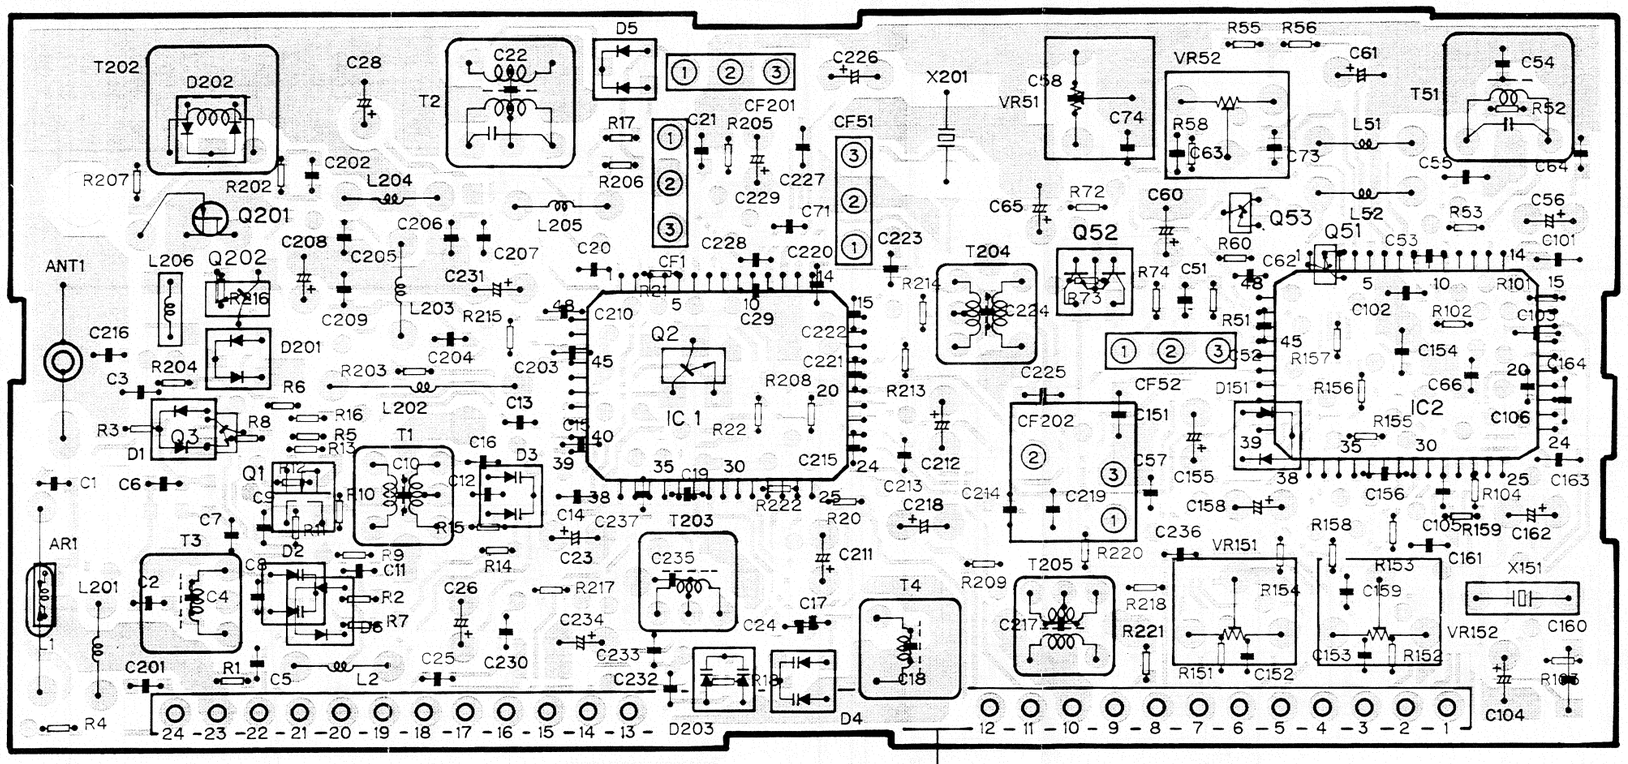

Fig.17

TUNER AMP UNIT

4.6 KEY BOARD UNIT(DEH-605RDS)

● **Circuit Diagram**

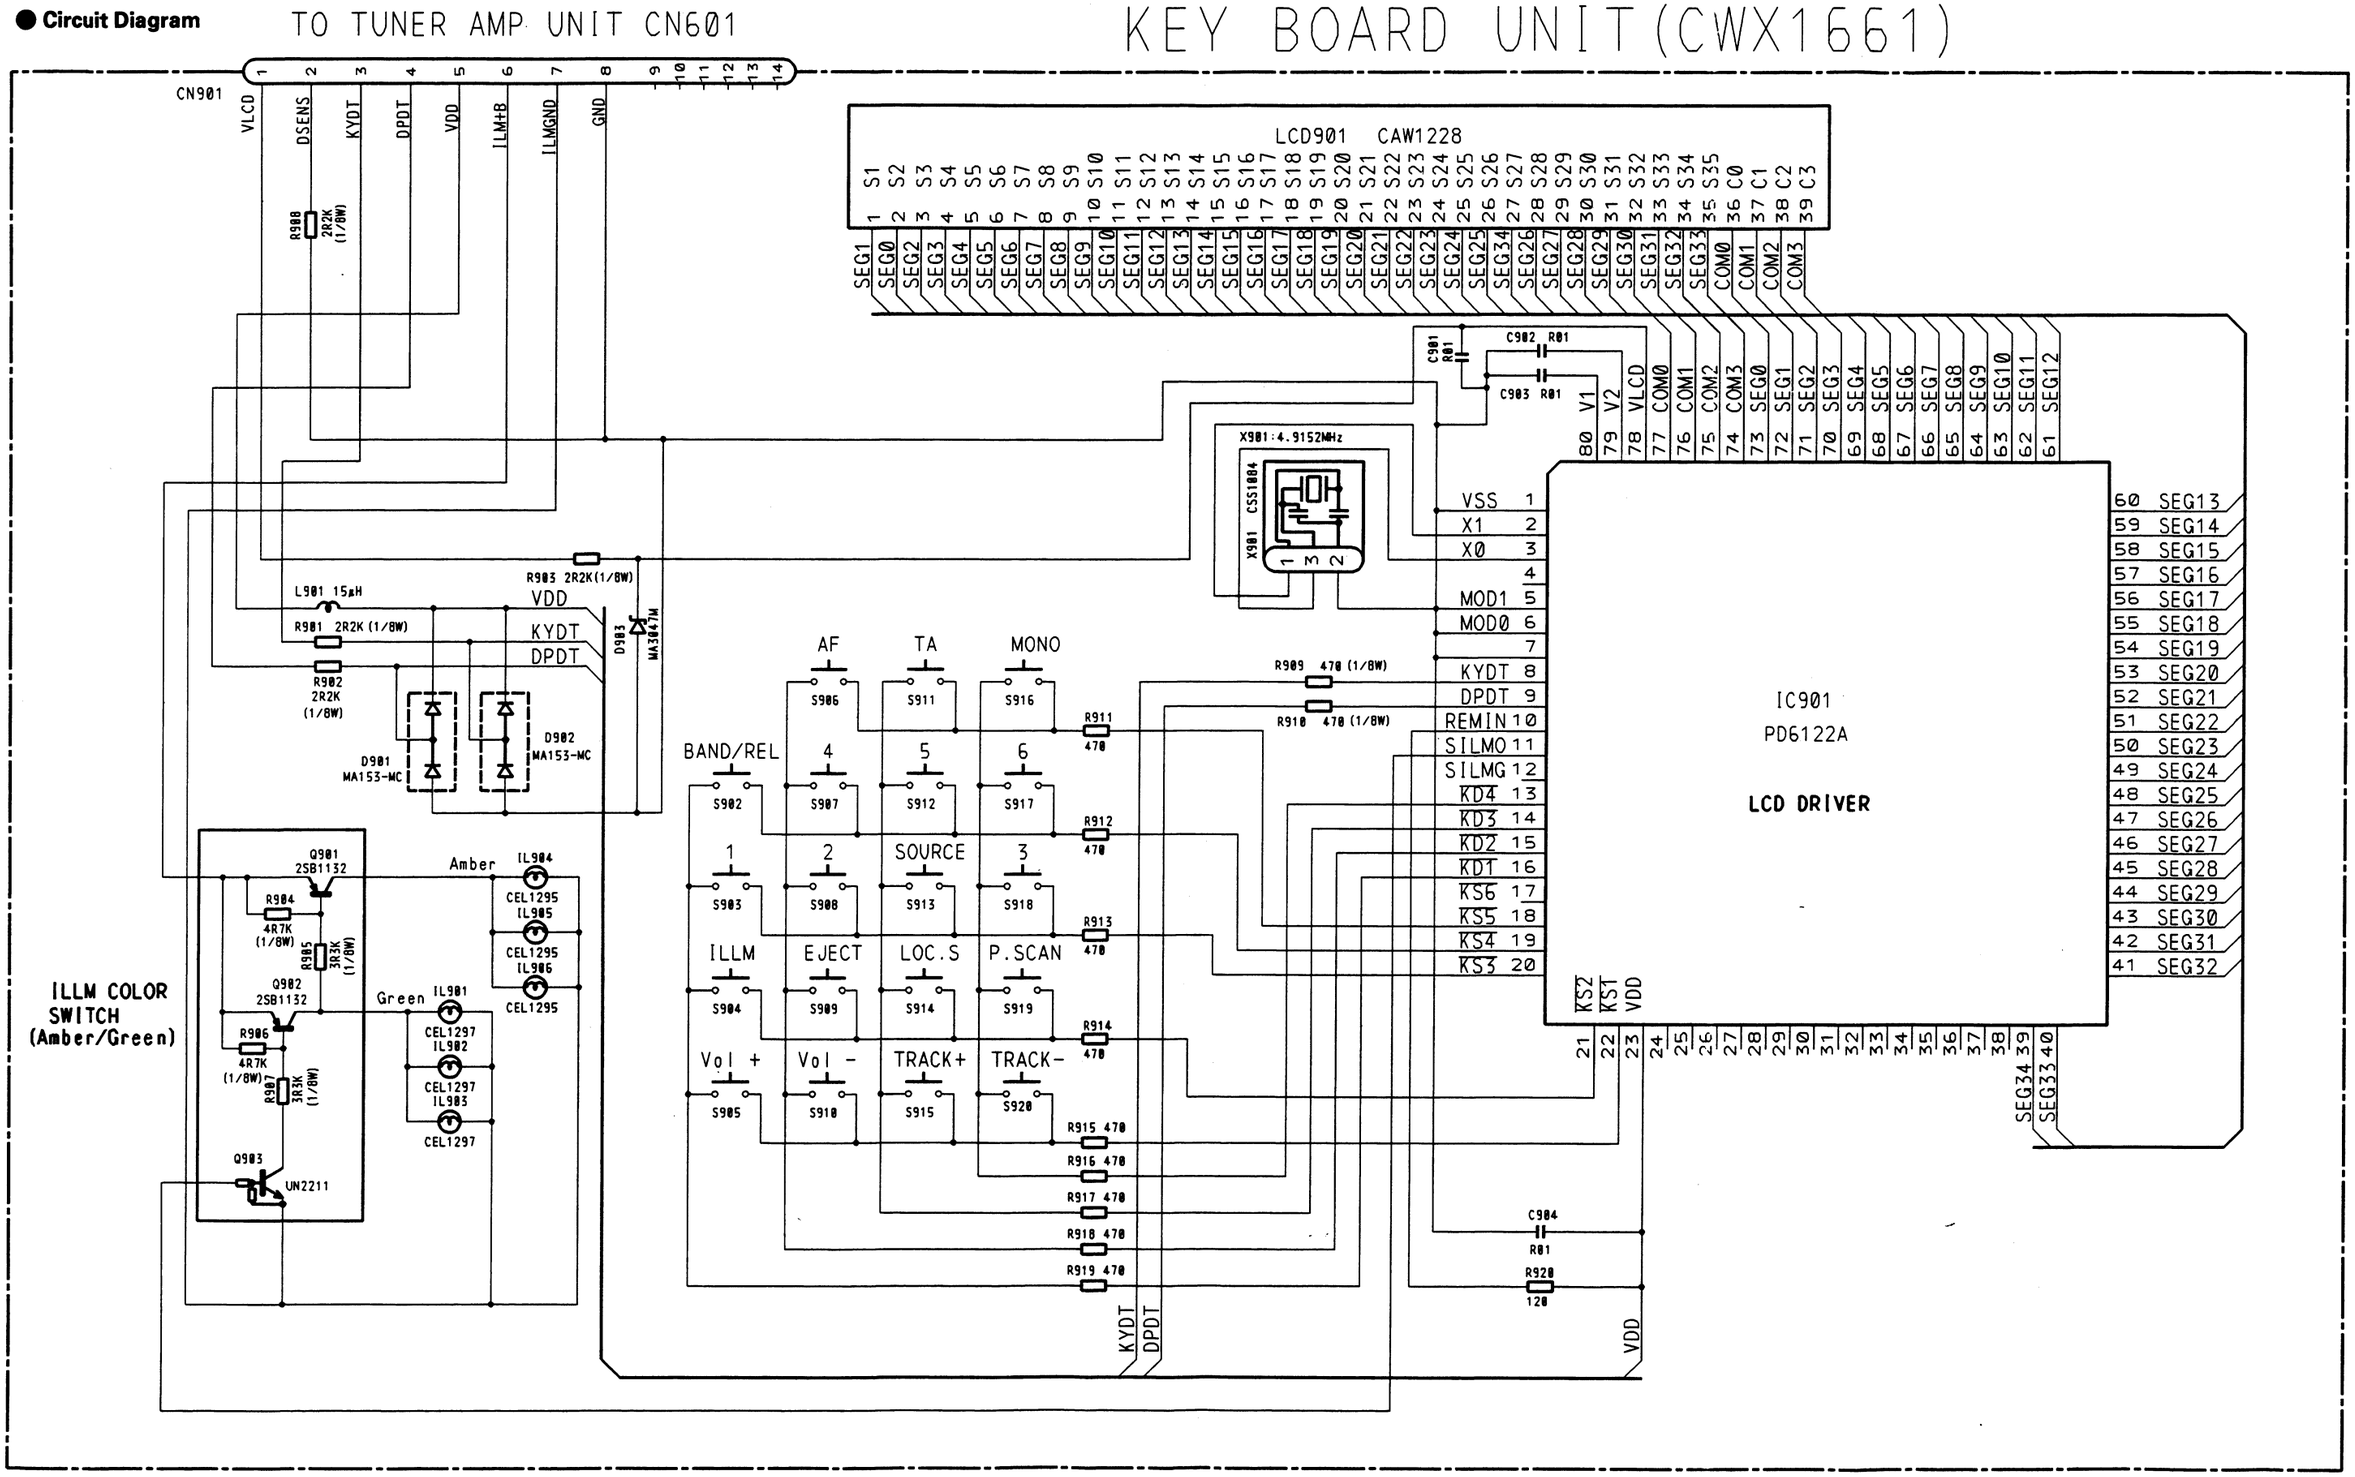

Fig.18

● **Connection Diagram**

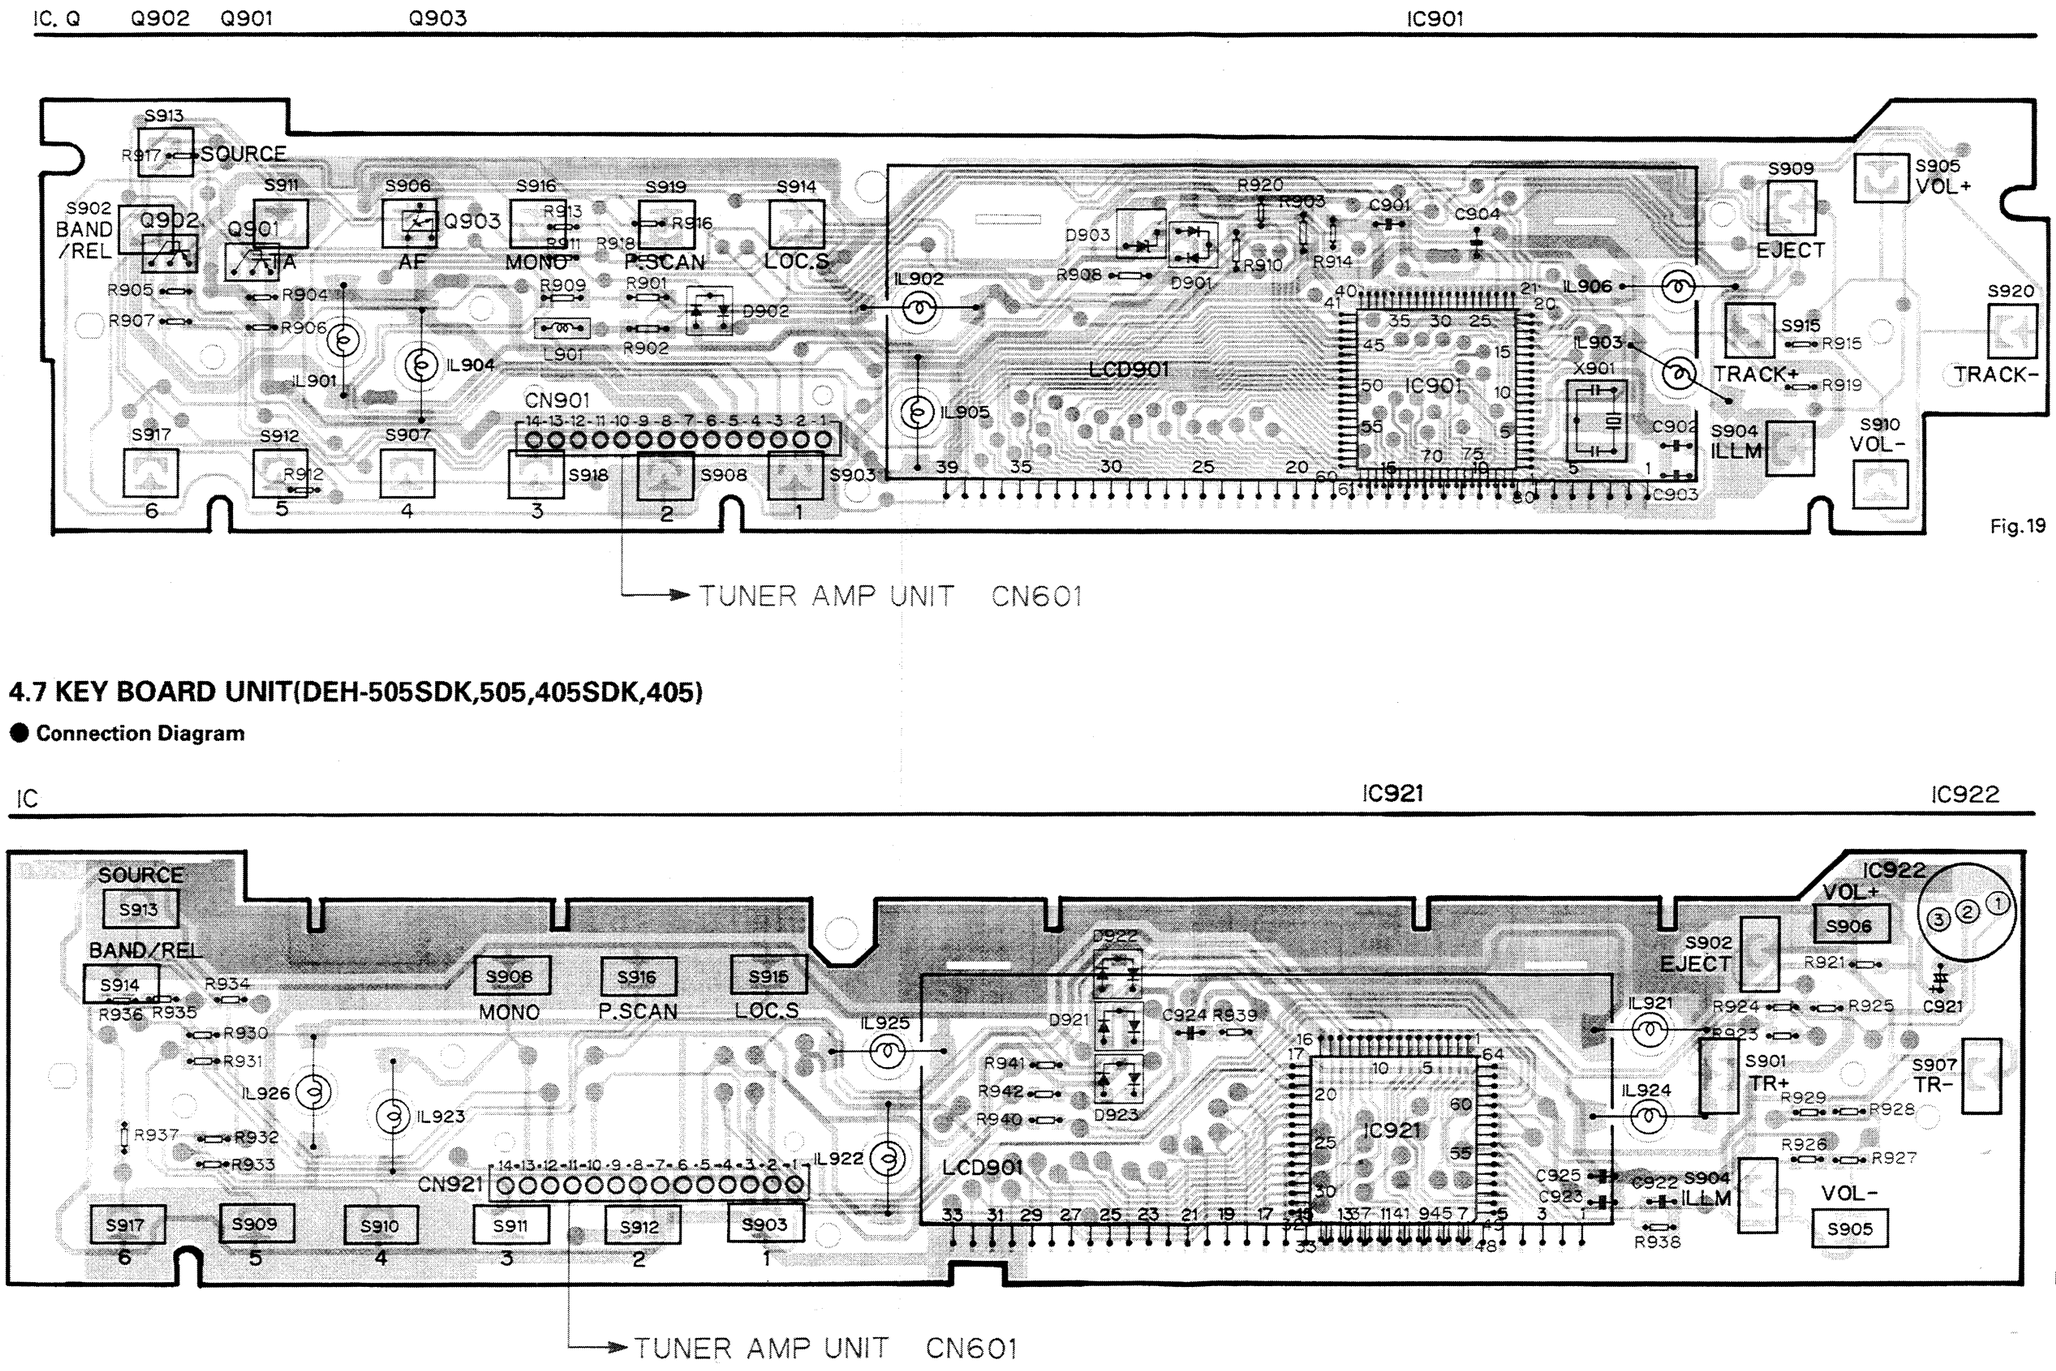

Fig.19

4.7 KEY BOARD UNIT(DEH-505SDK,505,405SDK,405)

● **Connection Diagram**

Fig.20

● **Circuit Diagram**

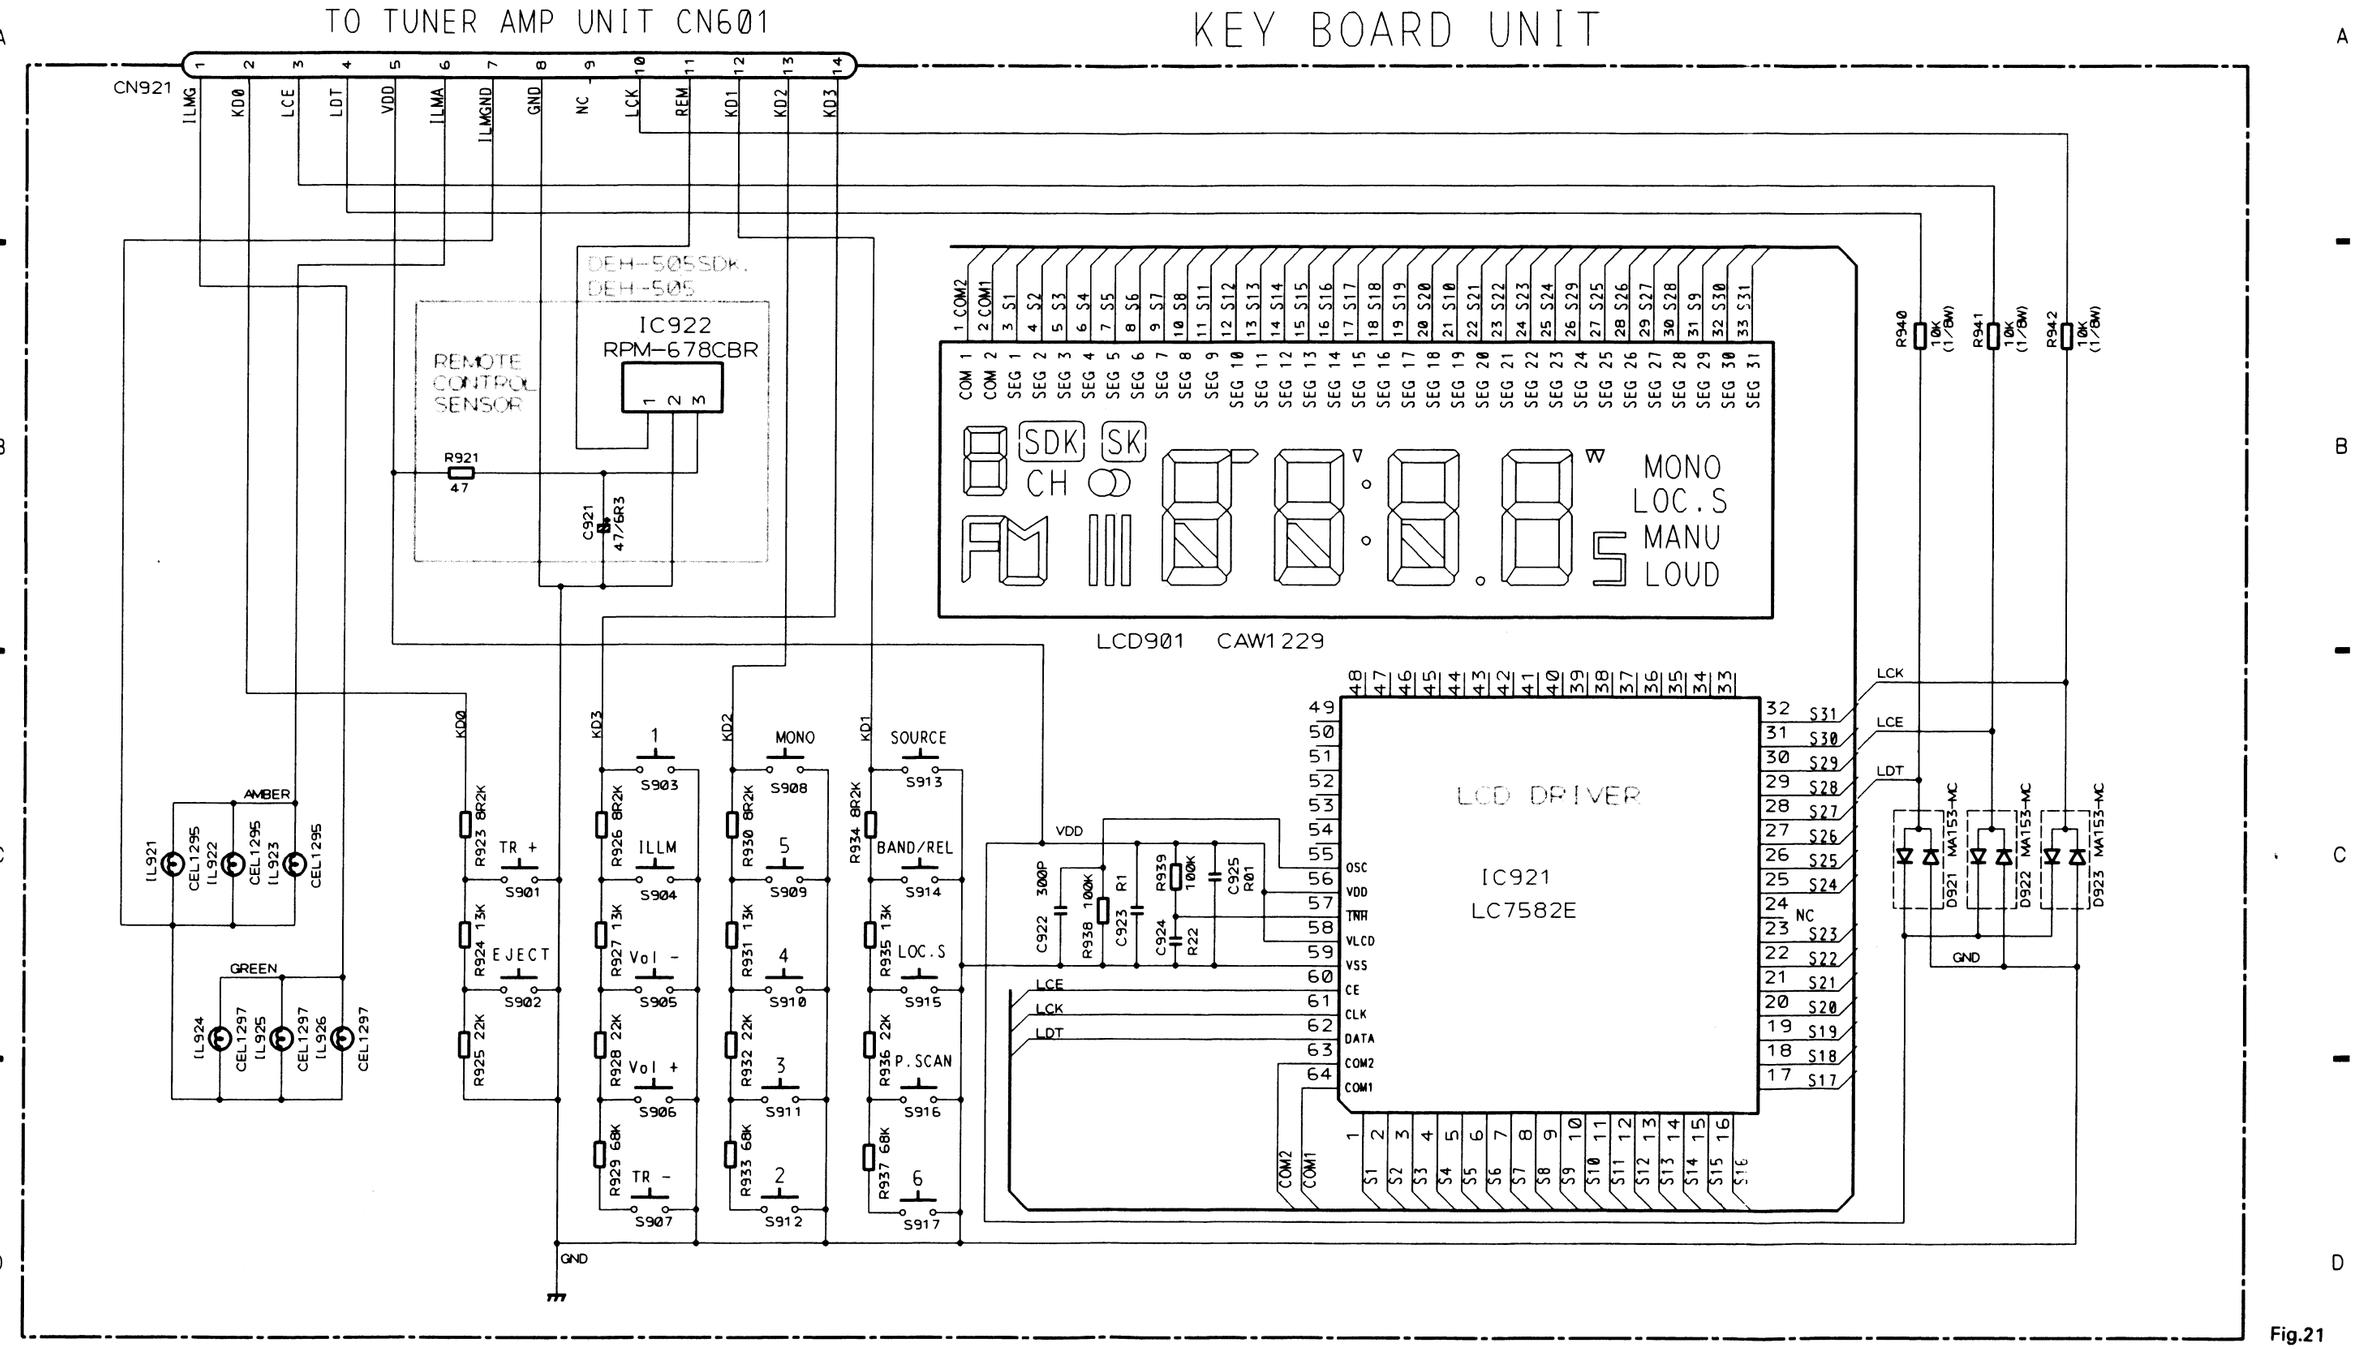

Fig.21